



IMU Orientation	
Theta X	0
Theta Y	0
Theta Z	0

1



IMU Orientation	
Theta X	0
Theta Y	0
Theta Z	90

2



IMU Orientation	
Theta X	0
Theta Y	0
Theta Z	180

3



IMU Orientation	
Theta X	0
Theta Y	0
Theta Z	-90

4



IMU Orientation	
Theta X	180
Theta Y	0
Theta Z	0

5



IMU Orientation	
Theta X	180
Theta Y	0
Theta Z	90

6



IMU Orientation	
Theta X	180
Theta Y	0
Theta Z	180

7



IMU Orientation	
Theta X	180
Theta Y	0
Theta Z	-90

8



IMU Orientation	
Theta X	0
Theta Y	90
Theta Z	0

9



IMU Orientation	
Theta X	-90
Theta Y	90
Theta Z	0

10



IMU Orientation	
Theta X	180
Theta Y	90
Theta Z	0

11



IMU Orientation	
Theta X	90
Theta Y	90
Theta Z	0

12



IMU Orientation	
Theta X	90
Theta Y	0
Theta Z	0

13



IMU Orientation	
Theta X	90
Theta Y	0
Theta Z	90

14



IMU Orientation	
Theta X	90
Theta Y	0
Theta Z	180

15



IMU Orientation	
Theta X	90
Theta Y	0
Theta Z	-90

16



17



18



19




20



21



22

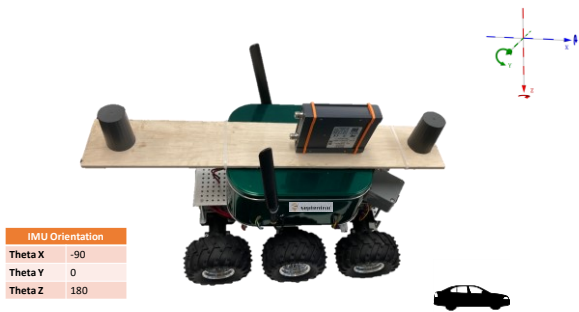

23



24