



AsteRx SB3 Pro+ Reference Guide

Applicable to version 4.10.1 of the Firmware



AsteRx SB3 Pro+ Reference Guide

2021-07-02

Applicable to version 4.10.1 of the Firmware


© Copyright 2000-2021-07-02 Septentrio NV/SA. All rights reserved.

Septentrio NV
Greenhill Campus, Interleuvenlaan 15i
3001 Leuven, Belgium

<http://www.septentrio.com>

Phone: +32 16 300 800

Fax: +32 16 221 640

 @Septentrio

List of Contents

| | |
|---|-----------|
| CONTENTS | 6 |
| SCOPE | 7 |
| LIST OF ACRONYMS | 8 |
| 1 How To... | 12 |
| 1.1 CONNECT TO THE RECEIVER | 13 |
| 1.1.1 Via COM Ports | 13 |
| 1.1.2 Via USB | 13 |
| 1.1.3 Via a TCP/IP Port..... | 13 |
| 1.1.3.1 Ethernet | 14 |
| 1.1.3.2 Ethernet-over-USB | 14 |
| 1.1.3.3 Point-to-Point Link | 14 |
| 1.1.4 Via a Web Browser | 15 |
| 1.1.5 Connection Descriptors | 15 |
| 1.2 UNDERSTAND THE OUTPUT OF THE RECEIVER | 17 |
| 1.2.1 Proprietary Binary Output (SBF)..... | 17 |
| 1.2.2 NMEA | 17 |
| 1.2.3 RTCM and CMR | 18 |
| 1.3 DEFINE AN SBF OUTPUT STREAM | 19 |
| 1.4 SAVE THE CONFIGURATION IN NON-VOLATILE MEMORY | 20 |
| 1.5 CONFIGURE THE RECEIVER IN DGPS/RTK-BASE MODE | 21 |
| 1.5.1 Static Base Station Mode | 21 |
| 1.5.2 RTK Moving Base Station Mode | 22 |
| 1.6 CONFIGURE THE RECEIVER IN DGPS/RTK-ROVER MODE | 24 |
| 1.7 DETERMINE A GNSS-BASED ATTITUDE FROM THE MAIN AND AUX ANTENNAS | 25 |
| 1.8 DETERMINE A GNSS-BASED ATTITUDE FROM A MOVING BASE | 27 |
| 1.9 CONFIGURE THE RECEIVER IN NTRIP SERVER MODE | 29 |
| 1.10 CONFIGURE THE RECEIVER IN NTRIP CLIENT MODE | 30 |
| 1.11 USE THE BUILT-IN NTRIP CASTER | 31 |
| 1.11.1 Broadcasting Local Streams | 31 |
| 1.11.2 Broadcasting Remote Streams | 31 |
| 1.12 CONFIGURE AN IP SERVER PORT | 33 |
| 1.13 CONFIGURE AN IP RECEIVE PORT | 34 |
| 1.14 LOG SBF OR NMEA | 35 |

| | | |
|----------|--|-----------|
| 1.15 | LOG RINEX FILES | 36 |
| 1.16 | DOWNLOAD LOG FILES FROM THE RECEIVER | 37 |
| 1.17 | FTP PUSH LOG FILES..... | 39 |
| 1.18 | COMMUNICATE WITH EXTERNAL EQUIPMENT | 40 |
| 1.19 | GENERATE A "PULSE PER SECOND" SIGNAL | 41 |
| 1.20 | TIME TAG EXTERNAL EVENTS..... | 42 |
| 1.21 | MONITOR THE RF SPECTRUM | 43 |
| 1.22 | MANAGE USERS | 44 |
| 1.23 | UPGRADE THE RECEIVER..... | 45 |
| 1.24 | CHECK THE CAPABILITIES OF YOUR RECEIVER | 46 |
| 1.25 | CHECK OR CHANGE THE PERMISSION FILE..... | 47 |
| 2 | Operation Details | 48 |
| 2.1 | CHANNEL ALLOCATION AND SIGNAL SELECTION | 48 |
| 2.2 | GENERATION OF MEASUREMENTS | 48 |
| 2.2.1 | Pilot vs. Data Component..... | 49 |
| 2.3 | TIME MANAGEMENT | 50 |
| 2.3.1 | Free-Running Clock | 50 |
| 2.3.2 | Clock Steering..... | 51 |
| 2.4 | COMPUTATION OF POSITION, VELOCITY, AND TIME (PVT SOLUTION) | 52 |
| 2.4.1 | SBAS Positioning | 53 |
| 2.4.2 | DGPS Positioning..... | 53 |
| 2.4.3 | RTK Positioning | 53 |
| 2.4.3.1 | Integer Ambiguities (RTK-fixed)..... | 54 |
| 2.4.3.2 | Floating Ambiguities (RTK-float) | 54 |
| 2.4.3.3 | Moving Base..... | 54 |
| 2.4.4 | Transition between PVT Modes | 55 |
| 2.4.5 | PVT Latency | 55 |
| 2.4.6 | Datum Transformation | 55 |
| 2.4.6.1 | Transformation to Regional Datum | 56 |
| 2.4.6.2 | Transformation to Local Datum | 56 |
| 2.5 | ANTENNA EFFECTS | 57 |
| 2.5.1 | Antenna Effects in Rover Mode | 57 |
| 2.5.2 | Antenna Effects in Base Mode..... | 58 |
| 3 | Command Line Reference | 59 |
| 3.1 | COMMAND LINE INTERFACE OUTLINE | 60 |
| 3.1.1 | Command Types | 60 |
| 3.1.2 | Command Line Syntax..... | 60 |
| 3.1.3 | Command Replies..... | 61 |
| 3.1.4 | Command Syntax Tables | 62 |
| 3.2 | COMMAND DEFINITIONS | 65 |
| 3.2.1 | Receiver Administration | 65 |

| | | |
|------------|---|------------|
| 3.2.2 | Standby and Sleep Configuration | 81 |
| 3.2.3 | User Management | 84 |
| 3.2.4 | Tracking and Measurement Generation | 89 |
| 3.2.5 | Frontend and Interference Mitigation | 100 |
| 3.2.6 | Navigation Filter | 105 |
| 3.2.7 | Attitude Determination | 130 |
| 3.2.8 | Datum Definition | 133 |
| 3.2.9 | Transformation to Local Coordinates | 138 |
| 3.2.10 | Timing and Time Management | 142 |
| 3.2.11 | Station Settings | 149 |
| 3.2.12 | General Input/Output | 152 |
| 3.2.13 | NTRIP Settings | 171 |
| 3.2.14 | NMEA Configuration | 178 |
| 3.2.15 | SBF Configuration | 184 |
| 3.2.16 | RTCM v2.x Settings | 191 |
| 3.2.17 | RTCM v3.x Settings | 198 |
| 3.2.18 | CMR v2.0 Settings | 206 |
| 3.2.19 | Internal Disk Logging | 211 |
| 3.2.20 | FTP Push of Log Files | 222 |
| 3.2.21 | MSS/L-Band Configuration | 225 |
| 3.2.22 | Cosmos Configuration | 229 |
| 4 | SBF Reference | 230 |
| 4.1 | SBF OUTLINE | 231 |
| 4.1.1 | SBF Block Header Format | 231 |
| 4.1.2 | SBF Block Names and Numbers | 231 |
| 4.1.3 | SBF Block Time Stamp (TOW and WNC) | 232 |
| 4.1.4 | Sub-blocks | 233 |
| 4.1.5 | Padding Bytes | 233 |
| 4.1.6 | SBF Revision Number | 233 |
| 4.1.7 | Do-Not-Use Value | 233 |
| 4.1.8 | Output Rate | 233 |
| 4.1.9 | Satellite ID and GLONASS Frequency Number | 234 |
| 4.1.10 | Signal Type | 235 |
| 4.1.11 | Channel Numbering | 236 |
| 4.1.12 | Decoding of SBF Blocks | 236 |
| 4.2 | SBF BLOCK DEFINITIONS | 238 |
| 4.2.1 | Measurement Blocks | 238 |
| 4.2.2 | Navigation Page Blocks | 253 |
| 4.2.3 | GPS Decoded Message Blocks | 268 |
| 4.2.4 | GLONASS Decoded Message Blocks | 273 |
| 4.2.5 | Galileo Decoded Message Blocks | 276 |
| 4.2.6 | BeiDou Decoded Message Blocks | 285 |
| 4.2.7 | QZSS Decoded Message Blocks | 290 |
| 4.2.8 | SBAS L1 Decoded Message Blocks | 293 |
| 4.2.9 | GNSS Position, Velocity and Time Blocks | 307 |
| 4.2.10 | GNSS Attitude Blocks | 345 |
| 4.2.11 | Receiver Time Blocks | 349 |
| 4.2.12 | External Event Blocks | 351 |
| 4.2.13 | Differential Correction Blocks | 366 |
| 4.2.14 | L-Band Demodulator Blocks | 371 |

| | |
|--|------------|
| 4.2.15 Status Blocks | 374 |
| 4.2.16 Miscellaneous Blocks | 399 |
| 4.3 SBF CHANGE LOG | 407 |
| A Attitude Angles | 409 |
| B List of SBF Blocks | 411 |
| C List of NMEA Sentences | 415 |
| C.1 PROPRIETARY NMEA SENTENCES | 416 |
| C.1.1 HRP : Heading, Roll, Pitch | 416 |
| C.1.2 RBD : Rover-Base Direction | 417 |
| C.1.3 RBP : Rover-Base Position..... | 417 |
| C.1.4 RBV : Rover-Base Velocity | 418 |
| C.1.5 SNC : NTRIP Client Status..... | 418 |
| C.1.6 TFM : Used RTCM Coordinate Transformation Messages | 419 |
| D List of CMR and RTCM Messages | 420 |
| D.1 CMR MESSAGES | 420 |
| D.2 RTCM v2.X MESSAGES | 420 |
| D.3 RTCM v3.X MESSAGES | 421 |
| INDEX OF COMMANDS | 424 |
| INDEX OF SBF BLOCKS | 433 |

Scope

This document contains reference information about the receiver firmware.

Chapter 1 provides a set of step-by-step "how-to's" to help you find your way around the receiver's commands and logs.

Chapter 2 provides some background on the main algorithms running in the receiver and on the way to configure them.

Chapter 3 contains the complete description of the user command interface.

Chapter 4 contains the complete description of the SBF format.

Typographical Conventions

abc User command name. Clicking a command name redirects to the full command description.

abc Command argument name.

abc Command replies.

SBF block name or SBF field name. Clicking an SBF block name redirects to the full SBF block description.

List of Acronyms

| Abbreviation | Description |
|--------------|--|
| AGC | Automatic Gain Control |
| ARP | Antenna Reference Point |
| ASCII | American Standard Code for Information Interchange |
| ASN.1 | Abstract Syntax Notation One |
| BeiDou | BeiDou Navigation System |
| BGD | Broadcast Group Delay |
| CA | Coarse Acquisition |
| CGGTTS | Common GPS GLONASS Time Transfer Standard |
| CMR | Compact Measurement Record |
| COG | Course Over Ground |
| CPU | Central Processing Unit |
| CRC | Cyclic Redundancy Check |
| DGPS | Differential GPS |
| DHCP | Dynamic Host Configuration Protocol |
| DLL | Dynamically Linked Library |
| DNS | Domain Name Server |
| DOP | Dilution Of Precision |
| DVS | Data Validity Status |
| ECEF | Earth-Centered Earth-Fixed |
| EGNOS | European Geostationary Navigation Overlay System |
| ENU | East-North-Up |
| FTP | File Transfer Protocol |
| GEO | Geostationary Earth Orbiter |

| | |
|---------|---|
| GLONASS | Global Orbiting Navigation Satellite System |
| GNSS | Global Navigation Satellite System |
| GPS | Global Positioning System |
| GST | Galileo System Time |
| GUI | Graphical User Interface |
| HDOP | Horizontal DOP |
| HMI | Hazardously Misleading Information |
| HPCA | HMI Probability Computation Algorithm |
| HPL | Horizontal Protection Level |
| HS | Health Status |
| ICD | Interface Control Document |
| IEEE | Institute of Electrical and Electronics Engineers |
| IERS | International Earth Rotation Service |
| IF | Intermediate Frequency |
| IGP | Ionospheric Grid Point |
| IGS | International GPS Service |
| IMU | Inertial Measurement Unit |
| INS | Inertial Navigation System |
| IODC | Issue of Data - Clock |
| IODE | Issue Of Data Ephemeris |
| IP | Internet Protocol |
| IRNSS | Indian Regional Navigational Satellite System |
| ITRF | International Terrestrial Reference Frame |
| ITRS | International Terrestrial Reference System |
| LBand | L-Band Receiver |
| L1 | L1 carrier |
| L2 | L2 carrier |
| L2C | L2C code |
| LSB | Least Significant Bit |
| MIB | Management Information Base |
| MSB | Most Significant Bits |
| MT | Message Type |
| NATO | North Atlantic Treaty Organisation |

| | |
|---------|--|
| NAV | Navigation |
| NavIC | Navigation with Indian Constellation |
| NAVSTAR | Navigation Satellite Timing And Ranging |
| NMEA | National Marine Electronics Association |
| P | P(Y) code |
| P1 | P1 code |
| P2 | P2 code |
| PC | Phase Center |
| PDOP | Position DOP |
| PLL | Phase Locked Loop |
| PPP | Precise Point Positioning |
| PPS | Pulse Per Second |
| PRC | Pseudorange Correction |
| PRN | Pseudo Random Noise |
| PVT | Position, Velocity and Time |
| QZSS | Quasi-Zenith Satellite System |
| RAIM | Receiver Autonomous Integrity Monitoring |
| RINEX | Receiver Independent Exchange Format |
| RTCA | Radio Technical Commission for Aeronautics |
| RTCM | Radio Technical Commission for Maritime Services |
| RTK | Real-Time Kinematic |
| SBAS | Space-Based Augmentation System |
| SBF | Septentrio Binary Format |
| SIS | Signal In Space |
| SISA | Signal in Space Accuracy |
| SNMP | Simple Network Management Protocol |
| SV | Space Vehicle |
| SVID | Space Vehicle ID |
| TDOP | Time DOP |
| TOW | Time Of Week |
| UDRE | User Differential Range Error |
| UERE | User Equivalent Range Error |
| UHF | Ultra High Frequency |

| | |
|-------|-------------------------------|
| URA | User Range Accuracy |
| USB | Universal Serial Bus |
| UTC | Coordinated Universal Time |
| VDOP | Vertical DOP |
| VPL | Vertical Protection Level |
| VRS | Virtual Reference Station |
| WAAS | Wide Area Augmentation System |
| WGS84 | World Geodetic System 1984 |
| WN | Week Number |
| WNc | Week number |
| XERL | External Reliability Levels |
| XOR | Exclusive OR |

Chapter 1

How To...

This chapter contains step-by-step instructions to help you with typical tasks. It will help you to familiarize yourself with the receiver commands without going into too much detail.

For a comprehensive description of the command set, refer to chapter 3. You can also click on any command or SBF block name in this manual to be redirected to the full description of that command or SBF block.

You can enter user commands in many different ways:

- Commands can be accessed graphically through menus in RxControl and in the web interface (see section 1.1.4).
- Using the Data Link program provided in the RxTools suite (or any suitable terminal emulation program), you can enter commands manually through one of the receiver input ports (see section 1.1). In this chapter, user commands are referred to by their full name for readability. When typing the command, you can always use the short mnemonic equivalent to save typing effort. For instance, instead of typing **setCOMSettings**, you can type **scs**.
- You can type commands or mnemonics in the console window of RxControl (menu *Tools > Expert Console*) or of the web interface (menu *Admin > Expert Console*).



Depending on the capabilities of your particular receiver (see section 1.24), some of the user commands, SBF blocks or communication interfaces described in this document may not be supported.

1.1 Connect to the Receiver

1.1.1 Via COM Ports

A simple way to communicate with the receiver is to connect one of its COM-ports to a COM-port of your host computer. You can use the provided COM cable for this purpose. The default COM-port settings are:

| Parameter | Value |
|--------------|--------|
| baud rate | 115200 |
| data bits | 8 |
| parity | no |
| stop bits | 1 |
| flow control | none |

The baud rate can be modified at any time by using the **setCOMSettings** command.

RxControl and Data Link can communicate with the receiver over a COM-port connection: select *Serial Connection* option when opening the connection to the receiver.

1.1.2 Via USB

The Windows USB driver provided with your receiver emulates two virtual serial ports, which can be used as standard COM ports to access the receiver. The Windows USB driver can be installed through the RxTools software suite. On Linux, the standard Linux CDC-ACM driver is suitable. Most terminal emulation programs will make no distinction between virtual and native COM ports. Note that the port settings (baud rate, etc) for virtual serial ports are not relevant, and can be left in their default configuration in the terminal emulation program.

When connecting the USB cable to a Windows PC, a new drive appears in the file manager. This drive contains an installer for the USB driver. Running this installer is not needed if you have already installed the RxTools suite. A second drive is created when the receiver is configured as a USB mass-storage device, as explained in section 1.16.

1.1.3 Via a TCP/IP Port

TCP/IP connections allow remote control of the receiver and are potentially much faster than serial connections. Up to eight independent TCP/IP connections can be opened in parallel through port 28784 (the port number can be changed with the command **setIPPortSettings**).

RxControl and Data Link can communicate with remote receivers over a TCP/IP connection: select *TCP/IP Connection* option when opening the connection to the receiver.

TCP/IP connections can be made over the following interfaces.

1.1.3.1 Ethernet

Over the Ethernet interface, the receiver can be configured for dynamic or fixed IP address allocation. The default is dynamic address allocation, using the DHCP protocol. The host-name is `asterxsb3-xxxxxxx`, where `xxxxxxx` consists of the last seven digits of the serial number of the receiver.

Dynamic IP address allocation requires the availability of a DHCP server in your local network. In the absence of a DHCP server, or when a fixed IP address is desirable, it is possible to disable the DHCP client and use a fixed address. This is done using the **setIPSettings** command.

1.1.3.2 Ethernet-over-USB

When an USB cable is connected, the receiver supports Ethernet-over-USB. The IP address allocated to the Ethernet-over-USB interface is `192.168.3.1`. That address cannot be changed, so that this feature is only to be used when a single receiver is connected to your computer.

By default, the receiver is not allowed to access the Internet over USB. This can be changed with the **setUSBInternetAccess** command. Note that this requires allowing Internet sharing on your computer. The procedure to do so depends on your operating system. For example, on Windows, it involves enabling *"Allow other network users to connect through this computer's Internet connection."* in the properties of the adapter providing Internet access. When Internet sharing is enabled, the receiver gets its IP address from a DHCP server on your computer. Depending on your computer's routing table, it may be that it is not reachable anymore at `192.168.3.1`.

1.1.3.3 Point-to-Point Link

The receiver incorporates a point-to-point protocol server, by which it can accept TCP/IP connections over a serial link.

Configuring the point-to-point server is done with the **setPointToPoint** command. For example, to set up a point-to-point communication over COM1, with the server (i.e. the receiver) having address `192.168.60.1` and the client having address `192.168.60.2`, and using CHAP authentication with password "mypwd", use this command:

```
setPointToPoint, P2PP1, Server, COM1, 192.168.60.2, 192.168.60.1, CHAP, mypwd <CR>
```

If the client is a Linux computer, make sure the password is set in the `/etc/ppp/chap-secrets` file. For example, the contents of that file could be as follows:

```
# Secrets for authentication using CHAP
# client      server  secret          IP addresses
*             *      mypwd          192.168.60.1
```

Assuming that the serial cable is connected to the first serial port of your PC, and that the receiver's COM1 port is left in its default configuration (115200 baud and no hardware flow control), the client PPP daemon can be started with the following Linux command:

```
pppd /dev/ttyS0 115200 nocrtscts local
```

After a few seconds, the PPP link is established and it is possible to access the receiver at IP address 192.168.60.1.

1.1.4 Via a Web Browser

The receiver can be controlled and configured using a web browser. The hostname or fixed IP address is defined as explained in section 1.1.3.

For example, if your receiver's hostname is `asterxsb3-1234567`, simply use the following URL in your preferred web browser:

```
http://asterxsb3-1234567
```

or, for a secure connection:

```
https://asterxsb3-1234567
```

The `https` certificate (`.pem` file) can be uploaded through the *Communication > Web Server/TLS* menu of the web interface.

Most user commands described in section 3.2 can be accessed graphically from the web interface. You can also go to *Admin > Expert Control > Expert Console* to manually type ASCII commands and view replies.

By default, the web interface provides unrestricted read and write access to the receiver. This can be changed, as further explained in section 1.22 of this document.

Note that a lightweight (text only) version of the web interface is available by appending `/lite` to the URL, for example:

```
http://asterxsb3-1234567/lite
```

1.1.5 Connection Descriptors

Receiver connections are identified by their connection descriptor (CD). The different connection descriptors are shown in the table below. The three rightmost columns indicate the direction (input or output or both), and whether the connection can accept user command input.

| CD | Description | In | Out | Cmd |
|------|--|----|-----|-----|
| COMx | one of the serial ports | • | • | • |
| USBx | one of the USB-device serial ports | • | • | • |
| DSK1 | the internal disk. See section 1.14 | | • | |
| IP1x | one of the TCP/IP connections | • | • | • |
| NTRx | one of the NTRIP connections. Input in NTRIP client mode (section 1.10), output in NTRIP server mode (section 1.9) | • | • | |
| IPSx | one of the IP server connections. See section 1.12 | • | • | • |
| IPRx | one of the IP receive connections. See section 1.13 | • | • | • |

1.2 Understand the Output of the Receiver

The receiver outputs proprietary and standardized messages. Each proprietary message begins with a two-character identifier, which identifies the message type.

| Proprietary messages | First two characters |
|--|----------------------|
| ASCII command replies and command error notification | \$R |
| ASCII transmissions (e.g. periodic output of the status screen), terminated by a prompt. Two sub-types are defined: <ul style="list-style-type: none"> \$TD : ASCII display generated by the receiver; \$TE : event notification (e.g. receiver is shutting down). | \$T |
| Formatted information blocks (e.g. formal command description) | \$- |
| SNMP' binary command replies (Septentrio proprietary) | \$& |
| Proprietary binary data (SBF) | \$@ |

1.2.1 Proprietary Binary Output (SBF)

The binary messages conform to the SBF definition. The data are arranged in SBF blocks identified by block IDs. All the blocks begin with the SBF identifier \$@. Please refer to section 4 for a description of the SBF format.

The benefit of SBF is completeness. This format should be your first choice if you wish to receive detailed information from the receiver.

The list of supported SBF messages can be found in appendix B

SBF Converter, provided in the RxTools package is an intuitive GUI which allows SBF conversion into e.g. RINEX, KML, GPX or ASCII.

1.2.2 NMEA

The receiver can generate a set of approved NMEA sentences, which conform to the NMEA Standard (version 3.01⁽¹⁾ and version 4.10⁽²⁾ are supported). The benefit of the NMEA format is that it is standardized. Many electronic devices and software packages support NMEA. The drawback of NMEA is a relatively low level of detail.

NMEA output is configured with the **setNMEAOutput** command, and the NMEA version (3.01 or 4.10) is selected with the **setNMEAVersion** command.

The list of supported NMEA sentences can be found in appendix C.

⁽¹⁾ NMEA 0183, Standard for Interfacing Marine Electronic Devices, Version 3.01, National Marine Electronics Association, 2002

⁽²⁾ NMEA 0183, Standard for Interfacing Marine Electronic Devices, Version 4.10, National Marine Electronics Association, 2012

1.2.3 RTCM and CMR

The receiver can operate as DGPS and/or RTK base station and output the corresponding RTCM or CMR messages. The instructions to set the receiver in base station mode can be found in section 1.5.

The list of supported RTCM and CMR messages can be found in appendix D.

1.3 Define an SBF Output Stream

As an example, this section explains how to use the command line interface to configure the receiver to output the `MeasEpoch` SBF block at 10 Hz, the `PVTCartesian` SBF block at 1 Hz, and the `GPSNav` block at its On-Change rate (see section 4.1.8 for more details on the SBF output rate). In this example, we will assume that these blocks must be output through the USB2 connection.

1. First make sure that the USB2 connection is configured for SBF output (this is the default). In case this is not so, you should invoke:

```
setDataInOut, USB2, , +SBF <CR>
```

2. Scheduling SBF blocks for output is done by defining so-called "SBF streams". At least 10 SBF streams can be defined by the user. A stream consists of a set of SBF blocks that need to be output at a given rate through a given connection. By default, all streams are empty, and no SBF blocks are output. For our example, we will need to use two streams. Defining these SBF streams involves the `setSBFOutput` command:

```
setSBFOutput, Stream1, USB2, MeasEpoch+GPSNav, msec100 <CR>
```

```
setSBFOutput, Stream2, USB2, PVTCartesian, sec1 <CR>
```

Note that the rate specified with the `setSBFOutput` command (`msec100` or `sec1` above) only applies to the blocks that support a flexible output rate (see appendix B). The `GPSNav` block does not support flexible rate: it is always output at its "On-Change" rate regardless of the stream rate. For this reason, in the above example, we could equally have enabled `GPSNav` in `Stream2`.

3. To stop outputting SBF on a given connection, you can either redefine or empty the corresponding streams:

```
setSBFOutput, Stream1, USB2, none <CR>
```

```
setSBFOutput, Stream2, USB2, none <CR>
```

A second possibility is to disable all SBF messages on that connection:

```
setDataInOut, USB2, , -SBF <CR>
```

Note that the `exeSBFOnce` command can be used to output a set of blocks once, instead of at regular interval. This is typically used to output all currently available satellite ephemerides at once. For example, the following command instructs the receiver to output all known GPS, GLONASS, Galileo and BeiDou ephemerides over USB2:

```
exeSBFOnce, USB2, GPS+GLO+GAL+BDS <CR>
```

This is a one-time action: the requested blocks are inserted in the stream, and then the normal flow of blocks as defined with `setSBFOutput` resumes. When logging the SBF stream for post-processing, it is a good practice to request all satellite ephemerides with the `exeSBFOnce` command when starting a new log file. Make sure however not to request measurement or PVT blocks with `exeSBFOnce` when these blocks are also enabled with `setSBFOutput` as it could cause the same epoch to be duplicated in the log file. Some post-processing tools may not work properly when the same epoch is repeated twice.

1.4 Save the Configuration in Non-Volatile Memory

The receiver configuration includes all the user-selectable parameters, such as the elevation mask, the PVT mode, the COM port settings,...

By default, the receiver starts up in its factory default configuration. The factory defaults for each of the receiver parameters are underlined for each argument of each command in section 3.2

The current receiver configuration can be checked with the **lstConfigFile** command:
lstConfigFile, Current <CR>

At any time, it is possible to save the current configuration into non-volatile memory, in order to force the receiver to always start up in that configuration. To do so, the following command should be entered:

exeCopyConfigFile, Current, Boot <CR>

To revert to the default setting where the receiver starts in the default configuration, you should use:

exeCopyConfigFile, RxDefault, Boot <CR>

1.5 Configure the Receiver in DGPS/RTK-Base Mode

The receiver can generate and output DGPS and/or RTK corrections in the RTCM and CMR formats. The list of supported RTCM and CMR messages can be found in appendix D.

1.5.1 Static Base Station Mode

To configure the receiver in static base station mode, the following has to be done:

1. For accurate and repetitive absolute positioning, you must provide the accurate coordinates of the antenna reference point (ARP). The ARP usually corresponds to the center of the bottom of the antenna (see also section 2.5). For example, assuming the WGS84 position of the ARP is 50.5°N, 4°E and its altitude above the WGS84 ellipsoid is 100m, use:

```
setStaticPosGeodetic,Geodetic1,50.5,4,100 <CR>  
setPVTMode,Static,,Geodetic1 <CR>
```

If you are only interested in accurate determination of the base-rover baseline, with the absolute position of the rover being of lesser importance, accurate positioning of the base station is not required, and you may simply let the receiver determine its fixed position autonomously ("auto-base" mode), by typing:

```
setPVTMode,Static,,auto <CR>
```

2. For RTCM 3.x, the antenna information in message types 1007, 1008 and 1033 can be specified using the **setAntennaOffset** command, with the serial number as sixth argument, and the antenna type (called "antenna descriptor" in RTCM) as fifth argument (see also section 2.5). For instance:

```
setAntennaOffset,Main,,,"AT2775-54SW","5684" <CR>
```

3. Use the commands **setRTCMv2Interval**, **setRTCMv2IntervalObs**, **setRTCMv3Interval** or **setCMRv2Interval** to specify the message interval (default is one second for most messages). For instance, to change the interval at which RTCM 3.x message type 1033 is generated to 10 seconds, type:

```
setRTCMv3Interval,RTCM1033,10 <CR>
```

4. Use the commands **setRTCMv2Formatting**, **setRTCMv3Formatting** or **setCMRv2Formatting** to specify the base station ID. If you are setting up multiple base stations, make sure to select a unique ID for each of them. For instance:

```
setRTCMv3Formatting,496 <CR>
```

5. By default, the receiver is configured to output all RTCM and CMR messages necessary for DGPS and RTK operation. If necessary, the set of output messages can be specified with the commands **setRTCMv2Output**, **setRTCMv3Output** or **setCMRv2Output**. For instance, to output RTCM3.x messages 1006, 1033 and 1074 on COM2, use:

```
setRTCMv3Output,COM2,RTCM1006+RTCM1033+RTCM1074 <CR>
```

If you are using the RTCM3.x MSM messages (see appendix D), you can use the **setRTCMv3Formatting** command to configure the signal types that need to be

encoded in MSM.

6. The RTCM stream can be output through any output connection listed in section 1.1.5. For instance, to enable RTCM 3.x output through COM2, use:

```
setDataInOut,COM2,,RTCMv3 <CR>
```

7. When sending differential corrections over a serial port, do not forget to specify the baud rate. For instance if the differential correction stream needs to be output on COM2 at 9600 baud, use:

```
setCOMSettings,COM2,baud9600 <CR>
```

To stop transmitting RTCM messages, enter the following command:

```
setDataInOut,COM2,,none <CR>
```

Note that, even in static mode, the receiver computes a PVT solution to estimate the clock bias.

1.5.2 RTK Moving Base Station Mode

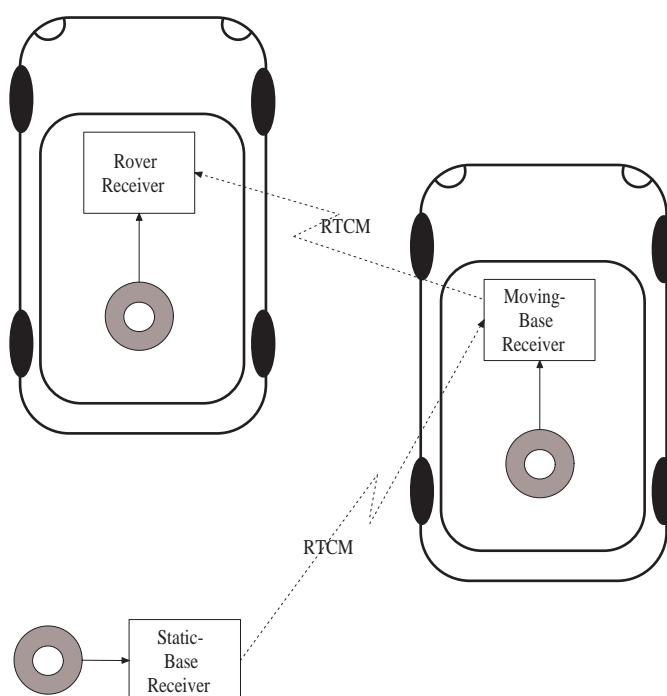


Figure 1-2: Example of a RTK moving-base configuration where the moving base receives RTCM corrections from a static base and transmits RTCM corrections to the rover.

To configure the receiver in RTK moving base, follow the steps below:

1. The PVT engine must be set in one of the rover modes (standalone, DGPS, SBAS, RTK). The type of the PVT mode at the moving base station will determine the absolute position accuracy of the RTK rover receiver. On the other hand, the accuracy of the relative position of the rover with respect to the moving base is not influenced by the

PVT mode at the moving base station.

For instance, to let the moving base station compute a simple standalone PVT, use the following:

```
setPVTMode, Rover, StandAlone <CR>
```

If accurate absolute and relative positioning of the rover is required, the moving base can operate in RTK-rover positioning mode and receive RTCM or CMR corrections from a static base station, as illustrated in Figure 1-2. Refer to section 1.6 to configure the moving-base receiver in RTK-rover mode.

2. From now on, follow the same procedure as for a static base station, starting at step 2 of section 1.5.1 and taking into account the following recommendations:
 - RTCM v2.x and CMR are not recommended for moving-base applications, always use RTCM v3.x in the link between the moving base and the rover.
 - To decrease the effect of extrapolation errors, use a short RTCM or CMR message interval (see the commands **setRTCMv3Interval** and **setCMRv2Interval**). In most cases, it is safe to set the interval to its minimum value of 0.1 seconds. If the RTCM or CMR messages are sent through a COM connection, make sure that the baud rate is sufficient to support the high rate. A value of 115200baud is typical.
 - In moving base, it is recommended to send the base position and observables at the same rate.

See also section 2.4.3.3 for more details on moving-base operation.

1.6 Configure the Receiver in DGPS/RTK-Rover Mode

The receiver computes a DGPS and/or an RTK solution when it receives the relevant differential correction messages on one of its connections. The list of supported differential correction messages can be found in appendix D.

To configure the receiver in DGPS/RTK-rover mode, the following has to be done:

1. Make sure that at least one of the receiver connections is receiving differential corrections. Any input connection listed in section 1.1.5 is suitable. When using a serial connection, make sure to configure the baud rate to match the baud rate of the incoming RTCM stream. For instance if the incoming RTCM stream is received through COM2 at a baud rate of 9600 baud, use:

```
setCOMSettings,COM2,baud9600 <CR>
```

2. By default, the receiver assumes that the base station is static. If it is moving, enter the following command:

```
setDiffCorrUsage,,,,,on <CR>
```



In DGPS-rover mode, the base station must be static. Moving base stations are only supported in RTK-rover mode.

3. The receiver automatically detects the format of the differential corrections (RTCM or CMR) and switches between standalone, DGPS or RTK modes according to the type of corrections it receives, provided these modes are enabled with the **setPVTMode** command (all modes are enabled by default).

Refer to sections 2.4.2 and 2.4.3 for further details on the DGPS and RTK positioning mode.

1.7 Determine a GNSS-Based Attitude from the Main and Aux Antennas

The attitude (heading/pitch) can be computed from the orientation of the baseline between the main and the aux1 GNSS antennas. This is illustrated in Figure 1-3.

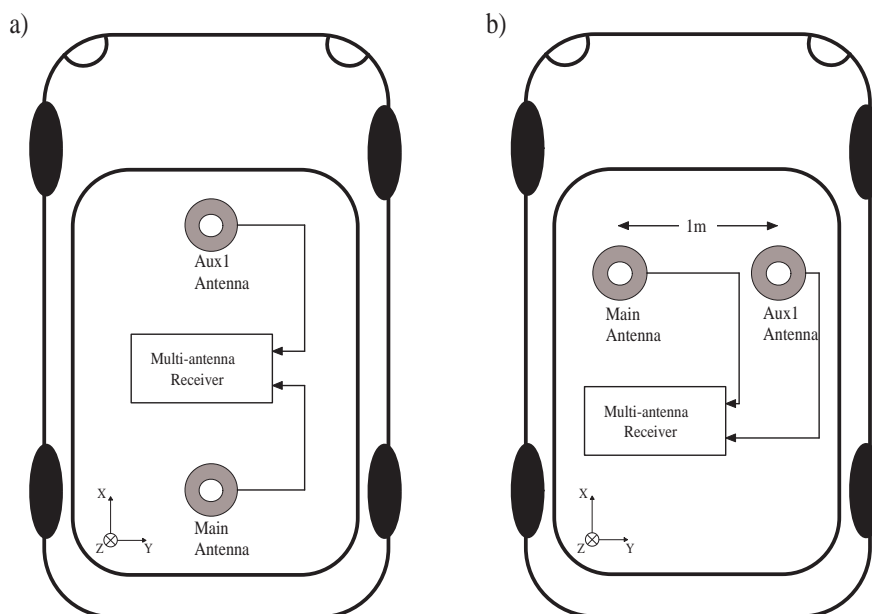


Figure 1-3: Multi-antenna attitude determination setup. a) default configuration. b) alternate configuration.

To enable multi-antenna attitude determination, follow the following procedure:

1. Attach two antennas to your vehicle, using cables of approximately the same length. The default antenna configuration is as depicted in Figure 1-3a. It consists in placing the antennas aligned with the longitudinal axis of the vehicle, main antenna behind aux1. For best accuracy, try to maximize the distance between the antennas, and avoid significant height difference between the antenna ARPs. If the configuration in Figure 1-3a is not feasible, another possibility is to have the antenna baseline perpendicular to the vehicle, as shown in Figure 1-3b. In that configuration, an "attitude offset" needs to be provided with the following command:
setAttitudeOffset, 90 <CR> if the aux1 antenna is on the right of the main antenna (Figure 1-3b), or
setAttitudeOffset, -90 <CR> if the aux1 antenna is on the left of the main antenna.
2. In practice, the two antenna ARPs may not be exactly at the same height in the vehicle frame, or the main-aux1 baseline may not be exactly parallel or perpendicular to the longitudinal axis of the vehicle. This leads to offsets in the computed attitude angles. These offsets can be compensated for with the **setAttitudeOffset** command. For example, if the heading and pitch angles reported by the receiver have an offset of respectively 3 and 4.5 degrees with respect to their expected value, you can have the receiver compensate for them by using the following command (assuming the antennas are in the configuration of Figure 1-3a):

```
setAttitudeOffset,3,4.5 <CR>
```

3. Specify that the attitude has to be computed in multi-antenna mode:

```
setGNSSAttitude,MultiAntenna <CR>
```

The GNSS-based attitude angles (heading and pitch) are available in the `AttEuler` SBF block or in the HDT and HRP NMEA sentences. Note that, in the case where the antenna baseline is perpendicular to the vehicle longitudinal axis, the “pitch” angle is to be interpreted as a “roll” angle.

1.8 Determine a GNSS-Based Attitude from a Moving Base

The heading and pitch of a vehicle can be derived from the orientation of the baseline between a base and a rover antenna when both antennas are attached to the vehicle. The base antenna is connected to a first receiver configured as RTK moving base station. The rover antenna is connected to a second receiver configured as RTK rover and accepting the RTCM stream from the first receiver. This is illustrated in Figure 1-4.

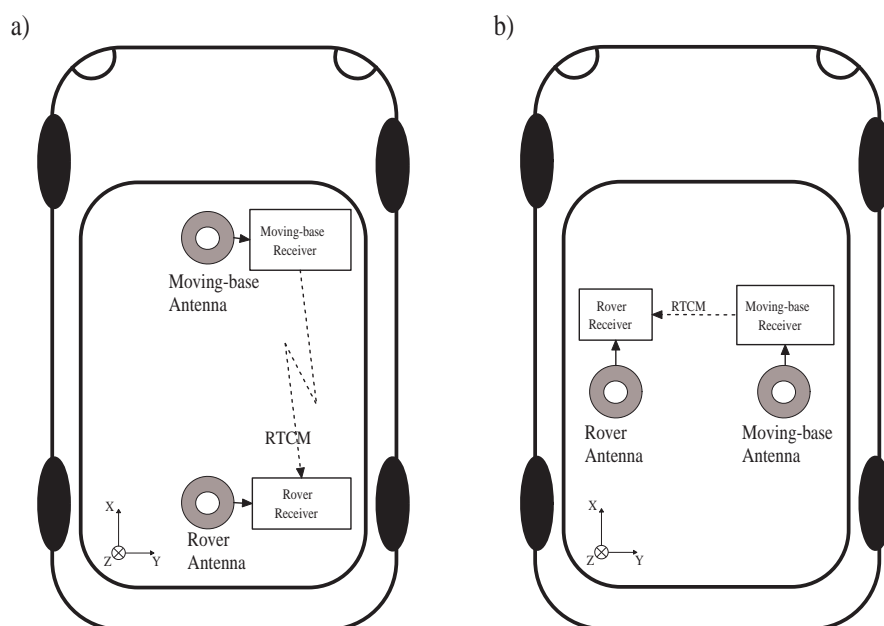


Figure 1-4: Moving-base attitude determination setup. a) default configuration. b) example of non-default configuration.

To enable moving-base attitude determination, follow the following procedure:

1. Attach two antennas to your vehicle. The default antenna configuration is as depicted in Figure 1-4 a). It consists in placing the antennas aligned with the longitudinal axis of the vehicle. If such configuration is not possible, you will have to provide additional information to the receiver, as explained below. For best accuracy, try to maximize the distance between the antennas, and avoid significant height difference between them.
2. Connect one of the antennas (preferably the one at the front of the vehicle) to the receiver that will serve as moving base. Connect the other to the receiver that will serve as rover. That latter receiver is the one where the heading and pitch will be computed.
3. Configure the moving-base receiver to send RTCM 3.x corrections to the rover. The procedure to do so is explained in section 1.5.2.
4. Configure the rover receiver to accept the RTCM corrections from the moving base, by following the steps in section 1.6.
5. By default, the attitude angles are computed assuming that the two antennas are aligned with the longitudinal axis of the vehicle, and that the moving-base antenna

is in front of the rover antenna (see Figure 1-4 a)). If you cannot place the antennas in such configuration, the reported attitude angles will be biased. There are two ways to remove these biases:

- (a) The biases can be removed by telling the receiver where the moving-base antenna is located in the vehicle reference frame (see appendix A). This is done by specifying the coordinates of the baseline between the rover antenna reference point (ARP) and the moving-base ARP in the X, Y and Z directions. For example, in the configuration b) of Figure 1-4, assuming that the distance between the antenna ARPs is 1 meter, you would issue (on the rover receiver):

```
setAntennaLocation, Base, manual, 0, 1, 0 <CR>
```

- (b) Another way to remove the biases is to provide them to the receiver. For example, if the heading and pitch angles reported by the receiver have an offset of respectively 10 and 12 degrees with respect to their expected value, you can have the receiver compensate for that offset by using the following command:

```
setAttitudeOffset, 10, 12 <CR>
```

6. Specify that the attitude has to be computed in moving-base mode by issuing the following command in the rover receiver:

```
setGNSSAttitude, MovingBase <CR>
```

The attitude angles are available from the rover receiver in the `AttEuler` SBF block or in the HDT and HRP NMEA sentences.

1.9 Configure the Receiver in NTRIP Server Mode

In the example below, we show how to configure the receiver to send RTCM 3.x corrections to an NTRIP caster using the following parameters:

- NTRIP caster hostname: ntrip.example.com
 - NTRIP caster port: 2101
 - User name/password for basic authentication: USER / PASSWD
 - Mount Point: LEUV1
 - TLS: enabled and the caster is trusted by a public certification authority
1. Configure one of the NTRIP connections (see section 1.1.5) in server mode for sending data to the NTRIP caster. Here, we assume that the first NTRIP connection (NTR1) is free and can be used for that purpose:
setNTRIPSettings,NTR1,Server,ntrip.example.com,2101,USER,PASSWD,LEUV1 <CR>
 2. To enable TLS for NTR1, use:
setNtripTlsSettings,NTR1,on,"" <CR>
 3. By default, for RTCM 3.x, the receiver is configured to send message types 1004, 1006, 1012 and 1033 at an interval of one second. This can be changed by using the **setRTCMv3Output** and **setRTCMv3Interval** commands. For instance, to change the interval of RTCM1033 to 10 seconds, use:
setRTCMv3Interval,RTCM1033,10 <CR>
 4. Enable the output of RTCM 3.x corrections on the NTR1 connection:
setDataInOut,NTR1,,RTCMv3 <CR>
 5. Closing the NTRIP connection is done with the following command:
setNTRIPSettings,NTR1,off <CR>

See also section 1.5 for more information on configuring the receiver as a base station.

The NTRIP server can also send data to the built-in caster, by specifying "localhost" as host-name. Refer to section 1.11 for details.

1.10 Configure the Receiver in NTRIP Client Mode

In this section, we show how to configure the receiver to receive and use RTK corrections from an NTRIP caster. In the example below, the NTRIP caster and Mount Point details are as follows:

- NTRIP caster hostname: ntrip.example.com
 - NTRIP caster port: 2101
 - User name/password for basic authentication: USER / PASSWD
 - Mount Point: LEUV1
 - TLS: enabled and the caster is trusted by a public certification authority
1. Configure one of the NTRIP connections (see section 1.1.5) for communication with the NTRIP caster in client mode. Here, we assume that the first NTRIP connection (NTR1) is free and can be used for that purpose:
setNTRIPSettings,NTR1,Client,ntrip.example.com,2101,USER,PASSWD,LEUV1 <CR>
 2. To enable TLS for NTR1, use:
setNtripTlsSettings,NTR1,on,"" <CR>
 3. The receiver will automatically receive and decode the RTK corrections from the NTRIP caster and switch to RTK positioning mode, unless RTK is disabled with the **setPVTMode** command.
 4. Closing the NTRIP connection is done with the following command:
setNTRIPSettings,NTR1,off <CR>

The status of the NTRIP client connection is reported in the `NTRIPClientStatus` SBF block.

1.11 Use the Built-In NTRIP Caster

The receiver contains an NTRIP caster, which is able to broadcast local data streams originating from the receiver itself, or streams from any remote NTRIP server. The hostname or IP address of the built-in caster is as defined in section 1.1.3.

1.11.1 Broadcasting Local Streams

This section explains how to use the built-in NTRIP caster to broadcast a local stream generated by the receiver's own NTRIP server.

1. Define the mount point you want to use for streaming the data. For example, the following command enables the first mount point, gives it the name "MyMP", and specify that this mount point only accepts local streams:

```
setNtripCasterMountPoints, MP1, on, MyMP, No <CR>
```

2. Define the data format. For example, if the mount point defined above is meant to stream RTCM v3.x corrections, use the following command:

```
setNtripCasterMPFormat, MP1, RTCMv3 <CR>
```

3. Define the NTRIP client accounts. For example, the command below enables an NTRIP client connecting as user "u1" and with password "p1" to receive data from the first mount point:

```
setNtripCasterUsers, User1, u1, p1, MP1 <CR>
```

4. Configure the local NTRIP server to send data to the mount point, as explained in section 1.9. To have the local NTRIP server send data to the built-in caster, the hostname has to be set to "localhost". For example, to send data to the mount point "MyMP" of the caster, use:

```
setNTRIPSettings, NTR1, Server, localhost, , , , MyMP <CR>
```

5. Enable the built-in NTRIP caster:

```
setNtripCasterSettings, on <CR>
```

1.11.2 Broadcasting Remote Streams

To configure the caster to broadcast a stream originating from a remote NTRIP server, follow the following steps.

1. Define the mount point. For example, the following command enables the first mount point, gives it the name "MyMP", and specifies the credentials that the remote NTRIP server will need to use in order to feed data to this mount point ("FeedUser" and "FeedPwd"):

```
setNtripCasterMountPoints, MP1, on, MyMP, Yes, FeedUser, FeedPwd <CR>
```

2. Define the stream data format. For example, if the mount point defined above is meant to stream RTCM v3.x corrections, use the following command:

```
setNtripCasterMPFormat, MP1, RTCMv3 <CR>
```

3. Define the NTRIP client accounts. Up to five client accounts can be configured. For example, the command below enables an NTRIP client connecting as user "u1" and with password "p1" to receive data from the first mount point:

```
setNtripCasterUsers, User1, u1, p1, MP1 <CR>
```

4. Enable the built-in NTRIP caster:

```
setNtripCasterSettings, on <CR>
```

From now on, the NTRIP caster is ready to receive a data stream from a remote NTRIP server and to distribute it to NTRIP clients.

1.12 Configure an IP Server Port

In this example, we show how to configure the receiver such that any client connecting to TCP/IP port 28785 will receive the NMEA GGA message at a 1-second interval.

1. Configure one of the IP server connections (see section 1.1.5) to listen to port 28785. Here, we assume that the first IP server connection (IPS1) is free:
setIPServerSettings, IPS1, 28785, TCP <CR>
2. Output the GGA NMEA message to the IPS1 connection, at a 1-Hz rate:
setNMEAOutput, Stream1, IPS1, GGA, sec1 <CR>
3. Make sure that NMEA output is enabled on the IPS1 connection. It is enabled by default, but in case your receiver is not in its default configuration, you should invoke:
setDataInOut, IPS1, , +NMEA <CR>

A way to check the IP server functionality is to enter the URL **http://asterxs3-xxxxxxx:28785** in your preferred web browser (replace *asterxs3-xxxxxxx* by the hostname of your particular receiver). You should see the NMEA GGA message coming every second.

Note that up to eight clients can concurrently connect to the same IP server port.

The example above showed how to set up a TCP server. It is also possible to configure the receiver in UDP server mode. For example, to broadcast the GGA message to any UDP client listening to its port 28785, the command in step 1. above must be replaced by:

setIPServerSettings, IPS1, 28785, UDP, 255.255.255.255 <CR>

Conversely, the receiver can be configured to automatically receive data from an IP server. This is explained in section 1.13.

1.13 Configure an IP Receive Port

The receiver can be configured to automatically receive data (typically differential corrections) from an IP server. In this example, we show how to connect to an IP server having the hostname `MyServer` and using port 28786.

1. Configure one of the IP receive connections (see section 1.1.5) to listen to port 28786 of `MyServer`. Here, we assume that the first IP receive connection (`IPR1`) is free:
`setIPReceiveSettings, IPR1, 28786, TCP2Way, MyServer <CR>`
2. If the data stream from the IP server contains differential corrections in CMR or RTCM format, the receiver will automatically decode them and use them in the PVT processing.
3. To close the connection, enter the following command:
`setIPReceiveSettings, IPR1, 0 <CR>`

The TCP connection initiated by the receiver is bidirectional. Once the connection is established, the receiver accepts input data from the server (as shown above), but it can also send data to the server, or process user commands from the server.

The example showed how to set up a TCP connection with the server. The receiver can also listen to incoming UDP messages. In that case, the connection is unidirectional and the server address or hostname must not be specified. For example, to listen to UDP messages on port 28786, use the command:

`setIPReceiveSettings, IPR1, 28786, UDP <CR>`

1.14 Log SBF or NMEA

The connection descriptor (see section 1.1.5) associated to the internal disk is "DSK1". Enabling SBF or NMEA logging on the internal disk involves the following steps:

1. By default, the receiver logs SBF blocks into a file named "log.sbf" and NMEA sentences into a file named "log.nma". You can specify any other fixed or auto-incrementing file name, or you can select the IGS/RINEX naming convention, where the file name automatically changes every fifteen minutes, hour, six hours or day. For instance, to let the receiver create daily files, use:

```
setFileNaming,DSK1,IGS24H <CR>
```

If the file name you selected already exists, the receiver will append new data at the end of the existing file.

2. Use the command **setSBFOutput** to define which SBF blocks need to be logged (for NMEA, use **setNMEAOutput** instead), and at which interval (see also section 1.3). For instance, to log all SBF blocks necessary to build RINEX files, with the measurements and positions being output at a 10-s interval, use:

```
setSBFOutput,Stream1,DSK1,rinex,sec10 <CR>
```

3. Start the logging by enabling SBF and NMEA output to the DSK1 connection (it is enabled by default):

```
setDataInOut,DSK1, ,+SBF+NMEA <CR>
```

4. Once the logging session is finished, stop the logging by invoking:

```
setDataInOut,DSK1, ,-SBF-NMEA <CR>
```

Refer to section 1.16 to learn how to download the logged files.

1.15 Log RINEX Files

The receiver can log RINEX observation and navigation files on its internal disk. RINEX v2.11 and 3.04 are supported.

Internal RINEX logging is typically configured as follows:

1. The RINEX file names follow the RINEX 2.11 naming convention (*ssssdddf.yyt*), with the 4-character station name designator (*ssss*) being the first four characters of the station code as specified with the **setMarkerParameters** command. For example, to set the station name designator to "LEUV", use:
setMarkerParameters, , , , LEUV <CR>
2. The fields in the RINEX observation header are specified with the **setMarkerParameters**, **setObserverParameters** and **setAntennaOffset** commands. For example, if the observer's name is "MyName" and its agency is "MyAgency", use the command:
setObserverParameters, MyName, MyAgency <CR>
3. For static installations, the reference marker position to put in the "APPROX POSITION XYZ" header line can be defined with the *RefPos* argument of **setPVTMode**, with the marker-to-ARP offset being defined with **setAntennaOffset**. For example, assuming the WGS84 position of the ARP is 50.5°N, 4°E and its altitude above the WGS84 ellipsoid is 100m, and the ARP is 1.5 meters above the marker, use:
setStaticPosGeodetic, Geodetic1, 50.5, 4, 100 <CR>
setPVTMode, , , Geodetic1 <CR>
setAntennaOffset, Main, 0, 0, 1.5 <CR>
4. Use the **setRINEXLogging** command to specify the file duration (fifteen minutes, one hour, six hours or one day), the observation interval and the type of observables to include in the RINEX file. For example, to generate daily RINEX files with the observation file containing only GPS L1CA data at a 30-s interval, use:
setRINEXLogging, DSK1, Hour24, sec30, GPSL1CA <CR>
 In this command, DSK1 refers to the internal disk.
5. The command **setDiskFullAction** specifies what to do when the internal disk becomes full. For example, you could ask the receiver to automatically delete the oldest file to free up disk space. To do so, use:
setDiskFullAction, DeleteOldest <CR>

Instead of logging RINEX files inside the receiver, you can also convert an SBF file to RINEX using the *sb2rin* program or the *SBFConverter* graphical tool.

1.16 Download Log Files from the Receiver

There are different ways to download or delete files from the internal disk:

1. Using RxControl. Select *Logging > Download Internal Files* to download files to your computer, and *Logging > Remove Internal File* to remove a file from the internal disk.

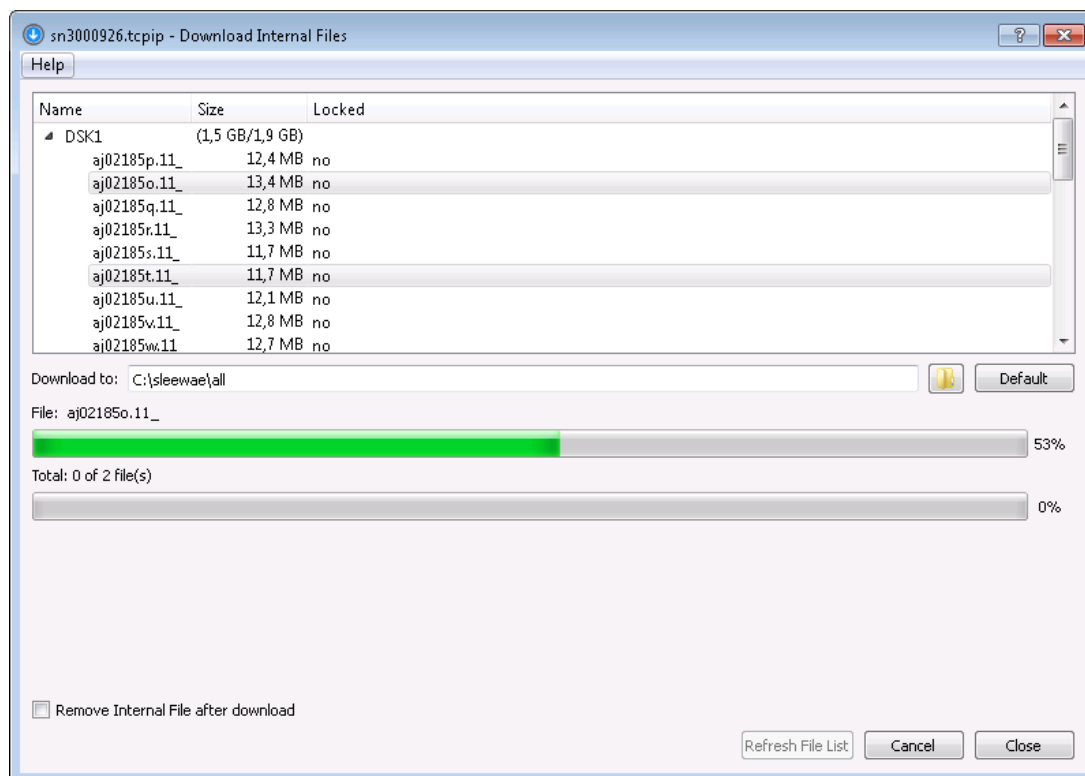


Figure 1-5: Download Internal Files from RxControl.

2. Using FTP or SFTP. The hostname or fixed IP address is defined as explained in section 1.1.3. For example, if your receiver's hostname is `asterxsb3-1234567`, you can type the following URL in your preferred web browser to open a session as anonymous user:

ftp://asterxsb3-1234567

User authentication for SFTP access can be done by entering a password or using an ssh public key, as defined with the **setUserAccessLevel** command.

By default, anonymous users can download and delete files. This can be changed as explained in section 1.22.

3. Using `rsync`. If an `rsync` client is available on your computer, you can use `rsync` to download files or directories from the receiver. The hostname or IP address is the same as for (S)FTP, see above.

For example, to download the contents of the `log.sbf` file of the internal disk (DSK1) to the current folder on your local computer, you could invoke `rsync` as follows:

rsync -r anonymous@asterxsb3-1234567:DSK1/SSN/GRB0053/log.sbf .
when prompted for a password, just press the enter key as no password is required for

anonymous accesses.

If the same command is issued again at a later stage, `rsync` will only transfer the deltas with respect to the files already present on the local machine, significantly reducing the number of bytes sent compared to retransmitting the entire files.

User authentication can be done by entering a password, or using an ssh public key, as defined with the **setUserAccessLevel** command.

By default, `rsync` is enabled for anonymous users. This can be changed with the **setDefaultAccessLevel** command.

4. Using the web interface (select the *Logging* tab).
5. Using a standard file browser and accessing the receiver as a removable drive (USB mass-storage device). This requires the USB cable to be connected to your computer, and the internal disk to be unmounted by the receiver so that it can be accessed by your computer's operating system. This can be done automatically upon connecting the USB cable, as configured with the **setUMSDOnConnect** command.

1.17 FTP Push Log files

It is possible to configure the receiver to automatically send internally-logged files to a remote FTP server (FTP Push). This is done with the **setFTPPushSBF** and **setFTPPushRINEX** commands respectively.

For example, to automatically FTP RINEX files to the directory `mydata/rin/YYDDD` (with `YY` and `DDD` the year and day-of-year) on the remote server `myftp.com`, with username `myname` and password `mypwd`, you would enter the following command:

```
setFTPPushRINEX, myftp.com, mydata/rin/%y%j, myname, mypwd <CR>
```

To FTP push SBF files to the same location, you would use:

```
setFTPPushSBF, myftp.com, mydata/rin/%y%j, myname, mypwd <CR>
```

FTP push will create the folder on the remote server if it does not exist yet.

1.18 Communicate with External Equipment

The receiver can send periodical queries to external equipment (such as a meteo sensor) connected to one of its serial ports, and log the replies from that sensor. In the following example, we show how to retrieve meteo data every 10 seconds from a meteo sensor connected to the receiver's COM2 port.

1. Tell the receiver which command to use to query the external sensor, and the interval at which this command must be sent to the sensor. For instance, for a MET3/MET4-compatible sensor, the command `*0100P9<CR><LF>` queries the meteo data. Assuming you want to get meteo data at a 10-second interval, enter the following command:

```
setPeriodicEcho, com2, A:*0100P9%%CR%%LF, sec10 <CR>
```

2. Enable unformatted ASCII input on COM2 (to receive the replies from the meteo sensor):

```
setDataInOut, COM2, ASCIIIn <CR>
```

The replies from the meteo sensor (containing the temperature, pressure and humidity) are available in the `ASCIIIn` SBF block.

You can convert an SBF file containing `ASCIIIn` SBF blocks to RINEX using the `sbf2rin` program or the `SBFConverter` graphical tool. To be able to generate a RINEX file, the output of the meteo sensor must be formatted according to the NMEA XDR sentence.

1.19 Generate a "Pulse Per Second" Signal

The receiver is able to generate an x-pulse-per-second (xPPS) signal aligned with a selected GNSS system time, with UTC or with the internal receiver time.

The **setPPSPParameters** command is used to set the xPPS parameters (rate, polarity, time system, ...). For instance, to synchronize the xPPS pulses with UTC and have one pulse every ten seconds, use:

```
setPPSPParameters, sec10, , , UTC <CR>
```

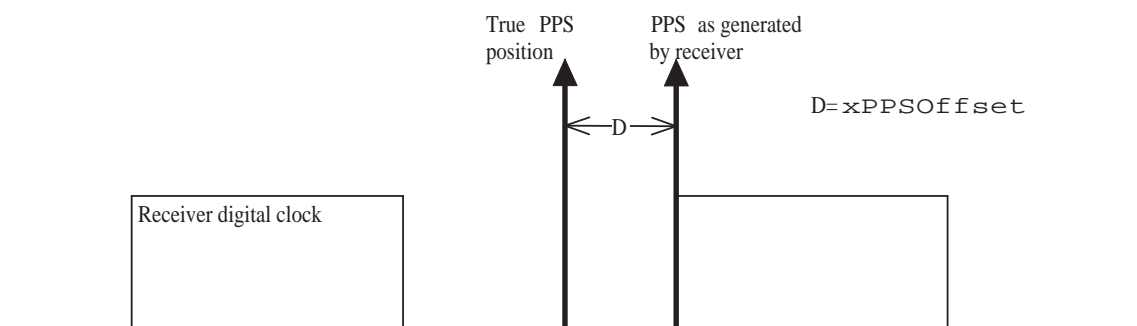


Figure 1-6: xPPS output granularity.

Although the position of the PPS pulse is computed accurately by the receiver, the actual pulse is generated at the nearest "tick" of the internal receiver digital clock, as illustrated in the figure above. This leaves an offset (noted "D" in the figure) between the true xPPS pulse and the one actually generated by the receiver. This offset can reach a few nanoseconds. It is available in real-time in the `xPPSOffset` SBF block.

To be able to align its xPPS output with the GNSS system time, the receiver needs a fresh estimate of the GNSS time from its PVT solution. If the last PVT solution is older than a prescribed timeout (set by the **setPPSPParameters** command), no PPS pulse is generated. In addition, to align its PPS with UTC, the receiver needs to have received the UTC offset parameters from the satellite navigation messages. If these parameters are not available and the user has requested to align the xPPS with UTC, no xPPS pulse is generated.

1.20 Time Tag External Events

The receiver can time-tag electrical level transitions on its EventX inputs with an accuracy of 20ns.

By default, the receiver reacts on low-to-high transitions. You can use the **setEventParameters** command to react on falling edges instead:
setEventParameters,EventA,High2Low <CR>

Upon detection of a transition, the receiver can output the time and/or the position at the instant of the event (see for example the `ExtEvent` SBF block).

The following constraints must be observed to ensure proper event detection:

- There must be no more than 20 events in any interval of 100 milliseconds, all event pins considered.
- The minimum time between two events on the same EventX input must be at least 5ms.

Missed events are flagged by the `MISSEDEVENT` bit in the `ReceiverStatus` SBF block.

1.21 Monitor the RF Spectrum

You can monitor the RF spectrum using the spectral analyzer in RxControl (go to the *View > Spectral View* menu) or in the web interface (go to the *GNSS > Spectrum* menu). This allows to detect the presence of interferences in the GNSS bands.

In the example shown below, a narrowband interference at 1180 MHz is clearly visible.

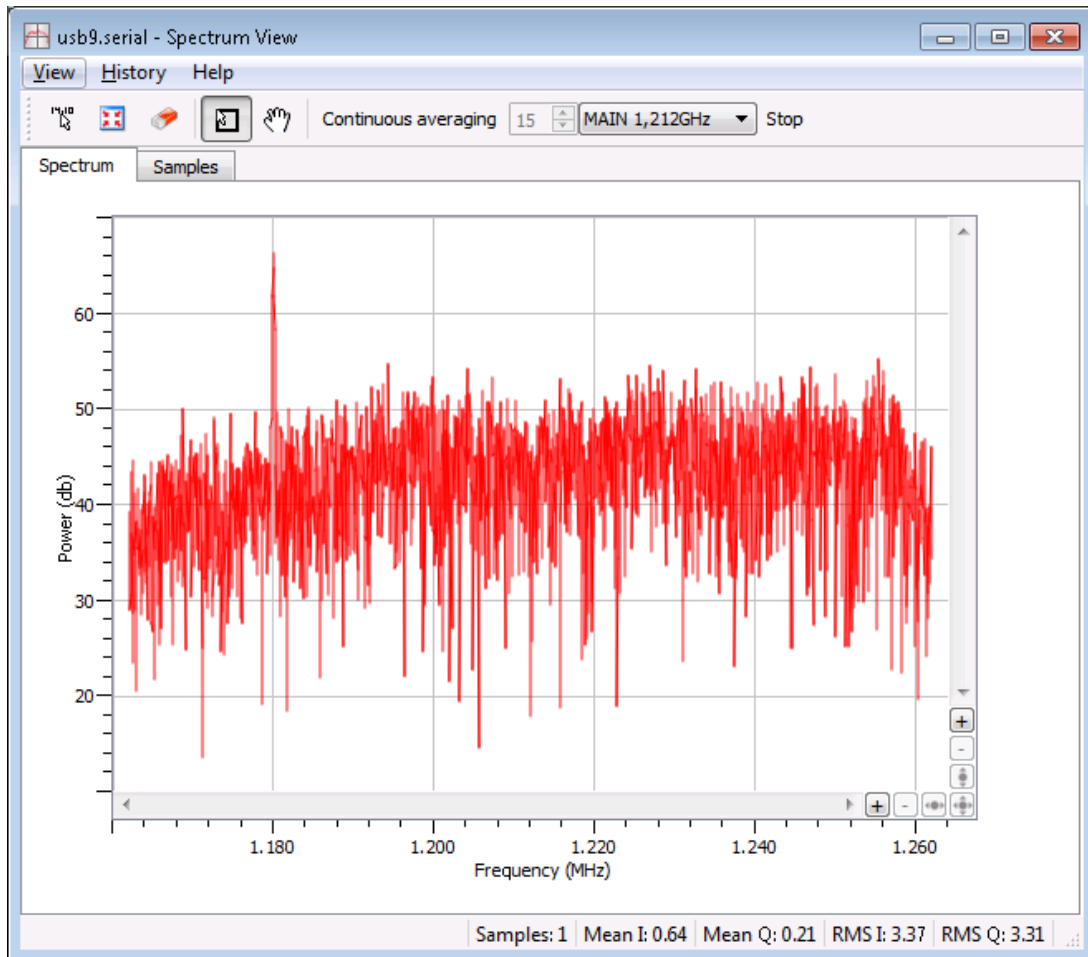


Figure 1-7: Spectral Analyser functionality of RxControl.

The spectrum is computed from baseband samples taken at the output of the receiver's analog to digital converters. These samples are available to the users in the `BBSamples` SBF block.

1.22 Manage Users

When connecting to the receiver, users can remain "anonymous", or can log in using the **login** command. What anonymous users can do depends on the connection type. By default, anonymous users have full control of the receiver. This default configuration can be changed with the **setDefaultAccessLevel** command. For example, to prevent anonymous access to the web interface and to the FTP server, you would use: **setDefaultAccessLevel, none, none <CR>**

To perform actions not allowed to anonymous users, you first need to authenticate yourself by entering a user name and a password through the **login** command. The list of user names and passwords and their respective access level is managed with the **setUserAccessLevel** command. Login fails if the provided user name or password is not in that list.

Logged-in users are granted one of the following access levels: "User" or "Viewer". The "User" level allows full control of the receiver, while the "Viewer" level only allows to view the configuration.

The following explains how to add or delete a user.

1. Check the current user list by entering the following command:

```
getUserAccessLevel <CR>
```

The reply to this command looks like:

```
UserAccessLevel, User1, "admin", "R46NCG", User
UserAccessLevel, User2, "", "", Viewer
UserAccessLevel, User3, "", "", Viewer
...
```

2. In the example shown above, only one user is defined: `User1` with user name `admin`. For security reasons, the password shown here (`R46NCG`) is random and does not correspond to the actual password. It can be seen that the level of access of the `admin` user is "User": that particular user has full control of the receiver. To add a new user "john" with password "abc123" and to give full access to that user, select a free user index, e.g. `User2` in the above example, and type: **setUserAccessLevel, User2, john, abc123, User <CR>**

3. You can add up to eight users in this way. Deleting a user involves entering an empty string (") as user name and password. For example, to delete the "admin" user from the above list, use: **setUserAccessLevel, User1, "", "" <CR>**

The user list also applies to FTP, SFTP and `rsync` accesses. Users having the "User" access right are allowed to delete files from the internal disk via FTP, SFTP or `rsync`, while "Viewer" users can only download files.

1.23 Upgrade the Receiver

Upgrading the receiver is the process of installing a new GNSS firmware, a new permission file (see section 1.25) or a new antenna calibration file (see section 2.5).



In some cases, upgrading the GNSS firmware can clear the receiver configuration stored in non-volatile memory (see section 1.4). It is therefore advised to recheck the configuration after the upgrade.



Do not switch power off during the upgrade procedure.



Upgrading the receiver over a serial port can be very slow and it is recommended to upgrade using a faster connection whenever possible (USB or Ethernet).

Septentrio upgrade files have the extension “.suf”. There are several ways to upgrade the receiver:

1. By double clicking the “.suf” file. This should launch the RxUpgrade program.
2. By using the RxControl graphical interface (go to the *File* menu).
3. From the web interface (go to *Admin > Upgrade*). This requires to log in as a user with the “User” access level (see section 1.22).
4. By commanding the receiver to upgrade itself by fetching the upgrade file from a remote FTP server. This is done with the command **exeFTPUpgrade**.
5. By manually downloading upgrade files to the receiver. This upgrade procedure is explained below.

To manually upgrade the receiver, follow this procedure:

1. Reset the receiver into upgrade mode by entering the following command:
exeResetReceiver, Upgrade, none <CR>
2. Wait till the receiver outputs the string: “Ready for SUF download ...”. From that moment on, the receiver is waiting for an upgrade file to be downloaded. The file download must start within 200 seconds, otherwise the receiver will restart in normal mode.
3. Download the upgrade file to the receiver. Any of the receiver connections can be used. Make sure to send the file in binary mode, i.e. without changing its contents. During the download, the receiver outputs a progress indicator at regular interval.
4. At the end of the download, the receiver automatically executes the upgrade instructions and restarts with the new firmware version. You can check the firmware version by entering the following command:
lif,Identification <CR>

Before executing the upgrade instructions, the receiver checks the integrity of the downloaded file. If the file is corrupted, or is not a valid upgrade file, the receiver discards it and restarts in normal mode.

If the download is interrupted for any reason, the receiver will restart in normal mode after a timeout period of 200 seconds.

1.24 Check the Capabilities of your Receiver

The capabilities of your receiver are defined by the set of enabled features. The capabilities depend on the hardware, the current firmware version and the current set of permissions. Permissions are further explained in section 1.25.

The command **getReceiverCapabilities** lists the capabilities. You can also check them using the web interface or RxControl (go to *Help > Receiver Interface* and select the *Permitted Capabilities* tab):

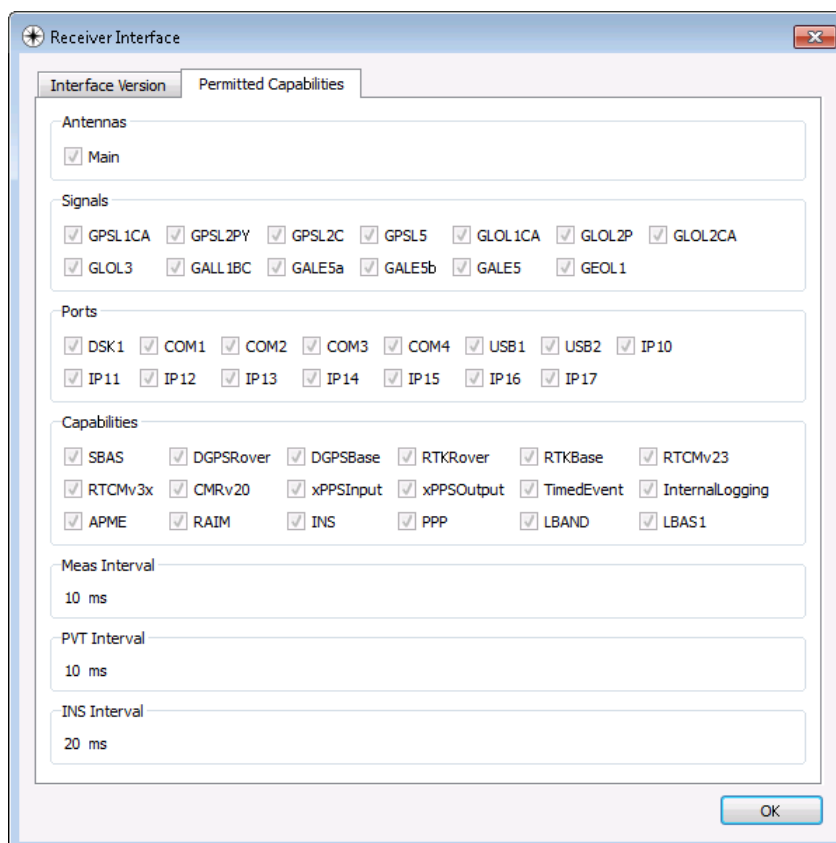


Figure 1-8: Example of receiver capabilities.

1.25 Check or Change the Permission File

The permission file lists which optional features (such as GLONASS, Galileo, RTK, ...) are permitted on your receiver, for how long they are permitted and in which region they are permitted.

The permission file is stored in the receiver's non-volatile memory, and can be checked with the command **lstInternalFile, Permissions**, or with RxControl by clicking *Help > Receiver Permissions*.

Note that, for a given feature to be enabled in the receiver, it must be permitted and the hardware and firmware version must support it. See also section 1.24.

Each receiver is delivered with a permission file applicable to that receiver only. To enable new options, the user can order a new permission file to Septentrio, and install it on his/her receiver using the standard upgrade procedure (see section 1.23).

Chapter 2

Operation Details

This chapter describes the key processes implemented in the receiver and explains how they can be configured.

2.1 Channel Allocation and Signal Selection

The receiver automatically allocates satellites to tracking channels up to the limit of the number of channels. It is possible to override this automatic channel allocation by forcing a satellite to a given channel with the **setChannelAllocation** command. Also, a subset of satellites or a whole constellation can be disabled with the **setSatelliteTracking** command.

For each satellite, the receiver tries to track all signal types enabled with the **setSignalTracking** command. For example, if that command enables the GPSL1CA, GPSL2PY and GLOL1CA signals, GPS satellites will be tracked in dual-frequency mode (GPSL1CA and GPSL2PY) and GLONASS satellites will be tracked in single-frequency mode (GLOL1CA only). It is a good practice to only enable those signal types that are needed for your application to avoid wasting tracking channels.

2.2 Generation of Measurements

For each tracked GNSS signal, the receiver generates a "measurement set", mainly consisting of the following observables:

- a pseudorange in meters;
- a carrier phase in cycles;
- a Doppler in Hertz;
- a carrier-to-noise ratio in dB-Hz.

All data in a measurement set, and all measurement sets are taken at the same time, which is referred to as the "measurement epoch". All the measurement sets taken at a given measurement epoch are output in a `MeasEpoch` SBF block.

Several commands affect the way the receiver produces and outputs measurements:

- The **setHealthMask** command can be used to filter out measurements from unhealthy satellites: these measurements will not be used by the PVT algorithm, nor will they be included in the `MeasEpoch` SBF block.
- To further reduce the code measurement noise, the receiver can be ordered to smooth the pseudorange by the carrier phase. This technique, sometimes referred to as a "Hatch filtering", allows to reduce the pseudorange noise and multipath. It is controlled by the **setSmoothingInterval** command and is disabled by default.
- The **setMultipathMitigation** command can be used to enable or disable the mitigation of multipath errors on the pseudorange and carrier phase measurements. It is enabled by default.

For advanced applications or in-depth signal analysis, the `MeasExtra` SBF block contains various additional data complementing the `MeasEpoch` SBF block. Among other things, this block reports the multipath correction applied to the pseudorange (allowing one to recompute the original pseudorange), and the observable variances.

2.2.1 Pilot vs. Data Component

Most modern GNSS signals consist of two components: a so-called pilot component and a data component. For such signals, the measurements are based on the pilot component for optimal performance. In particular, the reported C/N_0 value is that of the pilot component only.

For all signals having a pilot and a data component, the table below indicates which component is tracked by Septentrio receivers. Note that your particular receiver model may not support all of these signals.

| Signal | Signal component being used for measurement generation |
|------------------|--|
| GPS/QZSS L1C | L1C-P |
| GPS/QZSS L2C | L2C-L |
| GPS/QZSS L5 | L5-Q |
| GLONASS L3 | L3-Q |
| Galileo E1 | E1-C |
| Galileo E6 | E6-C |
| Galileo E5a | E5a-Q |
| Galileo E5b | E5b-Q |
| Galileo E5AltBOC | E5AltBOC-Q |
| BeiDou B1C | B1C_pilot |
| BeiDou B2a | B2a_pilot |
| BeiDou B2b | B2b_I |

See also the corresponding RINEX observation code in section 4.1.10.

2.3 Time Management

The receiver time is kept in two counters: the time-of-week counter in integer milliseconds (TOW) and the week number counter (WNC). TOW and WNC follow the GPS convention, i.e. WNC counts the number of complete weeks elapsed since January 6, 1980, and there are no leap seconds. The TOW and WNC counters are reported in all SBF blocks.

The synchronization of TOW and WNC involves the following steps:

- Upon powering up the receiver, TOW and WNC are assumed unknown, and set to a "Do-Not-Use value" in the SBF blocks.
- The transmission time-of-week and week number are decoded from the GNSS satellites (all constellations considered, not only GPS):
 - As soon as the first time-of-week is decoded, the TOW counter is initialized to within 20 ms of GPS time and starts counting. This is also the time when the receiver starts generating GNSS measurements (pseudoranges and carrier phases).
 - As soon as the week number is decoded (which can be either simultaneously with the time-of-week, or several seconds later), the WNC counter is set and starts counting.
- After the first position and time fix has been computed (for which measurements from at least 4 satellites are required), TOW is set to within X milliseconds of GPS time. This is done by introducing a jump of an integer number of milliseconds in the TOW counter. X is the maximal allowed offset between the receiver time and GPS time, and is set by the **setClockSyncThreshold** command (by default, X=0.5ms). This initial clock synchronization leads to a simultaneous jump in all the pseudorange and carrier phase measurements.

The synchronization level is given by three status bits (TOWSET, WNSET and FINETIME) available both in the `ReceiverTime` SBF block and the `ReceiverStatus` SBF block.

The receiver clock can be configured in free-running mode, or in steered mode using the command **setClockSyncThreshold**.

2.3.1 Free-Running Clock

In free-running mode, the receiver time slowly drifts with respect to GNSS time. The receiver continuously monitors this time offset: this is the clock bias term computed in the PVT solution, as provided in the `RxClkBias` field of the `PVTCartesian` and `PVTGeodetic` SBF blocks. A clock jump of an integer number of milliseconds is imposed on the receiver clock each time the clock bias exceeds X milliseconds by an absolute value (X is set by **setClockSyncThreshold**). This typically results in a saw-tooth profile similar to that shown in Figure 2-1. In this example, X=0.5ms and each time the clock bias becomes greater than 0.5ms, a jump of 1ms is applied.

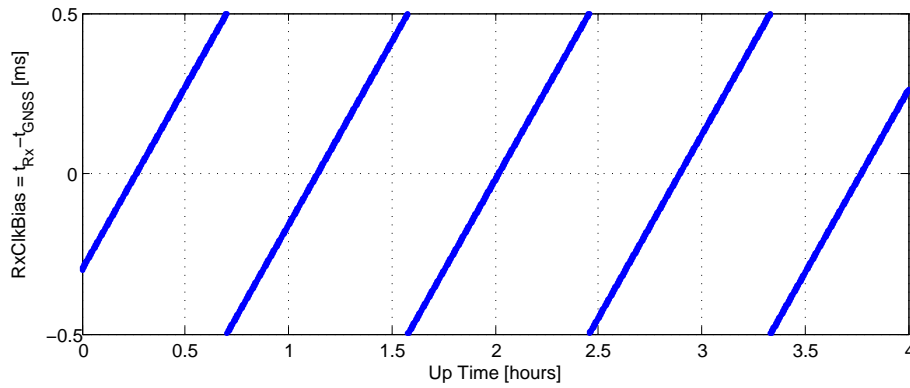


Figure 2-1: Example of the evolution of the receiver time offset with respect to the GNSS time in free-running mode.

Note that the clock bias is computed with respect to a particular GNSS time system (GPS, Galileo, BeiDou, ...) as set with the **setTimingSystem** command. The time offset between those systems is at the level of a few tens of nanoseconds only, and is ignored when applying the X-millisecond threshold.

When a receiver clock jump occurs, all measurements jump simultaneously. For example, a clock jump of 1ms will cause all the pseudoranges to jump by $0.001s \times \text{velocity_of_light} = 299792.458m$. The jump is applied on both the pseudoranges and the carrier phase measurements, and hence will not be seen on a code-minus-phase plot.

The cumulated clock jumps since the last reset of the receiver is reported in the `CumClkJumps` field of the `MeasEpoch` SBF block.

2.3.2 Clock Steering

In steered mode, the receiver time is continuously steered to a GNSS time. The particular time realization (GPS, Galileo, BeiDou, ...) is generally irrelevant as the difference is very small. It can be selected with the **setTimingSystem** command if needed.

In the example of Figure 2-1, if the user would have enabled clock steering one hour after start up of the receiver, the clock bias would have been like in Figure 2-2 below.

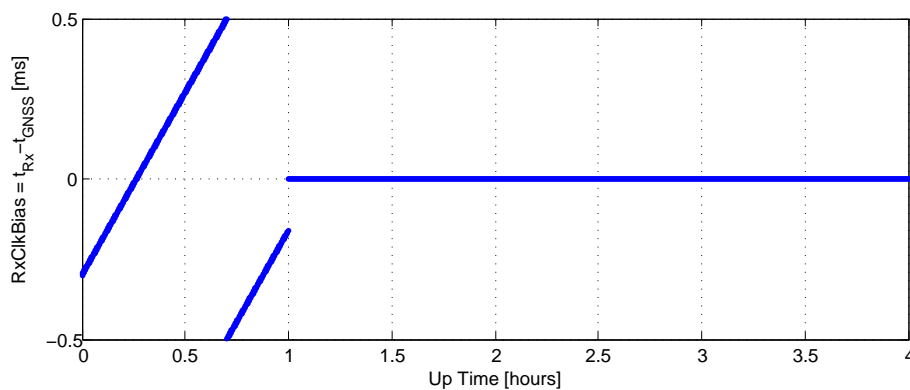


Figure 2-2: Effect of clock steering on the clock bias (clock steering enabled at an up time of 1 hour).

Clock steering accuracy is dependent on the satellite visibility, and it is recommended to only enable it under open-sky conditions.

Bit 3 of the `CommonFlags` field of the `MeasEpoch` SBF block indicates whether clock steering is active or not.



Note for the users of a GNSS constellation simulator:

When using a constellation simulator, make sure to set the simulation time after January 01, 2016. The receiver time will be incorrect before that date.

For correct time determination, it is mandatory to reset the receiver before every (re)start of the simulation.

2.4 Computation of Position, Velocity, and Time (PVT Solution)

The receiver computes the position, velocity and time (PVT) based on the pseudoranges, the Doppler measurements and, if applicable, the differential corrections.

The availability of the PVT depends on:

- the number of available pseudoranges and Doppler measurements, equal to the number of tracked satellites, or a subset of them as specified by the `setSatelliteUsage` command;
- the number of valid sets of broadcast ephemerides, which are needed to compute the position, velocity, and clock bias for each tracked satellite;
- the number of valid sets of fast and long-term SBAS corrections and their age in the case of SBAS-aided positioning;
- the number of valid differential corrections and their age in the case of DGPS/RTK positioning.

A position fix requires a minimum of 4 tracked satellites with associated ephemerides. When a PVT solution is not available, PVT-related SBF blocks are still output with all the numeric fields set to Do-Not-Use values, and with the `Error` field set to indicate the source of the problem.

The accuracy of the PVT depends on:

- The signal level.
- The geometry of the satellite constellation expressed in the DOP values: these values indicate the ratio of positional errors to range errors and are computed on the basis of the error propagation theory. When the DOP is high, the accuracy of positioning will be low.
- The number of available satellites: the more satellites are available, the lower the DOP. Measurement redundancy also enables better outlier detection.
- Multipath errors on the pseudorange measurements: multipath errors can be largely attenuated by enabling the APME multipath mitigation method (see `setMultipathMitigation`) and/or using code smoothing (see `setSmoothingInterval`).
- The PVT mode as set by the `setPVTMode` command.
- The data available to compute ionospheric delays (see `setIonosphereModel`).

- The choice of the dynamics model: if the dynamics parameter set by the **setReceiverDynamics** command does not correspond to the actual dynamics of the receiver platform, the position estimation will be sub-optimal.

The a-posteriori accuracy estimate of the computed position is reported in the variance-covariance matrix, which comes in the `PosCovCartesian` and `PosCovGeodetic` SBF blocks. This accuracy estimate is based on the assumed measurement noise model and may differ from actual errors due to many external factors, most of all multipath.

2.4.1 SBAS Positioning

SBAS, which stands for 'Space Based Augmentation System', enables differential operation over a large area with associated integrity information. System errors are computed from a dataset recorded over a continental area and disseminated via a geostationary satellite. The operation of SBAS is documented in the RTCA DO 229 standard. SBAS improves over DGPS corrections, in that it provides system corrections (ionosphere corrections and ephemeris long-term corrections) next to range corrections (the "fast corrections" in the DO 229 terminology).

The receiver provides an SBAS-aided position when it has sufficient satellites with at least fast and long-term corrections. The corrections are used as long as their applicability has not timed out. During the time-out interval the receiver applies correction degradation using the information received in message type (MT) 07 and 10.

By default, the receiver selects the SBAS satellite with the most SBAS corrections available. With the **setSBASCorrections** command, it is possible to force the receiver to use a particular SBAS satellite or a particular SBAS provider.

2.4.2 DGPS Positioning

DGPS (Differential GPS) is a pseudorange-based positioning technique where GNSS system errors are reduced by the use of range corrections. To work in DGPS rover mode, the receiver needs to receive differential corrections in the RTCM or CMR format.

Note on the RTCM v2.x corrections: the receiver takes the τ_{gd} parameter transmitted by the GPS satellites into account during the computation of the pseudorange corrections, as prescribed in v2.2 and v2.3 of the RTCM standard. The RTCM standard version 2.1 is ambiguous in this respect: it does neither prescribe nor discourage the use of τ_{gd} . The receiver can be configured in both modes using the command **setRTCMv2Compatibility**.

2.4.3 RTK Positioning

Real-Time Kinematic (RTK) is a carrier phase positioning method where the carrier phase ambiguities are estimated in a kinematic mode.

To work in RTK mode, the receiver requires the reception of RTK messages. Both the RTCM and the CMR message formats are supported. The base station providing these RTK messages can be either static or moving. Multiple-base RTK is not supported: by default, the receiver selects the nearest base station if more than one base station is available.

In RTK mode, the absolute position is reported in the `PVTCartesian` or `PVTGeodetic` SBF blocks, and the baseline vector is reported in the `BaseVectorCart` and `BaseVectorGeod` SBF blocks.

2.4.3.1 Integer Ambiguities (RTK-fixed)

The key to high-accuracy carrier phase positioning is the fixing of the carrier phase integer ambiguities. Under normal circumstances the receiver will compute the integer ambiguities within several seconds and yield an RTK-fixed solution with centimeter-level accuracy. The less accurate pseudorange measurements will not be used. As long as no cycle slips or loss-of-lock events occurs, the carrier phase position is readily available.

RTK with fixed ambiguities is also commonly referred to as phase positioning using 'On-The-Fly' (OTF) ambiguity fixing. The RTK positioning engine of the receiver uses the LAMBDA method⁽¹⁾ developed at Delft University, department of Geodesy.

2.4.3.2 Floating Ambiguities (RTK-float)

When data availability is low (e.g. low number of satellites) or when the data are not of sufficient quality (high multipath), the receiver will not fix the carrier phase ambiguities to their integer value, but will keep them floating. At the start of the RTK-float convergence process, the position accuracy is equal to that of code-based DGPS. Over the course of several minutes the positional accuracy will converge from several decimeters to several centimeters as the floating ambiguities become more accurate.

2.4.3.3 Moving Base

In RTK, the base station does not necessarily need to be static. In some applications, one is interested in the relative positioning of two moving vehicles. In that case, both base and rover receivers are mounted on moving platforms and the RTK engine computes the baseline between them. If both base and rover receivers are mounted on the same vehicle, the baseline can be used to determine the orientation of the vehicle (see section 1.8). If accurate absolute positioning is required in addition to relative positioning, the moving base receiver can operate in RTK mode and get RTK correction from a fixed base station (see section 1.5.2).

With the command `setDiffCorrUsage`, the rover receiver must be informed that the base is moving. The baseline coordinates and orientation is contained in the `BaseVectorCart` and `BaseVectorGeod` SBF blocks.

Due to delays in the generation and transmission of the RTK data (base station position and measurements) from the base to the rover, the RTK data has a certain "age" when received by the rover. When operating with a moving base station, the RTK engine is of the "low-latency" type. This means that, when the rover computes its RTK position at time t_0 , it extrapolates the most recently received RTK data from the base to time t_0 . The accuracy of this extrapolation, and hence the accuracy of the final RTK solution, degrades with the age of the RTK data.

⁽¹⁾ Teunissen, P.J.G., and C.C.J.M. Tiberius (1994) Integer least-squares estimation of the GPS phase ambiguities. Proceedings of International Symposium on Kinematic Systems in Geodesy, Geomatics and Navigation KIS'94, Banff, Canada, August 30-September 2, pp. 221-231.

Therefore it is essential that the base sends its position and measurements at a sufficient rate.

The default rate of 1 Hz is adequate in the case of a static base station, but is generally too low for a moving base with a non-constant velocity. In moving base operation, it is recommended to set the RTK data rate to its maximum allowed value of 10 Hz. Not only the RTK data rate, but also the communication link latency is important. Especially in moving base, it is essential to have a low-latency communication link between base and rover.

2.4.4 Transition between PVT Modes

Whenever possible, the transitions from a more accurate PVT mode to a less accurate PVT mode are smooth. For example, when switching from RTK to DGPS mode, the position does not exhibit a sudden jump, but slowly degrades from RTK to DGPS accuracy.

2.4.5 PVT Latency

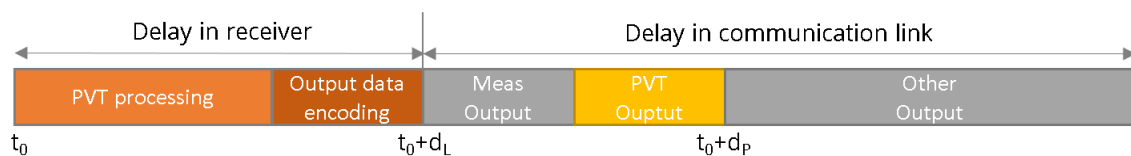


Figure 2-3: PVT latency.

The total PVT latency is the delay between the time of applicability of the PVT (t_0) and its availability to the user application ($t_0 + d_P$). It is the sum of the PVT processing time, the output data encoding time, and the time needed to transmit the data over the communication link. The processing and encoding time (d_L) is measured by the receiver and is reported in the `Latency` field of the `PVTCartesian` and `PVTGeodetic` SBF blocks. The communication latency (grey and yellow bars) entirely depends on the communication link and is unknown to the receiver.

The shortest total PVT latency is obtained when the receiver only needs to output PVT data (e.g. only the `PVTCartesian` SBF block). Latency increases when more data need to be output. Note that the receiver always outputs raw measurements, e.g. the `MeasEpoch` SBF block, before PVT data. Therefore, when using slow communication links, enabling the measurement output can have a significant impact on the total PVT latency.

2.4.6 Datum Transformation

By default the datum to which the coordinates refer depends on the positioning mode. For standalone and SBAS positioning for example, the coordinates refer to a global datum: WGS84 or ITRS. When using DGPS or RTK corrections from a DGPS/RTK provider, the coordinates usually refer to a regional datum (e.g. ETRS89 in Europe).

Recent realisations of WGS84 and ITRS are closely aligned and the difference can be neglected in most cases. The receiver considers them equivalent. However, regional datums

may significantly differ from WGS84/ITRS, which may lead to coordinate jumps when switching between different positioning modes.

2.4.6.1 Transformation to Regional Datum

It is possible to avoid this datum shift by configuring the receiver to transform all coordinates to the regional datum used by the RTK base stations. This is done with the **setGeodeticDatum** command. The receiver knows the transformation parameters applicable to the most common datums (e.g. ETRS89 or NAD83), but user datums can also be defined with the **setUserDatum** command.

Coordinates in the `PVTCartesian` and `PVTGeodetic` SBF blocks refer to the datum selected in **setGeodeticDatum**. The datum can be checked by decoding the `Datum` field of these blocks.

2.4.6.2 Transformation to Local Datum

Sometimes it is needed to relate the coordinates to a local datum. Some RTK networks provide the necessary transformation and projection parameters as part of their RTCM stream, in message types 1021 to 1027.

The local geodetic coordinates (latitude, longitude and height) are reported in the `PosLocal` SBF block, and the plane grid coordinates (easting, northing, height) are reported in the `PosProjected` SBF block.

The following conditions must be met for the receiver to provide local coordinates from the information sent by the RTK network:

- the usage of RTCM v3.x MT1021-1027 must be enabled by the command **setRTCMv3Usage** (these messages are enabled by default).
- the local coordinate operations must be set to `NETWORK` with the **setLocalCoordOperation** command (this is the default).
- the complete set of datum transformation messages must have been received from the network. Plane grid coordinates are only available if the network supports one of the messages in the 1025-1027 range. Otherwise, only the local latitude, longitude and height are available.
- the position must be in the area of validity of the transformation parameters.
- to continue to get unbiased local coordinates when the positioning mode is not DGPS or RTK, the network regional datum must be set with the **setGeodeticDatum** command. See section 2.4.6.1.

A number of local datum transformations are preloaded in the receiver (the list can be retrieved with the **1stLocalCoordOperations** command). If your local datum belongs to this list, local coordinates can be computed without information from the RTK network. See the **setLocalCoordOperation** command for details.

2.5 Antenna Effects

To achieve the highest positioning precision, it is essential to take antenna effects into account.

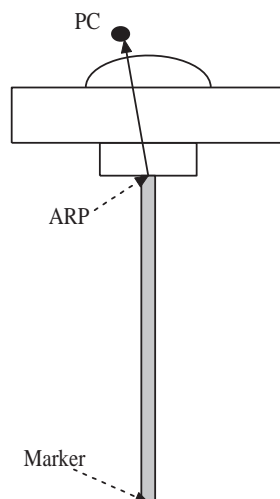


Figure 2-4: Antenna mount.

The GNSS measurements (pseudoranges and carrier phases observables) refer to a theoretical point in space called the phase center (noted PC in Figure 2-4). The position of this point is dependent on the elevation of the satellite and on the frequency band. It varies with time and it is different for the different GNSS frequency bands. The phase center variation can reach a few centimeters.

If no correction is applied, the computed position refers to an average phase center with no easy link with the antenna physical element. This average phase center fluctuates with time and cannot be used for accurate millimeter-level positioning.

For high-precision positioning, the GNSS measurements need to be corrected in such a way that they all refer to a common and stable point in space. That point is referred to as the antenna reference point (ARP). For convenience, it is usually selected at the center of the bottom surface of the antenna. PC to ARP calibration tables are available on Internet for a large number of geodetic-grade antennas. For example, the National Geodetic Survey (NGS) publishes calibration tables that can be downloaded from the following URL:

<https://www.ngs.noaa.gov/ANTCAL/>.

The antenna naming convention in such table is the one adopted by the IGS Central Bureau.

The receiver has a similar table in its non-volatile memory. This table can be upgraded following the standard upgrade procedure as described in section 1.23 (the upgrade file is named `ant_info.suf`).

2.5.1 Antenna Effects in Rover Mode

If the user specifies the type of his/her antenna using the `setAntennaOffset` command, the receiver compensates for the phase center variation in all rover positioning modes. If the antenna is not specified, or the antenna type is not present in the built-in antenna calibration

file, the receiver cannot make the distinction between phase center and ARP, and the position accuracy is slightly degraded, especially in the height component.

The point to be positioned is the "marker" (see Figure 2-4). The offset between the ARP and the marker is a function of the antenna monumentation. It must be measured by the user and specified with the **setAntennaOffset** command.

The absolute position reported in the `PVTCartesian` and `PVTGeodetic` SBF blocks is always the marker position.

In DGPS or RTK modes, the receiver needs to know the type of antenna used at the base station in order to properly compensate for the phase center variation at the base. This information is typically included in the correction stream received from the base station.

The base-to-rover baseline coordinates in the `BaseVectorCart` and `BaseVectorGeod` SBF blocks is from ARP to ARP unless the receiver is not able to properly compensate for the phase center variation at base or rover. Refer to the description of the `BaseVectorCart` SBF blocks for details.

2.5.2 Antenna Effects in Base Mode

Phase center compensation always happens at the rover side. The base station sends uncompensated measurements in its differential correction messages, together with its ARP position and antenna type. The antenna type information allows the rover to apply the appropriate phase center compensation to the base measurements.

When setting up a base station, it is therefore important that the coordinates entered with the **setStaticPosGeodetic** or the **setStaticPosCartesian** commands refer to the ARP. The coordinates are encoded without change in the relevant differential correction messages. The antenna type must be provided with the **setAntennaOffset** command.

Chapter 3

Command Line Reference

3.1 Command Line Interface Outline

The receiver outputs a prompt when it is ready to accept a user command. The prompt is of the form:

```
CD>
```

where `CD` is the connection descriptor of the current connection, e.g. `COM1` (see section 1.1.5).

The prompt indicates the termination of the processing of a given command. When sending multiple commands to the receiver, it is necessary to wait for the prompt between each command.

Sometimes a connection is not configured to accept user commands, for example because it is put into differential correction input mode. A way to force a connection to accept commands is to send a succession of ten "S" characters to that connection and then to press the enter key (`SSSSSSSSSS<CR>`). See also the description of the **setDataInOut** command.

3.1.1 Command Types

Most commands fall into one of the following categories:

- set**-commands to change one or more configuration parameters;
- get**-commands to get the current value of one or more configuration parameters;
- exe**-commands to initiate some action;
- lst**-commands to retrieve the contents of internal files or list the commands.

Each **set**-command has its **get**-counterpart, but the opposite is not true. For instance, the **setNMEAOutput** command has a corresponding **getNMEAOutput**, but **getReceiverCapabilities** has no **set**-counterpart. Each **exe**-command also has its **get**-counterpart which can be used to retrieve the parameters of the last invocation of the command.

3.1.2 Command Line Syntax

Each ASCII command line consists of a command name optionally followed by a list of arguments and terminated by `<CR>`, `<LF>` or `<CR><LF>` character(s) usually corresponding to pressing the "Enter" key on the keyboard.

To minimize typing effort when sending commands by hand, the command name can be replaced by its 3-5 character mnemonic. For instance, **grc** can be used instead of **getReceiverCapabilities**.

The receiver is case insensitive when interpreting a command line.

The maximum length of any ASCII command line is 2000 characters.

For commands requiring arguments, the comma "," must be used to separate the arguments from each other and from the command's name. Any number of spaces can be inserted before and after the comma.

Each argument of a **set**-command corresponds to a single configuration parameter in the receiver. Usually, each of these configuration parameters can be set independently of the others, so most of the **set**-command's arguments are optional. Optional arguments can be omitted but if omitted arguments are followed by non-omitted ones, a corresponding number of commas must be entered. Omitted arguments always keep their current value.

3.1.3 Command Replies

The reply to ASCII commands always starts with "\$R" and ends with <CR><LF> followed by the prompt corresponding to the connection descriptor you are connected to.

The following types of replies are defined for ASCII commands:

- For comment lines (user input beginning with "#") or empty commands (just pressing "Enter"), the receiver replies with the prompt.

```
COM1> # This is a comment! <CR>
COM1>
```

- For invalid commands, the reply is an error message, always beginning with the keyword "\$R?" followed by an error message.
- For all valid **set**-, **get**- and **exe**-commands, the first line of the reply is an exact copy of the command as entered by the user, preceded with "\$R:". One or more additional lines are printed depending on the command. These lines report the configuration of the receiver after execution of the command.

```
COM1>setNMEAOutput, stream1, com1, GGA, sec1 <CR>
$R: setNMEAOutput, stream1, com1, GGA, sec1
    NMEAOutput, stream1, com1, GGA, sec1
COM1>
```

For commands which reset or halt the receiver (e.g. **exeResetReceiver**), the reply is terminated by "STOP>" instead of the standard prompt, to indicate that no further command can be entered.

- For all valid **lst**-commands, the first line of the reply is an exact copy of the command as entered by the user, preceded with "\$R:". The second line is a pseudo-prompt "---->" and the remaining of the reply is a succession of formatted blocks, each of them starting with "\$-- BLOCK".

ASCII replies to **set**-, **get**- and **exe**-commands, including the terminating prompt, are atomic: they cannot be broken by other messages from the receivers. For the **lst**-commands, the replies may consist of several atomic formatted blocks which can be interleaved with other output data. If more than one formatted block is output for a **lst**-command, each of the intermediate blocks is terminated with a pseudo-prompt "**----->**". The normal prompt will only be used to terminate the last formatted block of the reply so that one single prompt is always associated with one command.

3.1.4 Command Syntax Tables

All ASCII commands are listed in section 3.2. Each command is introduced by a compact formal description of it called a "syntax table". Syntax tables contain a complete list of arguments with their possible values and default settings when applicable.

The conventions used in syntax tables are explained below by taking a fictitious **setCommandName** command as example. The syntax table for that command is:

| scn gcn | setCommandName getCommandName | Cd Cd | Distance | Time | Message (120) | Password (40) | Mode | PRN |
|------------|----------------------------------|-------------------------|---------------------------------------|--------------|----------------|---------------|-----------|---|
| | | + Com1 + Com2 all | -20.00 ... <u>0.00</u> ... 20.00 m | 1 ... 50 sec | <u>Unknown</u> | | on off | none + G01 ... G32 + S120 ... S138 + SBAS + <u>GPS</u> all |

[GUI: Navigation > Receiver Operation > Example](#)

The associated **set**- and **get**-commands are always described in pairs, and the same holds for the associated **exe**- and **get**-commands. The command name and its equivalent 3-5 character mnemonic are printed in the first two columns. The list of arguments for the **set**- and **get**-commands is listed in the first and second row respectively. In our example, **setCommandName** can accept up to 6 arguments and **getCommandName** only accepts one argument. Mandatory arguments are printed in bold face. Besides the mandatory arguments, at least one of the optional arguments must be provided in the command line.

The list of possible values for each argument is printed under each of them. Default values for optional arguments are underlined.

The link printed in blue under the syntax table shows under which GUI menu the command can be found.

The fictitious command above contains all the possible argument types:

- **Cd** serves as an index for all following arguments. This can be noticed by the possibility to use this argument in the **get**-command. This argument is mandatory in the **set**-command. The accepted values are **COM1**, **COM2** and **all**, corresponding to the first or second serial ports, or to both of them respectively. The "+" sign before the first two values indicates that they can be combined to address both serial ports in the same command.

Examples: `COM1`, `COM1+COM2`, `all` (which is actually an alias for `COM1+COM2`).

- *Distance* is a number between `-20` and `20` with a default value of `0`, and up to 2 decimal digits. An error is returned if more digits are provided. The "m" indicates that the value is expressed in meters. Note that this "m" should not be typed when entering the command.

Examples: `20`, `10.3`, `-2.34`

- *Time* is a number between `1` and `50`, with no decimal digit (i.e. this is an integer value). This value is expressed in seconds.

Examples: `1`, `10`

- *Message* is a string with a maximum length of 120 characters. The default value of that argument is "Unknown". When spaces must to be used, the string has to be put between quotes and these enclosing quotes are not considered part of the string. The list of allowed characters in strings is:

```
ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789
!#%&'()*+,-./:;<=>?[\]^_`{|}~
```

Example: `"Hello World!"`

- *Password* is a password argument with a maximum length of 20 characters (40/2). Password arguments are always named *Password* or *Key*. Only half of the total password length is available to the user, the other half being reserved by the system. Passwords are obfuscated by the receiver so that they cannot be read back in command replies. In addition to the characters above (see the *Message* argument), special characters are allowed in passwords using the corresponding escape sequence:
 - Type `%%DQ` to obtain `"`
 - Type `%%SQ` to obtain `'`
 - Type `%%DL` to obtain `$`
 - Type `%%AM` to obtain `&`
 - Type `%%CM` to obtain `,`

Example: `"ab%%AM123"`

- *Mode* is a range of individual values that cannot be combined (they are not preceded by a "+" sign). Either `off` or `on` can be selected for that argument and the default value is `on`.

Example: `on`

- *PRN* is a range of values that can be combined together with the "+" sign. The default value `GPS` is an alias for `G01+G02+ ... +G32`, `SBAS` is an alias for `S120+ ... +S138` and `all` an alias for `GPS+SBAS`. A "+" sign can be set before the argument to indicate to add the specified value(s) to the current list. If the value `"none"` is supported (which is the case in this example), a "-" sign can be set before the argument to remove the specified value(s) from the current list. It is possible to add or remove multiple values at once by "adding" or "subtracting" them with the "+" or "-" operator. However, "+" and "-" can never be combined in a single argument.

Examples: `G01+G02`, `+G03`, `GPS+S120`, `+G04+G05`, `-S122-S123`, `-GPS`

3.2 Command Definitions

3.2.1 Receiver Administration

| lai | lstAntennaInfo | Antenna | | | | | | | | |
|-----|----------------|----------------|--|--|--|--|--|--|--|--|
| | | Overview | | | | | | | | |
| | | Main | | | | | | | | |
| | | Aux1 | | | | | | | | |
| | | [antenna name] | | | | | | | | |

Use this command with the argument *Antenna* set to *Overview* to get a list of all antenna names for which the receiver knows the phase center variation parameters (see section 2.5).

Use this command with the argument *Antenna* set to one of the antenna names returned by **lstAntennaInfo**, **Overview** to retrieve the complete phase center variation parameters for that particular antenna. Do not forget to enclose the name between double quotes if it contains whitespaces.

Using the values *Main* or *Aux1* will return the phase center variation parameters corresponding to the main or auxiliary antenna type as specified in the command **setAntennaOffset**.

Examples

```
COM1> lai, Overview <CR>
$R; lai, Overview
<?xml version="1.0" encoding="ISO-8859-1" ?>
<AntennaInfo version="0.1">
  <Antenna ID="AERAT1675_29      NONE"/>
  <Antenna ID="AERAT2775_150    NONE"/>
  <Antenna ID="AERAT2775_159      "/>
  <Antenna ID="AERAT2775_159    SPKE"/>
  <Antenna ID="AERAT2775_160      "/>
  ...
  <Antenna ID="TRM_R8_GNSS      "/>
</AntennaInfo>
COM1>

COM1> lai, "AERAT2775_159 SPKE"<CR>
$R; lai,"AERAT2775_159  SPKE"
<?xml version="1.0" encoding="ISO-8859-1" ?>
<AntennaInfo version="0.1">
  <Antenna ID="AERAT2775_159    SPKE"/>
  <L1>
    <offset north="0.4" east="0.1" up="77.2"/>
    <phase elevation="90" value="0.0"/>
    <phase elevation="85" value="-0.2"/>
    ...
    <phase elevation=" 5" value="0.0"/>
    <phase elevation=" 0" value="0.0"/>
  </L2>
</AntennaInfo>
COM1>
```

| | | | | | | | | | | |
|------|----------------|--------------|--|--|--|--|--|--|--|--|
| help | lstCommandHelp | Action (255) | | | | | | | | |
| | | Overview | | | | | | | | |

Use this command to retrieve a short description of the ASCII command-line interface.

When invoking this command with the `Overview` argument, the receiver returns the list of all supported **set-**, **get-** and **exe-**commands. The **lstCommandHelp** command can also be called with any supported **set-**, **get-** or **exe-**command (the full name or the mnemonic) as argument.

The reply to this command is free-formatted and subject to change in future versions of the receiver's software. This command is designed to be used by human users. When building software applications, it is recommended to use the formal **lstMIBDescription**.

Examples

```
COM1> help, Overview <CR>
```

```
$R; help, Overview
```

```
$-- BLOCK 1 / 0
```

```
MENU: communication
```

```
GROUP: ioSelection
```

```
sdio, setDataInOut
```

```
gdio, getDataInOut
```

```
...
```

```
COM1>
```

```
COM1> help, getReceiverCapabilities <CR>
```

```
$R; help, getReceiverCapabilities
```

```
... Here comes a description of getReceiverCapabilities ...
```

```
COM1>
```

```
COM1> help, grc <CR>
```

```
$R; help, grc
```

```
... Here comes a description of getReceiverCapabilities ...
```

```
COM1>
```

| lcf | IstConfigFile | File | | | | | | | | |
|-----|---------------|--|--|--|--|--|--|--|--|--|
| | | Current Boot RxDefault User1 User2 | | | | | | | | |

Use this command to list the contents of a configuration file. A configuration file contains the list of user commands needed to bring the receiver from factory default to a certain non-default configuration.

The following configuration files are available:

| File | Description |
|-----------|--|
| Current | The current configuration. |
| Boot | The configuration that is loaded at boot time, after a power cycle or after a hard reset (see also the exeResetReceiver command). |
| RxDefault | The default configuration. |
| User1 | A user-defined configuration. |
| User2 | A user-defined configuration. |

See also the related **exeCopyConfigFile** command to learn how to manage configuration files.

Example

```
COM1> smp, TestMarker <CR>
$R: smp, TestMarker
    MarkerParameters, "TestMarker"
COM1> lcf, Current <CR>
$R; lcf, Current
$-- BLOCK 1 / 1
    setMarkerParameters, "TestMarker"
COM1>
```

| eccf gccf | exeCopyConfigFile getCopyConfigFile | Source | Target | | | | | | | |
|--------------|--|--|-----------------------------------|--|--|--|--|--|--|--|
| | | Current Boot User1 User2 RxDefault | Current Boot User1 User2 | | | | | | | |

RxControl: File > Copy Configuration

Use this command to manage the configuration files. See the **1stConfigFile** command for a description of the different configuration files.

With this command, the user can copy configurations files into other configuration files. For instance, copying the `Current` file into the `Boot` file makes that the receiver will always boot in the current configuration.

Examples

To save the current configuration in the `Boot` file, use:

```
COM1> eccf, Current, Boot <CR>
$R: eccf, Current, Boot
    CopyConfigFile, Current, Boot
COM1>
```

To load the configuration stored in `User1`, use:

```
COM1> eccf, User1, Current <CR>
$R: eccf, User1, Current
    CopyConfigFile, User1, Current
COM1>
```

| | | | | | | | | | | |
|------|-----------------|--------|--|--|--|--|--|--|--|--|
| seth | setEthernetMode | Enable | | | | | | | | |
| geth | getEthernetMode | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

RxControl: Communication > Network Settings > General

Use this command to turn the Ethernet interface on or off.



Before turning Ethernet off, make sure that the receiver will still be accessible through another interface (serial, USB,...). This is especially important for remote receivers. It will not be possible to access the receiver over Ethernet after invoking the **setEthernetMode, off** command.

Example

```
COM1> seth, on<CR>
$R: seth, on
      EthernetMode, on
COM1>
```

| efup gfup | exeFTPUpgrade getFTPUpgrade | Server (32) | Path (64) | Login (12) | Password (24) | | | | | |
|--------------|--------------------------------|-------------|-----------|------------|---------------|--|--|--|--|--|
| | | | | anonymous | | | | | | |

RxControl: File > Upgrade Receiver using FTP

Use this command to upgrade the receiver by fetching the upgrade file from an FTP server. The arguments specify the FTP server, the path to the upgrade file (.SUF format), and the login and password to use.

This procedure always resets the receiver, even if the upgrade file does not exist.

Before resetting, the receiver broadcasts a "\$TE ResetReceiver" message to all active communication ports, to inform all users of the imminent reset.

After a reset, the user may have to adapt the communication settings of his/her terminal program as they may be reset to their default values.

Example

```
COM1> efup, myftp.com, /tst.suf, user, password<CR>
$R: efup, myftp.com, /tst.suf, user, password
    FTPUpgrade, "myftp.com", "/tst.suf", "user",
        "I301I5B8DG8E7QTT6RZT7IQ"
STOP>
$TE ResetReceiver Upgrade
STOP>
```

| lif | IstInternalFile | File | | | | | | | | |
|-----|-----------------|--|--|--|--|--|--|--|--|--|
| | | Permissions Identification Debug Error SisError DiffCorrError SetupError IPParameters RxMessages | | | | | | | | |

Use this command to retrieve the contents of one of the receiver internal files:

| File | Description |
|----------------|---|
| Permissions | List of permitted options in your receiver. |
| Identification | Information about the different components being part of the receiver (e.g. serial number, firmware version, etc.). |
| Debug | Program flow information that can help support engineers to debug certain issues. |
| Error | Last internal error reports. |
| SisError | Last detected signal-in-space anomalies. |
| DiffCorrError | Last detected anomalies in the incoming differential correction streams. |
| SetupError | Last detected anomalies in the receiver setup. |
| IPParameters | Hostname, MAC and IP addresses, DNS addresses, netmask and gateway. |
| RxMessages | Event log from the receiver. This is the list of the recent event log messages. These messages are also available in the RxMessage SBF block. |

Example

```
COM1> lif, Permissions <CR>
$R; lif, Permissions
---->
$-- BLOCK 1 / 1
... here follows the permission file ...
COM1>
```

| lmd | lstMIBDescription | File (255) | | | | | | | | |
|-----|-------------------|----------------------|--|--|--|--|--|--|--|--|
| | | Overview SBFTable | | | | | | | | |

Use this command to retrieve the ASN.1-compliant syntax of the user command interface. The name of the command refers to the MIB (Management Information Base), which holds the whole receiver configuration. There is a one-to-one relationship between the formal MIB description and the ASCII command-line interface for all **exe-**, **get-** and **set-**commands.

When the value `Overview` is used, the general syntax of the interface is returned. With the value `SBFTable`, the receiver will output the list of supported SBF blocks and whether they can be output at a user-selectable rate or not. The **lstMIBDescription** command can also be called with every supported **set-**, **get-** or **exe-**command (the full name or the mnemonic) as argument.

No formal description of the **lst-**commands can be retrieved with **lstMIBDescription**.

Examples

```
COM1> lmd, Overview <CR>
$R; lmd, Overview
... Here comes the generic command syntax ...
COM1>
```

```
COM1> lmd, grc <CR>
$R; lmd, grc
... Here comes the description of getReceiverCapabilities ...
COM1>
```


| | | | | | | | | | | |
|-----|-------------------------|--|--|--|--|--|--|--|--|--|
| grc | getReceiverCapabilities | | | | | | | | | |
| | | | | | | | | | | |

[RxControl: Help > Receiver Interface > Permitted Capabilities](#)

Use this command to retrieve the so-called "capabilities" of your receiver. The first returned value is the list of supported antenna(s), followed by the list of supported signals, the list of available communication ports and the list of enabled features.

The three values at the end of the reply line correspond to the default measurement interval, the default PVT interval and the default integrated INS/GNSS interval respectively. This is the interval at which the corresponding SBF blocks are output when the `OnChange` rate is selected with the `setSBFOutput` command. These values are expressed in milliseconds.

Each of the above-mentioned lists contain one or more of the elements in the tables below.

| Antennas | Description |
|----------|------------------------------|
| Main | The receiver's main antenna. |
| Aux1 | First auxiliary antenna. |

| Signals | Description |
|---------|---------------------------|
| GPSL1CA | GPS L1 C/A signal. |
| GPSL2PY | GPS L2 P(Y) signal. |
| GPSL2C | GPS L2 C signal. |
| GPSL5 | GPS L5 signal. |
| GLOL1CA | GLONASS L1 C/A signal. |
| GLOL2P | GLONASS L2 P signal. |
| GLOL2CA | GLONASS L2 C/A signal. |
| GLOL3 | GLONASS L3 signal. |
| GALL1BC | Galileo L1 BC signal. |
| GALE5a | Galileo E5a signal. |
| GALE5b | Galileo E5b signal. |
| GALE5 | Galileo E5 AltBOC signal. |
| GEOL1 | SBAS L1 C/A signal. |
| GEOL5 | SBAS L5 signal. |
| BDSB1I | BeiDou B1I signal. |
| BDSB2I | BeiDou B2I signal. |
| BDSB3I | BeiDou B3I signal. |
| BDSB1C | BeiDou B1C signal. |
| BDSB2a | BeiDou B2a signal. |
| QZSL1CA | QZSS L1 C/A signal. |
| QZSL2C | QZSS L2 C signal. |
| QZSL5 | QZSS L5 signal. |

| Signals (Continued) | Description |
|---------------------|------------------------|
| LBAND | MSS L-Band signal. |
| NAVICL5 | NavIC/IRNSS L5 signal. |

| ComPorts | Description |
|----------|-----------------------------------|
| COM1 | Serial port 1. |
| COM2 | Serial port 2. |
| COM3 | Serial port 3. |
| USB1 | USB-device virtual serial port 1. |
| USB2 | USB-device virtual serial port 2. |
| IP10 | TCP/IP port 1. |
| IP11 | TCP/IP port 2. |
| IP12 | TCP/IP port 3. |
| IP13 | TCP/IP port 4. |
| IP14 | TCP/IP port 5. |
| IP15 | TCP/IP port 6. |
| IP16 | TCP/IP port 7. |
| IP17 | TCP/IP port 8. |
| NTR1 | NTRIP port 1. |
| NTR2 | NTRIP port 2. |
| NTR3 | NTRIP port 3. |
| NTR4 | NTRIP port 4. |
| IPS1 | IP Server port 1. |
| IPS2 | IP Server port 2. |
| IPS3 | IP Server port 3. |
| IPS4 | IP Server port 4. |
| IPS5 | IP Server port 5. |
| IPR1 | IP Receive port 1. |
| IPR2 | IP Receive port 2. |
| IPR3 | IP Receive port 3. |
| IPR4 | IP Receive port 4. |
| IPR5 | IP Receive port 5. |

| Capabilities | Description |
|--------------|------------------------------------|
| SBAS | Positioning with SBAS corrections. |
| DGPSRover | Positioning with DGPS corrections. |
| DGPSBase | Generation of DGPS corrections. |
| RTKRover | Positioning with RTK corrections. |
| RTKBase | Generation of RTK corrections. |

| Capabilities (Continued) | Description |
|--------------------------|--|
| RTCMv23 | Generation/decoding of RTCM v2.3 corrections. |
| RTCMv3x | Generation/decoding of RTCM v3.x corrections. |
| CMRv20 | Generation/decoding of CMR v2.0 corrections. |
| TimeSync | Internal clock synchronisation to external PPS signal. |
| xPPSOutput | Generation of xPPS output signal. |
| TimedEvent | Accurate time mark of event signals. |
| InternalLogging | Internal logging. |
| Heading | Multi-antennas heading computation. |
| APME | A-Posteriori Multipath Estimator. |
| RAIM | Receiver Autonomous Integrity Monitoring. |
| MovingBase | Usage of Moving Base. |
| MeasAv | Measurement availability. |
| IM | Interference mitigation. |
| FreqSync | External frequency input. |

Example

```
COM1> grc <CR>
$R: grc
    ReceiverCapabilities, Main, GPSL1CA+GEOL1, COM1+COM2+COM3+COM4+
        USB1+USB2,
        APME+SBAS, 100, 100, 100
COM1>
```

| gri | getReceiverInterface | Item | | | | | | | | |
|-----|----------------------|--|--|--|--|--|--|--|--|--|
| | | + RxName + SNMPLanguage + SNMPVersion all | | | | | | | | |

[RxControl: Help > Receiver Interface > Interface Version](#)

Use this command to retrieve the version of the receiver command-line interface. The reply to this command is a subset of the reply returned by the **lstInternalFile, Identification** command.

Example

```
COM1> gri <CR>
$R: gri
ReceiverInterface, RxName, AsterRx1
ReceiverInterface, SNMPLanguage, English
ReceiverInterface, SNMPVersion, 20060308
COM1>
```

| era gra | exeRegisteredApplications getRegisteredApplications | Cd Cd | Application (12) | | | | | | | |
|------------|--|--|------------------|--|--|--|--|--|--|--|
| | | + COM1 + COM2 + COM3 + USB1 + USB2 + IP10 ... IP17 all | <u>Unknown</u> | | | | | | | |

RxControl: Communication > Registration

Use these commands to define/inquire the name of the application that is currently using a given connection descriptor (*Cd* - see 1.1.5).

Registering an application name for a connection does not affect the receiver operation, and is done on a voluntary basis. Application registration can be useful to developers of external applications when more than one application is to communicate with the receiver concurrently. Whether or not this command is used, and the way it is used is up to the developers of external applications.

Example

```
COM1> era, com1, MyApp <CR>
$R: era, com1, MyApp
RegisteredApplications, COM1, "MyApp"
RegisteredApplications, COM2, "Unknown"
RegisteredApplications, COM3, "Unknown"
RegisteredApplications, USB1, "Unknown"
RegisteredApplications, USB2, "Unknown"
COM1>
```

| erst grst | exeResetReceiver getResetReceiver | Level | EraseMemory | | | | | | | |
|--------------|--------------------------------------|-------------------------|---|--|--|--|--|--|--|--|
| | | Soft Hard Upgrade | none + Config + PVTData + SatData + HTTPSCertificate all | | | | | | | |

[RxControl: File > Reset Receiver](#)

Use this command to reset the receiver and to erase some previously stored data. The first argument specifies which level of reset you want to execute:

| Level | Description |
|---------|---|
| Soft | This is a reset of the receiver's firmware. After a few seconds, the receiver will restart operating in the same configuration as before the command was issued, unless the "Config" value is specified in the second argument. |
| Hard | This is similar to a power off/on sequence. After hardware reset, the receiver will use the configuration saved in the boot configuration file. |
| Upgrade | Set the receiver into upgrade mode. After a few seconds, the receiver is ready to accept an upgrade file (SUF format) from any of its connections. |

The second argument specifies which part of the non-volatile memory should be erased during the reset. The following table contains the possible values for the *EraseMemory* argument:

| EraseMemory | Description |
|------------------|---|
| Config | <p>The receiver's configuration is reset to the factory default, with the following exceptions.</p> <p>The IP settings set by the setIPSettings and setIPPortSettings commands keep their value.</p> <p>The UHF table set by the setUHFChannelTable command is maintained.</p> <p>After reset, the <code>Current</code> and <code>Boot</code> configuration files are erased (see the exeCopyConfigFile command), but the <code>User1</code> and <code>User2</code> configuration files are kept unchanged.</p> |
| PVTData | The latest computed PVT data stored in non-volatile memory is erased. |
| SatData | All satellite navigation data (ephemeris, almanac, ionosphere parameters, UTC, ...) stored in non-volatile memory is erased. |
| HTTPSCertificate | Remove current HTTPS certificate. It will be replaced by a self-signed certificate at boot. |

Before resetting, the receiver broadcasts a "\$TE ResetReceiver" message to all active communication ports, to inform all users of the imminent reset.

After a reset, the user may have to adapt the communication settings of his/her terminal program as they may be reset to their default values.

Example

```
COM1> erst, soft, none <CR>
$R: erst, soft, none
    ResetReceiver, Soft, none
STOP>
$TE ResetReceiver Soft
STOP>
```

| | | | | | | | | | | |
|------|----------------------|--------|--|--|--|--|--|--|--|--|
| suia | setUSBInternetAccess | Enable | | | | | | | | |
| guia | getUSBInternetAccess | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

[RxControl: Communication > Network Settings > General](#)

Use this command to enable or disable outgoing network access over USB.

If enabled, the receiver will attempt to obtain an IP address via DHCP over the USB connection. It will then be able to access the Internet through that connection, allowing, for example, to communicate with a NTRIP server. Note that this requires that Internet sharing is enabled on the computer attached to the receiver.

The IP address assigned to the receiver can be retrieved from the **lstInternalFile**, **IPParameters** command.

See also section 1.1.3.2.

Example

```
COM1> suia, on<CR>
$R: suia, on
      USBInternetAccess, on
COM1>
```


3.2.2 Standby and Sleep Configuration

| | | | | | | | | | | |
|------|--------------|----------------|--|--|--|--|--|--|--|--|
| epwm | exePowerMode | Mode | | | | | | | | |
| gpwm | getPowerMode | | | | | | | | | |
| | | ScheduledSleep | | | | | | | | |
| | | StandBy | | | | | | | | |

RxControl: File > Power Mode > Shut Down

Use this command to set the receiver in sleep or standby mode, in which it consumes only a fraction of its normal operational power.

When in standby mode, the receiver can be awoken by sending the appropriate signal to one of its input pins (see the receiver Hardware Manual or User Manual for details).

With the `ScheduledSleep` option, the receiver automatically sleeps and wakes up at regular intervals. This functionality is controlled by the `setWakeUpInterval` command.

Upon waking up, the receiver applies the configuration that is stored in the boot configuration file (see the `1stConfigFile` command).

Before entering standby mode, the receiver broadcasts a "\$TE PowerMode" message to all active communication ports, to inform all users of the imminent halt.

Example

```
COM1> epwm, Standby <CR>
$R: epwm, Standby
    PowerMode, StandBy
STOP>
$TE PowerMode Standby
STOP>
```

| swui | setWakeUpInterval | WakeUpTime (30) | AwakeDuration | RepetitionPeriod | | | | | | |
|------|-------------------|---------------------|---------------|------------------|--|--|--|--|--|--|
| gwui | getWakeUpInterval | | | | | | | | | |
| | | 2000-01-01 00:00:00 | 0...604800 s | 0...604800 s | | | | | | |

[RxControl: File > Power Mode > Scheduling](#)

This command can be used to set up an automatic receiver awake/sleep pattern. It is possible to order the receiver to wake up at a given time, for a certain period, and/or at regular intervals. A possible application is keeping fast time-to-first-fix even after days in sleep mode. This can be done by waking up the receiver every few hours for a few minutes, such that it can regularly refresh its ephemerides.

The *WakeUpTime* argument defines the epoch when the receiver should automatically wake up the first time. It also serves as reference epoch for the *RepetitionPeriod* argument. It refers to the GPS time scale. The format of the *WakeUpTime* argument is "YYYY-MM-DD hh:mm:ss".

The *AwakeDuration* argument defines the period for which the receiver should stay awake. If this argument is set to 0 (the default value), the receiver will remain awake indefinitely.

The *RepetitionPeriod* can be used to repeat the awake/sleep pattern at regular interval. *RepetitionPeriod* should be at least 5 seconds longer than *AwakeDuration* to allow a minimum sleep time of 5 seconds between awake periods. If *RepetitionPeriod* is set to a value smaller than *AwakeDuration*, the repetition functionality is disabled.

Be aware that the receiver must know the time to automatically go into sleep mode: if no antenna is connected to the receiver or if not enough satellites could be tracked after boot, the receiver will continue operating beyond its prescribed awake duration, and only possibly enter sleep mode at the next scheduled "go-to-sleep" epoch, if any.

To force the receiver to go into sleep mode immediately, use the command **exePowerMode, ScheduledSleep** instead.

If interaction with the receiver is needed during the sleep period, the user can always force the receiver to wake up by hardware means. See the receiver Hardware Manual or User Manual for details. When maintenance is done, the user should put the receiver back in sleep mode by typing **exePowerMode, ScheduledSleep**. This does not perturb the awake/sleep pattern: the receiver will continue to automatically wake up at the next wake-up epoch.

Each time the receiver wakes up, it applies the boot configuration. For the receiver to wake up in the current configuration, it has to be saved in the boot configuration with the **exeCopyConfigFile** command. In particular, when using the repetitive awake/sleep pattern, the command **exeCopyConfigFile, current, boot** must be entered before the first time that the receiver enters sleep mode. This is to make sure that the awake/sleep pattern configuration is not lost during the sleep periods.

Examples

If you want the receiver waking up on December 31, 2012 at 23h00 for 2 hours, use:

```
COM1> swui, "2012-12-31 23:0:0", 7200 <CR>
$R: swui, "2012-12-31 23:0:0", 7200
WakeUpInterval, "2012-12-31 23:00:00", 7200, 0
COM1>
```

If you want to set up an automatic wake up every day at midnight for 1 hour, use:

```
COM1> swui, , 3600, 86400 <CR>
$R: swui, , 3600, 86400
    WakeUpInterval, "2000-01-01 00:00:00", 3600, 86400
COM1> eccf, Current, Boot <CR>
$R: eccf, Current, Boot
    CopyConfigFile, Current, Boot
COM1>
```

3.2.3 User Management

| | | | | | | | | | | |
|-----|----------------|--|--|--|--|--|--|--|--|--|
| lcu | lstCurrentUser | | | | | | | | | |
| | | | | | | | | | | |

Use this command to check which user is currently logged in on this port, if any. See also the **login** command.

Example

```
COM1> lcu <CR>
$R! lstCurrentUser
    Not logged in.
COM1> login, admin, admin <CR>
$R! LogIn
    User admin logged in.
COM1> lcu <CR>
$R! lstCurrentUser
    Logged in as admin.
COM1>
```

| sdal gdal | setDefaultAccessLevel getDefaultAccessLevel | Web | FileTransfer | Ip | Com | Usb | | | | |
|--------------|--|------------------------|------------------------|------------------------|------------------------|------------------------|--|--|--|--|
| | | none Viewer User | none Viewer User | none Viewer User | none Viewer User | none Viewer User | | | | |

[RxControl: File > User Management](#)

This command defines what an anonymous user is authorized to do when connected to the receiver. An anonymous user is one who has not logged in with the **login** command.

The anonymous authorization level can be set independently for the different interfaces.

For all arguments except *FileTransfer*, setting the authorization level to `User` grants full control of the receiver to the anonymous user connected through the corresponding connection. The `Viewer` level allows the anonymous user to view the receiver configuration without changing it (i.e. to only issue **get**-commands). `none` prevents anonymous users from viewing or changing the configuration.

For the *FileTransfer* argument, `Viewer` means that the anonymous user is allowed to download log files from the receiver using FTP, but not to delete them. `User` means that the anonymous user can both download and delete files, and `none` disables anonymous accesses.

To perform actions not allowed to anonymous users, you first need to authenticate yourself by entering a *UserName* and *Password* through the **login** command.

See also the commands **setUserAccessLevel** to learn how to define user accounts.

This command does not change the status of existing connections. For example, for *Com* or *Usb* connections, it will only take effect after a reset.

Example

```
COM1> sdal, none, none, none, User, User<CR>
$R: sdal, none, none, none, User, User
    DefaultAccessLevel, none, none, none, User, User
COM1>
```

| login | Login | UserName (16) | Password (32) | | | | | | | |
|-------|-------|---------------|---------------|--|--|--|--|--|--|--|
| | | | | | | | | | | |

Use this command to authenticate yourself. When initially connecting to the receiver, a user is considered "anonymous". The level of control granted to anonymous users is defined by the command **setDefaultAccessLevel**.

To perform actions not allowed to anonymous users, you need to authenticate yourself by entering a *UserName* and *Password* through the **login** command.

The list of user names and passwords and their respective access level can be managed with the **setUserAccessLevel** command. Login fails if the provided *UserName* or *Password* is not in that list.

The **logout** command returns to unauthenticated (anonymous) access. The **lstCurrentUser** command can be invoked to find out which user is logged in on the current port.

It is not necessary to log out before logging in as a different user.

Examples

To log in as user "admin" with password "admin", use

```
COM1> login, admin, admin <CR>
$R! LogIn
    User admin logged in.
COM1>
```

Logging in with a wrong username or password gives an error:

```
COM1> login, foo, foo <CR>
$R? LogIn: Wrong username or password!
COM1>
```

If the user does not have sufficient access right, some commands may give an error:

```
COM1> sso, Stream1, COM1, MeasEpoch, sec1 <CR>
$R? SBFOutput: Not authorized!
COM1>
```

| | | | | | | | | | | |
|--------|--------|--|--|--|--|--|--|--|--|--|
| logout | LogOut | | | | | | | | | |
| | | | | | | | | | | |

Use this command to return to anonymous access. It is the reverse of **login**.

Example

The following sequence of commands logs in as user "admin" with password "admin", reconfigures SBF output, and logs out again:

```
COM1> login, admin, admin <CR>
$R! LogIn
    User admin logged in.
COM1> sso, Stream1, COM1, PVTCartesian, sec1 <CR>
$R: sso, Stream1, COM1, PVTCartesian, sec1
    SBFOutput, Stream1, COM1, PVTCartesian, sec1
COM1> logout <CR>
$R! LogOut
    User admin logged out.
COM1>
```

| sual gual | setUserAccessLevel getUserAccessLevel | UserID UserID | UserName (16) | Password (32) | UserLevel | SSHKey (232) | | | | |
|--------------|--|--------------------------|---------------|---------------|----------------|--------------|--|--|--|--|
| | | + User1 ... User8 all | | | Viewer User | | | | | |

RxControl: File > User Management

Use these commands to manage the user accounts and their access rights on the receiver. Up to eight user accounts can be defined (User1 to User8).

Each user is identified with a *UserName* and *Password*, and has a certain level of acces (*UserLevel*). If *UserLevel* is *User*, the user has full control of the receiver. If it is *Viewer*, the user can only issue **get**-commands.

The *SSHKey* argument can be used to associate an SSH public key to a user. ECDSA, Ed25519 and RSA PEM-encoded (base64) public keys conforming to RFC 4716 are supported. The number of bits in the key must be such that the corresponding base64 public key does not exceed 232 characters. RSA keys need to be at least 1024 bits long. Whenever possible, ECDSA or Ed25519 keys are recommended for enhanced security.

When an SSH key is defined with the *SSHKey* argument, a user can download log files using SFTP or `rsync` without the need for entering a password, provided the matching private key is known by the key agent running on his machine.

To delete an user account, use the empty string "" as *UserName* and *Password*.

Note that the receiver encrypts the password so that it cannot be read back with the command **getUserAccessLevel**.

Example

```
COM1>  sual, User3, Mildred, mypwd, Viewer, AAAAE2VjZH ...
a9YSdPMw==<CR>
$R:  sual, User3, Mildred, mypwd, Viewer, AAAAE2VjZH ... a9YSdPMw==
UserAccessLevel, User3, Mildred, mypwd, Viewer, AAAAE2VjZH ...
a9YSdPMw==
COM1>
```


3.2.4 Tracking and Measurement Generation

| sca | setChannelAllocation | Channel | Satellite | Search | Doppler | Window | | | | |
|-----|----------------------|------------------------|---|----------------|------------------------------|------------------------------|--|--|--|--|
| gca | getChannelAllocation | Channel | | | | | | | | |
| | | + Ch01 ... Ch60 all | auto G01 ... G32 F01 ... F14 E01 ... E36 S120 ... S158 C01 ... C63 J01 ... J07 I01 ... I14 | auto manual | -50000 ... 0 ... 50000 Hz | 1 ... 16000 ... 100000 Hz | | | | |

[RxControl: Navigation > Advanced User Settings > Channel Allocation](#)

Use these commands to define/inquire the satellite-to-channel allocation of the receiver.

The action of the **setChannelAllocation** command is to force the allocation of a particular satellite on the set of channels identified with the *Channel* argument, thereby overruling the automatic channel allocation performed by the receiver. It is possible to allocate the same satellite to more than one channel. If you assign a satellite to a given channel, any other channel that was automatically allocated to the same satellite will be stopped and will be reallocated.

The values Gxx, Exx, Fxx, Cxx, Ixx, Jxx and Sxxx for the *Satellite* argument represent GPS, Galileo, GLONASS, BeiDou, NavIC/IRNSS, QZSS and SBAS satellites respectively. For GLONASS, the frequency number (with an offset of 8) should be provided, and not the slot number (hence the "F"). Setting the *Satellite* argument to `auto` brings the channel back in auto-allocation mode.

The user can specify the Doppler window in which the receiver has to search for the satellite. This is done by setting the *Search* argument to `manual`. In that case, the *Doppler* and *Window* arguments can be provided: the receiver will search for the signal within an interval of *Window* Hz centred on *Doppler* Hz. The value to be provided in the *Doppler* argument is the expected Doppler at the GPS L1 carrier frequency (1575.42MHz). This value includes the geometric Doppler and the receiver and satellite frequency biases. Specifying a Doppler window can speed up the search process in some circumstances. A satellite already in tracking that falls outside of the prescribed window will remain in tracking.

If *Search* is set to `auto`, the receiver applies its usual search procedure, as it would do for auto-allocated satellites, and the *Doppler* and *Window* arguments are ignored.

Be aware that this command may disturb the normal operation of the receiver and is intended only for expert-level users.

Examples

```
COM1> sca, Ch05, G01 <CR>
$R: sca, Ch05, G01
ChannelAllocation, Ch05, G01, auto, 0, 16000
COM1>
```

```
COM1> gca, Ch05 <CR>
$R: gca, Ch05
ChannelAllocation, Ch05, G01, auto, 0, 16000
```

COM1>

| scm gcm | setCN0Mask getCN0Mask | Signal Signal | Mask | | | | | | | |
|------------|--------------------------|---|----------------------|--|--|--|--|--|--|--|
| | | +GPSL1CA +Reserved2 +GPSL2C +GPSL5 +GLOL1CA +GLOL2P +GLOL2CA +GLOL3 +GALL1BC +GALE5a +GALE5b +GALE5 +GEOL1 +GEOL5 +BDSB1I +BDSB2I +BDSB3I +BDSB1C +BDSB2a +QZSL1CA +QZSL2C +QZSL5 +NAVICL5 all | 0...10...60 dB-Hz | | | | | | | |

RxControl: Navigation > Receiver Operation > Masks

Use these commands to define/inquire the carrier-to-noise ratio mask for the generation of measurements. The receiver does not generate measurements for those signals of which the C/N_0 is under the specified mask, and does not include these signals in the PVT computation. However, it continues to track these signals and to decode and use the navigation data as long as possible, regardless of the C/N_0 mask.

The mask can be set independently for each of the signal types supported by the receiver, except for the GPS P-code, of which the mask is fixed at 1 dB-Hz (this is because of the codeless tracking scheme needed for GPS P-code).

Examples

```
COM1> scm, GEOL1, 30 <CR>
$R: scm, GEOL1, 30
      CN0Mask, GEOL1, 30
COM1>
```

```
COM1> gcm, GEOL1 <CR>
$R: gcm, GEOL1
      CN0Mask, GEOL1, 30
COM1>
```

| | | | | | | | | | | |
|-----|------------------------|------|---------|--|--|--|--|--|--|--|
| smm | setMultipathMitigation | Code | Carrier | | | | | | | |
| gmm | getMultipathMitigation | | | | | | | | | |
| | | off | off | | | | | | | |
| | | on | on | | | | | | | |

[RxControl: Navigation > Receiver Operation > Tracking and Measurements > Multipath](#)

Use these commands to define/inquire whether multipath mitigation is enabled or not.

The arguments *Code* and *Carrier* enable or disable the A-Posteriori Multipath Estimator (APME) for the code and carrier phase measurements respectively. APME is a technique by which the receiver continuously estimates the multipath error and corrects the measurements accordingly.

This multipath estimation process slightly increases the thermal noise on the pseudoranges. However, this increase is more than compensated by the dramatic decrease of the multipath noise.

Examples

```
COM1> smm, on, off <CR>
$R: smm, on, off
    MultipathMitigation, on, off
COM1>
```

```
COM1> gmm <CR>
$R: gmm
    MultipathMitigation, on, off
COM1>
```

| sst gst | setSatelliteTracking getSatelliteTracking | Satellite | | | | | | | | |
|------------|--|--|--|--|--|--|--|--|--|--|
| | | none + G01 ... G32 + R01 ... R30 + E01 ... E36 + S120 ... S158 + C01 ... C63 + J01 ... J07 + I01 ... I14 + GPS + GLONASS + GALILEO + SBAS + BEIDOU + QZSS + NAVIC all | | | | | | | | |

[RxControl: Navigation > Advanced User Settings > Tracking > Satellite Tracking](#)

Use these commands to define/inquire which satellites are allowed to be tracked by the receiver. It is possible to enable or disable a single satellite (e.g. G01 for GPS PRN1), or a whole constellation. Gxx, Exx, Rxx, Cxx, Ixx, Jxx and Sxxx refer to a GPS, Galileo, GLONASS, BeiDou, NavIC/IRNSS, QZSS or SBAS satellite respectively. GLONASS satellites must be referenced by their slot number in this command.

For a satellite to be effectively tracked by the receiver, make sure that at least one of its signals is enabled in the **setSignalTracking** command.

A satellite which is disabled by this command is not considered anymore in the automatic channel allocation mechanism, but it can still be forced to a given channel, and tracked, using the **setChannelAllocation** command.

Tracking a satellite does not automatically mean that the satellite will be included in the PVT computation. The inclusion of a satellite in the PVT computation is controlled by the **setSatelliteUsage** command.

Examples

To only enable the tracking of GPS satellites, use:

```
COM1> sst, GPS <CR>
$R: sst, GPS
  SatelliteTracking, G01+G02+G03+G04+G05+G06+G07+G08+G09+G10+G11
  +G12+G13+G14+G15+G16+G17+G18+G19+G20+G21+G22+G23+G24+G25+G26+G27
  +G28+G29+G30+G31+G32
COM1>
```

To add all SBAS satellites in the list of satellites to be tracked, use:

```
COM1> sst, +SBAS <CR>
$R: sst, +SBAS
  SatelliteTracking, G01+G02+G03+G04+G05+G06+G07+G08+G09+G10+G11
  +G12+G13+G14+G15+G16+G17+G18+G19+G20+G21+G22+G23+G24+G25+G26+G27
  ...
COM1>
```

To remove SBAS PRN120 from the list of allowed satellites, use:

```
COM1> sst, -S120 <CR>
```

```
$R: sst, -S120
```

```
  SatelliteTracking, G01+G02+G03+G04+G05+G06+G07+G08+G09+G10+G11
```

```
  +G12+G13+G14+G15+G16+G17+G18+G19+G20+G21+G22+G23+G24+G25+G26+G27
```

```
  . . .
```

```
COM1>
```

| snt gnt | setSignalTracking getSignalTracking | Signal | | | | | | | | |
|------------|--|--|--|--|--|--|--|--|--|--|
| | | +GPSL1CA +GPSL2PY +GPSL2C +GPSL5 +GLOL1CA +GLOL2P +GLOL2CA +GLOL3 +GALL1BC +GALE5a +GALE5b +GALE5 +GEOL1 +GEOL5 +BDSB1I +BDSB2I +BDSB3I +BDSB1C +BDSB2a +QZSL1CA +QZSL2C +QZSL5 +NAVICL5 +GPS +GLONASS +GALILEO +SBAS +BEIDOU +QZSS +NAVIC all | | | | | | | | |

RxControl: Navigation > Advanced User Settings > Tracking > Signal Tracking

Use these commands to define/inquire which signals are allowed to be tracked by the receiver. The signals can be addressed individually, or all signals from a constellation can be addressed at once. For example, `GALILEO` is an alias for all Galileo signals.

Note that some signals can only be enabled together with other signals:

- enabling `GPSL2PY` has no effect unless `GPSL1CA` is enabled as well;
- enabling `GLOL2P` has no effect unless `GLOL2CA` is enabled as well;
- enabling `GLOL3` has no effect unless `GLOL1CA` is enabled as well;

Invoking this command causes all tracking loops to stop and restart.

Examples

To configure the receiver in a single-frequency L1 GPS+SBAS mode, use:

```
COM1> snt, GPSL1CA+GEOL1 <CR>
$R: snt, GPSL1CA+GEOL1
SignalTracking, GPSL1CA+GEOL1
COM1>

COM1> gnt <CR>
$R: gnt
SignalTracking, GPSL1CA+GEOL1
COM1>
```

| ssi gsi | setSmoothingInterval getSmoothingInterval | Signal Signal | Interval | Alignment | | | | | | |
|------------|--|---|------------|------------|--|--|--|--|--|--|
| | | +GPSL1CA +GPSL2PY +GPSL2C +GPSL5 +GLOL1CA +GLOL2P +GLOL2CA +GLOL3 +GALL1BC +GALE5a +GALE5b +GALE5 +GEOL1 +GEOL5 +BDSB1I +BDSB2I +BDSB3I +BDSB1C +BDSB2a +QZSL1CA +QZSL2C +QZSL5 +NAVICL5 all | 0...1000 s | 0...1000 s | | | | | | |

[RxControl: Navigation > Receiver Operation > Tracking and Measurements > Smoothing](#)

Use these commands to define/inquire the code measurement smoothing interval.

The *Interval* argument defines the length of the smoothing filter that is used to smooth the code measurements by the carrier phase measurements. It is possible to define a different interval for each signal type. If *Interval* is set to 0, the code measurements are not smoothed. The smoothing interval can vary from 1 to 1000 seconds.

To prevent transient effect from perturbing the smoothing filter, smoothing is disabled during the first ten seconds of tracking, i.e. when the lock time is lower than 10s. Likewise, the smoothing effectively starts with a delay of 10 seconds after entering the **setSmoothingInterval** command.

Code smoothing allows reducing the pseudorange noise and multipath. It has no influence on the carrier phase and Doppler measurements. The smoothing filter has an incremental effect; the noise of the filtered pseudorange will decrease over time and reach its minimum after *Interval* seconds. For some applications, it may be necessary to wait until this transient effect is over before including the measurement in the PVT computation. This is the purpose of the *Alignment* argument. If *Alignment* is not set to 0, measurements taken during the first *Alignment*+10 seconds of tracking will be discarded. The effective amount of *Alignment* is never larger than *Interval*, even if the user sets it to a larger value.

Examples

```
COM1> ssi, GPSL1CA, 300 <CR>
$R: ssi, GPSL1CA, 300
      SmoothingInterval, GPSL1CA, 300, 0
COM1>
```

```
COM1> gsi, GPSL1CA <CR>
$R: gsi, GPSL1CA
```



```
SmoothingInterval, GPSL1CA, 300, 0  
COM1>
```

| stlp gtlp | setTrackingLoopParameters getTrackingLoopParameters | Signal Signal | DLLBandwidth | PLLBandwidth | MaxTpDLL | MaxTpPLL | Adaptive | | | |
|--------------|--|--|------------------------------|---------------------|-------------------------|------------------------|-----------|--|--|--|
| | | + GPSL1CA + Reserved2 + GPSL2C + GPSL5 + GLOL1CA + GLOL2P + GLOL2CA + GLOL3 + GALL1BC + GALE5a + GALE5b + GALE5 + GEOL1 + GEOL5 + BDSB1I + BDSB2I + BDSB3I + BDSB1C + BDSB2a + QZSL1CA + QZSL2C + QZSL5 + NAVICL5 all | 0.01 ... 0.25 ... 5.00 Hz | 1 ... 15 ... 100 Hz | 1 ... 100 ... 500 ms | 1 ... 10 ... 200 ms | off on | | | |

[RxControl: Navigation > Advanced User Settings > Tracking > Tracking Loop Parameters](#)

Use these commands to define/inquire the tracking loop parameters for each individual signal type.

The *DLLBandwidth* and *PLLBandwidth* arguments define the single-sided DLL and PLL noise bandwidth, in Hz.

The *MaxTpDLL* argument defines the maximum DLL pre-detection time, in millisecond. The actual pre-detection time applied by the receiver (*TpDLL*) depends on the presence of a pilot component. For signals having a pilot component (e.g. GPS L2C), *TpDLL* = *MaxTpDLL*. For signals without pilot component (e.g. GPS L1CA), *TpDLL* is the largest divider of the symbol duration smaller than or equal to *MaxTpDLL*.

The *MaxTpPLL* argument defines the maximal PLL pre-detection time, in millisecond. The actual pre-detection time in the receiver (*TpPLL*) is computed in the same way as indicated for the *MaxTpDLL* argument.

Setting the *Adaptive* argument to `on` allows the receiver to dynamically change the loop parameters in order to optimize performance in specific conditions.

After entering this command, all active tracking loops stop and restart with the new settings.

This command should only be used by expert users who understand the consequences of modifying the default values. In some circumstances, changing the tracking parameters may result in the impossibility for the receiver to track a specific signal, or may significantly increase the processor load. It is recommended that the product of *TpPLL* (in milliseconds) and *PLLBandwidth* (in Hz) be kept between 100 and 200.

Note that decreasing the predetection times increases the load on the processor.

Example

```
COM1> stlp, GPSL1CA, 0.20, 12, , , off <CR>
$R: stlp, GPSL1CA, 0.20, 12, , , off
    TrackingLoopParameters, GPSL1CA, 0.20, 12, 100, 10, off
COM1>
```

3.2.5 Frontend and Interference Mitigation

| setAGCMode | getAGCMode | Band | Mode | Gain | | | | | | |
|------------|------------|---------|--------|--------------------|--|--|--|--|--|--|
| gam | gam | Band | Mode | Gain | | | | | | |
| | | + L1 | auto | 0 ... 35 ... 70 dB | | | | | | |
| | | + L2 | frozen | | | | | | | |
| | | + L5 | manual | | | | | | | |
| | | + LBand | | | | | | | | |
| | | all | | | | | | | | |

RxControl: Navigation > Advanced User Settings > Frontend and Interference Mitigation > Frontend Settings

Use these commands to define/inquire the operation mode of the Automatic Gain Control (AGC) in the receiver frontend. The AGC is responsible for amplifying the input RF signal to an appropriate level.

By default (*Mode* is set to `auto`), the AGC automatically adjusts its gain in function of the input signal power. In `frozen` mode, the AGC gain is kept constant at its current value (after a ten-second stabilisation period) and does not follow any subsequent variation of the input signal power. In `manual` mode, the user can set the gain to a fixed value specified by the *Gain* argument. The *Gain* argument is ignored in `auto` and `frozen` modes.

The first argument (*Band*) specifies for which frequency band the settings apply.

Example

```
COM1> sam, all, frozen <CR>
$R: sam, all, frozen
      AGCMode, L1, frozen, 30
COM1>
```

| | | | | | | | | | | |
|------|-------------------|----------|--|--|--|--|--|--|--|--|
| sbbs | setBBSamplingMode | Mode | | | | | | | | |
| gbbs | getBBSamplingMode | | | | | | | | | |
| | | BeforeIM | | | | | | | | |
| | | AfterIM | | | | | | | | |

[RxControl: Navigation > Advanced User Settings > Frontend and Interference Mitigation > Frontend Settings](#)

Use this command to configure the baseband samples (ADC samples) logged in the BBSamples SBF block.

The following sampling modes are defined:

| Mode | Description |
|----------|--|
| BeforeIM | The samples in the BBSamples SBF block are taken before interference mitigation (see the setNotchFiltering command). All frequency bands are sampled in turn. |
| AfterIM | The samples in the BBSamples SBF block are taken after interference mitigation (see the setNotchFiltering command). All frequency bands are sampled in turn. |

Example

```
COM1> sbbs, BeforeIM <CR>
$R: sbbs, BeforeIM
    BBSamplingMode, BeforeIM
COM1>
```

| | | | | | | | | | | |
|-----|-----------------|-----------|--|--|--|--|--|--|--|--|
| sfm | setFrontendMode | Mode | | | | | | | | |
| gfm | getFrontendMode | | | | | | | | | |
| | | Nominal | | | | | | | | |
| | | SingleAnt | | | | | | | | |

[RxControl: Navigation > Advanced User Settings > Frontend and Interference Mitigation > Frontend Settings](#)

Use this command to define the frontend operating mode. The following modes are available.

| Mode | Description |
|-----------|----------------------------|
| Nominal | Nominal operation. |
| SingleAnt | Disable auxiliary antenna. |

On some receivers, this command only takes effect at the next reset or reboot. In that case, it must be stored in the boot configuration file with the **exeCopyConfigFile** command.

Example

```
COM1> sfm, Nominal <CR>
$R: sfm, Nominal
      FrontendMode, Nominal
COM1>
```

| snf gnf | setNotchFiltering getNotchFiltering | Notch Notch | Mode | CenterFreq | Bandwidth | | | | | |
|------------|--|---|-----------------------|------------------------------|-----------------|--|--|--|--|--|
| | | + Notch1 + Notch2 + Notch3 all | auto off manual | 1100.000 ... 1700.000 MHz | 30 ... 1600 kHz | | | | | |

[RxControl: Navigation > Advanced User Settings > Frontend and Interference Mitigation > Frontend Settings](#)

Use these commands to set the position of the notch filter(s) in the receiver's frontend. Notch filters are used to cancel narrowband interferences.

The *Mode* argument is used to enable or disable the notch filter specified in the first argument. When set to *auto*, the receiver performs automatic detection of the region of the spectrum affected by interference if any. In *manual* mode, the user forces a certain region of the spectrum to be blanked by the notch filter. That region must be specified by the arguments *CenterFreq* and *Bandwidth*. *Bandwidth* is the double-sided bandwidth centered at *CenterFreq*. Specifying a region outside of a GNSS band has no effect.

In *manual* mode, the notch filter is applied to both antennas (main and aux1).

In some cases, changing the operating mode of the notch filters (i.e. modifying the *Mode* argument) can cause the tracking loops to reset.

Example

```
COM1> snf, Notch1, manual, 1227.0, 30<CR>
$R: snf, Notch1, manual, 1227.0, 30
    NotchFiltering, Notch1, manual, 1227.000, 30
COM1>
```

| | | | | | | | | | | |
|------|------------------|-----------|--|--|--|--|--|--|--|--|
| swbi | setWBIMitigation | Mode | | | | | | | | |
| gwbi | getWBIMitigation | | | | | | | | | |
| | | off on | | | | | | | | |

RxControl: Navigation > Advanced User Settings > Frontend and Interference Mitigation > Frontend Settings

Use this command to enable or disable the mitigation of wideband interferences, including swept-frequency or pulsed interferences. When enabled (argument *Mode* set to `on`), the interference mitigation is done automatically and can be monitored with the `RFStatus SBF` block.

Invoking this command causes all tracking loops to stop and restart.

Example

```
COM1> swbi, off<CR>
$R: swbi, off
      WBIMitigation, off
COM1>
```


3.2.6 Navigation Filter

| sao | setAntennaOffset | Antenna | DeltaE | DeltaN | DeltaU | Type (20) | SerialNr (20) | SetupID | | |
|-----|------------------|-------------------------|---|---|---|-----------|---------------|-----------|--|--|
| gao | getAntennaOffset | Antenna | | | | | | | | |
| | | + Main + Aux1 all | -1000.0000 ... 0.0000 ... 1000.0000 m | -1000.0000 ... 0.0000 ... 1000.0000 m | -1000.0000 ... 0.0000 ... 1000.0000 m | Unknown | Unknown | 0 ... 255 | | |

RxControl: Navigation > Receiver Setup > Antennas

Use these commands to define/inquire the parameters that are associated with the antennas connected to your receiver.

The arguments *DeltaE*, *DeltaN* and *DeltaU* are the offsets of the antenna reference point (ARP, see section 2.5) with respect to the marker, in the East, North and Up (ENU) directions respectively, expressed in meters. All absolute positions reported by the receiver are marker positions, obtained by subtracting this offset from the ARP. The purpose is to take into account the fact that the antenna may not be located directly on the surveying point of interest. Each antenna can have its own marker.

Use the argument *Type* to specify the type of your antenna. For best positional accuracy, it is recommended to select a type from the list returned by the command **lstAntennaInfo, Overview**. This is the list of antennas for which the receiver can compensate for phase center variation (see section 2.5). If *Type* does not match any entry in the list returned by **lstAntennaInfo, Overview**, the receiver will assume that the phase center variation is zero at all elevations and frequency bands, and the position will not be as accurate. If the antenna name contains whitespaces, it has to be enclosed between double quotes. For proper name matching, it is important to keep the exact same number of whitespaces and the same case as the name returned by **lstAntennaInfo, Overview**.

The argument *SerialNr* is the serial number of your particular antenna. It may contain letters as well as digits (do not forget to enclose the string between double quotes if it contains whitespaces).

The argument *SetupID* is the antenna setup ID as defined in the RTCM standard. It is a parameter for use by the service provider to indicate the particular reference station-antenna combination. The number should be increased whenever a change occurs at the station that affects the antenna phase center variations. Setting *SetupID* to zero means that the values of a standard model type calibration should be used. The value entered for this argument is used to set the setup ID field in the message type 23 of RTCM2.3, and in message types 1007, 1008 and 1033 of RTCM3. It has otherwise no effect on the receiver operation. In multi-antenna receivers, this parameter is only relevant for the *Main* antenna, as RTCM messages are applicable to the main antenna only.

Example

```
COM1>  sao, Main, 0.1, 0.0, 1.3, "AERAT2775_159 SPKE", 5684, 0<CR>
$R: sao, Main, 0.1, 0.0, 1.3, "AERAT2775_159  SPKE", 5684, 0
      AntennaOffset, Main, 0.1000, 0.0000, 1.3000, "AERAT2775_159
      SPKE", 5684, 0
COM1>
```

| sdca gdca | setDiffCorrMaxAge getDiffCorrMaxAge | DGPSCorr | RTKCorr | PPPCorr | Iono | | | | | |
|--------------|--|-------------------------------|------------------------------|---------------|-------------------------------|--|--|--|--|--|
| | | 0.0 ... 400.0 ... 3600.0 s | 0.0 ... 20.0 ... 3600.0 s | 0.0 ... 0.0 s | 0.0 ... 600.0 ... 3600.0 s | | | | | |

[RxControl: Navigation > Positioning Mode > Differential Corrections](#)

Use these commands to define/inquire the maximum age acceptable for a given differential correction type. A correction is applied only if its age (aka latency) is under the timeout specified with this command and if it is also under the timeout specified with the *MaxAge* argument of the **setDiffCorrUsage** command. In other words, the command **setDiffCorrUsage** sets a global maximum timeout value, while the command **setDiffCorrMaxAge** can force shorter timeout values for certain correction types.

The argument *DGPSCorr* defines the timeout of the range corrections when the PVT is computed in DGPS mode.

The argument *RTKCorr* defines the timeout of the base station code and carrier phase measurements when the PVT is computed in RTK mode.

The argument *PPPCorr* defines the timeout of the wide-area satellite clock and orbit corrections used in PPP mode (only applicable if your receiver supports PPP positioning mode).

The argument *Iono* defines the timeout of the ionospheric corrections (such as transmitted in RTCM2.x MT15) used in DGPS PVT mode.

If the timeout is set to 0, the receiver will never apply the corresponding correction.

Note that this command does not apply to the corrections transmitted by SBAS satellites. For these corrections, the receiver always applies the timeout values prescribed in the DO229 standard.

Example

```
COM1> sdca, 10 <CR>
$R: sdca, 10
    DiffCorrMaxAge, 10.0, 20.0, 300.0, 300.0
COM1>
```

| sdcu gdcu | setDiffCorrUsage getDiffCorrUsage | Mode | MaxAge | BaseSelection | BaseID | MovingBase | | | | |
|--------------|--------------------------------------|------------|------------------|----------------|------------|------------|--|--|--|--|
| | | LowLatency | 0.1 ... 3600.0 s | auto manual | 0 ... 4095 | off on | | | | |

[RxControl: Navigation > Positioning Mode > Differential Corrections](#)

Use these commands to define/inquire the usage of incoming differential corrections in DGPS or RTK rover mode.

The *Mode* argument defines the type of differential solution that will be computed by the receiver. If `LowLatency` is selected, the PVT is computed at the moment local measurements of the receiver are available and the most recently received differential corrections are extrapolated to the current time.

The *MaxAge* argument defines the maximum age of the differential corrections to be considered valid. *MaxAge* applies to all types of corrections (DGPS, RTK, satellite orbit, etc), except for those received from a SBAS satellite. See also the command **setDiffCorrMaxAge** to set different maximum ages for different correction types.

The *BaseSelection* argument defines how the receiver should select the base station(s) to be used. If `auto` is selected and the receiver is in DGPS-rover mode, it will use all available base stations. If `auto` is selected and the receiver is in RTK-rover mode, it will automatically select the nearest base station. If `manual` is selected, the receiver will only use the corrections from the base station defined by the *BaseID* argument (in both DGPS and RTK modes).

The *MovingBase* argument defines whether the base station is static or moving.

Example

```
COM1> sdcu, LowLatency, 5.0, manual, 1011, off<CR>
$R: sdcu, LowLatency, 5.0, manual, 1011, off
    DiffCorrUsage, LowLatency, 5.0, manual, 1011, off
COM1>
```

| sem gem | setElevationMask getElevationMask | Engine Engine | Mask | | | | | | | |
|------------|--------------------------------------|----------------------------|----------------------|--|--|--|--|--|--|--|
| | | + Tracking + PVT all | -90 ... 0 ... 90 deg | | | | | | | |

[RxControl: Navigation > Receiver Operation > Masks](#)

Use these commands to set or get the elevation mask in degrees. There are two masks defined: a tracking mask and a PVT mask.

Satellites under the tracking elevation mask are not tracked, and therefore there is no measurement, nor navigation data available from them. The tracking elevation mask does not apply to SBAS satellites: SBAS satellites are generally used to supply corrections and it is undesirable to make the availability of SBAS corrections dependent on the satellite elevation. The tracking elevation mask does not apply to satellites that are manually assigned with the **setChannelAllocation** command.

Satellite under the PVT mask are not included in the PVT solution, though they still provide measurements and their navigation data is still decoded and used. The PVT elevation mask do apply to the SBAS satellites: the ranges to SBAS satellites under the elevation mask are not used in the PVT, but the SBAS corrections are still decoded and potentially used in the PVT.

Although possible, it does not make sense to select a higher elevation mask for the tracking than for the PVT, as, obviously, a satellite which is not tracked cannot be included in the PVT.

The mask can be negative to allow the receiver to track satellites below the horizon. This can happen in case the receiver is located at high altitudes or if the signal is refracted through the atmosphere.

Example

```
COM1> sem, Tracking, 15<CR>
$R: sem, Tracking, 15
      ElevationMask, Tracking, 15
COM1>
```

| sgu ggu | setGeoidUndulation getGeoidUndulation | Mode | Undulation | | | | | | | |
|------------|--|----------------|-------------------------------------|--|--|--|--|--|--|--|
| | | auto manual | -250.000 ... 0.000 ... 250.000 m | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Earth Models](#)

Use these commands to define/inquire the geoid undulation at the receiver position. The geoid undulation specifies the local difference between the geoid and the WGS84 ellipsoid.

If *Mode* is set to `auto`, the receiver computes the geoid undulation with respect to the WGS84 ellipsoid using the model defined in 'Technical Characteristics of the NAVSTAR GPS, NATO, June 1991', regardless of the datum specified with the **setGeodeticDatum** command. In `auto` mode, the *Undulation* argument is ignored.

The geoid undulation is included in the `PVTCartesian` and the `PVTGeodetic` SBF blocks and in the NMEA position messages.

Examples

```
COM1> sgu, manual, 25.3 <CR>
$R: sgu, manual, 25.3
    GeoidUndulation, manual, 25.3
COM1>
```

```
COM1> ggu <CR>
$R: ggu
    GeoidUndulation, manual, 25.3
COM1>
```

| shm ghm | setHealthMask getHealthMask | Engine Engine | Mask | | | | | | | |
|------------|--------------------------------|----------------------------|------------------|--|--|--|--|--|--|--|
| | | + Tracking + PVT all | off <u>on</u> | | | | | | | |

[RxControl: Navigation > Receiver Operation > Masks](#)

Use these commands to define/inquire whether measurements (pseudoranges, carrier phases...) should be produced for unhealthy satellite signals (i.e. signals for which the unhealthy flag is set in the satellite navigation message), and whether these measurements should be included in the PVT solution.

If *Mask* is *on* for the *Tracking* engine, GNSS measurements are only generated for healthy signals or when the health is unknown. Signals flagged unhealthy remain internally tracked and their navigation data is still decoded and processed, but the corresponding measurements are discarded.

If *Mask* is *on* for the *PVT* engine, measurements from unhealthy signals or from signals of which the health is unknown are not included in the PVT. Setting this mask to *off* must be done with caution: including a non-healthy signal in the PVT computation may lead to unpredictable behaviour of the receiver.

Examples

To track unhealthy satellites/signals, use:

```
COM1> shm, Tracking, off <CR>
$R: shm, Tracking, off
      HealthMask, Tracking, off
COM1>
```

```
COM1> ghm <CR>
$R: ghm
      HealthMask, Tracking, off
      HealthMask, PVT, on
COM1>
```

| sim gim | setIonosphereModel getIonosphereModel | Model | | | | | | | | |
|------------|--|--|--|--|--|--|--|--|--|--|
| | | auto off Klobuchar SBAS MultiFreq KlobucharBeiDou | | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Atmosphere](#)

Use these commands to define/inquire the type of model used to correct ionospheric errors in the PVT computation. The following models are available:

| Model | Description |
|-----------------|--|
| auto | With this selection, the receiver will, based on the available information, automatically select the best model on a satellite to satellite basis. |
| off | The receiver will not correct measurements for the ionospheric delay. This may be desirable if the receiver is connected to a GNSS signal simulator. |
| Klobuchar | This model uses the parameters as transmitted by the GPS satellites to compute the ionospheric delays. |
| SBAS | This model complies with the DO229 standard: it uses the near real-time ionospheric delays transmitted by the SBAS satellites in MT18 and MT26. If no such message has been received, the Klobuchar model is selected automatically. |
| MultiFreq | This model uses a combination of measurements on different carriers to accurately estimate ionospheric delays. It requires the availability of at least dual-frequency measurements. |
| KlobucharBeiDou | This model uses the parameters as transmitted by the BeiDou satellites to compute the ionospheric delays. |

Unless the model is set to `auto`, the receiver uses the same model for all satellites, e.g. if the `Klobuchar` model is requested, the Klobuchar parameters transmitted by GPS satellites are used for all tracked satellites, regardless of their constellation.

If not enough data is available to apply the prescribed model to a given satellite (for instance if only single-frequency measurements are available and the model is set to `MultiFreq`), the satellite in question will be discarded from the PVT. Under most circumstances, it is recommended to leave the model to `auto`.

Examples

To disable the compensation for ionospheric delays, use:

```
COM1> sim, off <CR>
$R: sim, off
      IonosphereModel, off
COM1>
```

```
COM1> gim <CR>
$R: gim
```

```
IonosphereModel, off  
COM1>
```


| | | | | | | | | | | |
|-----|---------------------|--------|----------------|--|--|--|--|--|--|--|
| smv | setMagneticVariance | Mode | Variation | | | | | | | |
| gmw | getMagneticVariance | | | | | | | | | |
| | | auto | -180.0 ... 0.0 | | | | | | | |
| | | manual | ... 180.0 deg | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Earth Models](#)

Use these commands to define the magnetic variation (a.k.a. magnetic declination) at the current position. The magnetic variation specifies the local offset of the direction to the magnetic north with respect to the geographic north. The variation is positive when the magnetic north is east of the geographic north.

By default (the argument *Mode* is set to `auto`), the receiver automatically computes the variation according to the 12th generation of the International Geomagnetic Reference Field (IGRF) model, using the IGRF2015 coefficients corrected for the secular variation.

Note that the magnetic variation is used solely in the generation of NMEA messages.

Examples

```
COM1> smv, manual, 1.1 <CR>
$R: smv, manual, 1.1
    MagneticVariance, manual, 1.1
COM1>
```

```
COM1> gmw <CR>
$R: gmw
    MagneticVariance, manual, 1.1
COM1>
```

| | | | | | | | | | | |
|------|---------------------|-------------|--|--|--|--|--|--|--|--|
| snrc | setNetworkRTKConfig | NetworkType | | | | | | | | |
| gnrc | getNetworkRTKConfig | | | | | | | | | |
| | | auto | | | | | | | | |
| | | VRS | | | | | | | | |

RxControl: Navigation > Positioning Mode > Differential Corrections

Use these commands to define/inquire the type of the RTK network providing the differential corrections.

In most cases, it is recommended to leave the *Type* argument to `auto` to let the receiver autodetect the network type. For some types of VRS networks (especially for those having long baselines between the base stations), optimal performance is obtained by forcing the type to VRS.

Example

```
COM1> snrc, VRS <CR>
$R: snrc, VRS
    NetworkRTKConfig, VRS
COM1>
```

| spm gpm | setPVTMode getPVTMode | Mode | RoverMode | RefPos | | | | | | |
|------------|--------------------------|-----------------|--|---|--|--|--|--|--|--|
| | | Static Rover | + StandAlone + SBAS + DGPS + RTKFloat + RTKFixed + RTK all | auto Geodetic1 Geodetic2 Geodetic3 Geodetic4 Geodetic5 Cartesian1 Cartesian2 Cartesian3 Cartesian4 Cartesian5 | | | | | | |

[RxControl: Navigation > Positioning Mode > PVT Mode](#)

Use these commands to define/inquire the main PVT mode of the receiver. The argument *Mode* specifies the general positioning mode. If *Rover* is selected, the receiver assumes that it is moving and it computes the best PVT allowed by the *RoverMode* argument. If *Static* is selected, the receiver assumes that it is static and it reports a constant position. The static position can be specified by the user or computed by the receiver, according to the settings of the *RefPos* argument.

The argument *RoverMode* specifies the allowed PVT modes when the receiver is operating in *Rover* mode. Different modes can be combined with the "+" operator. Refer to section 2.4 for a description of the PVT modes. The value *RTK* is an alias for *RTKFloat*+*RTKFixed*. When more than one mode is enabled in *RoverMode*, the receiver automatically selects the mode that provides the most accurate solution with the available data.

The *RefPos* argument defines the reference position of the antenna ARP. This is the position that is encoded in the RINEX header (after application of the marker-ARP offset specified with the **setAntennaOffset** command) and in the relevant RTCM and CMR differential correction messages.

If *RefPos* is set to *Geodetic*i** or *Cartesian*i**, the fixed ARP coordinates must be provided by the user with the **setStaticPosCartesian** or the **setStaticPosGeodetic** commands.

If *RefPos* is set to *auto*, the reference ARP position is computed by the receiver. In *rover* mode, the reference position is not fixed. This is the setting that must be used on moving platforms.

Examples

```
COM1> spm, Rover, StandAlone+RTK <CR>
$R: spm, Rover, StandAlone+RTK
    PVTMode, Rover, StandAlone+RTK, auto
COM1>
```

To set up a fixed base station at a known location, use the following:

```
COM1> sspg, Geodetic1, 50.5209, 4.4245, 113.3 <CR>
$R: sspg, Geodetic1, 50.5209, 4.4245, 113.3
    StaticPosGeodetic, Geodetic1, 50.52090000, 4.42450000, 113.3000
COM1> spm, Static, , Geodetic1 <CR>
$R: spm, Static, , Geodetic1
```

```
PVTMode, Static, StandAlone+RTK, Geodetic1  
COM1>
```

| srl grl | setRAIMLevels getRAIMLevels | Mode | Pfa | Pmd | Reliability | | | | | |
|------------|--------------------------------|-----------|-----------------------|-----------------------|-----------------------|--|--|--|--|--|
| | | off on | -12... <u>4</u> ...-1 | -12... <u>4</u> ...-1 | -12... <u>3</u> ...-1 | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Integrity](#)

Use these commands to define/inquire the parameters of the Receiver Autonomous Integrity Monitoring (RAIM) algorithm in rover PVT mode.

The *Mode* argument acts as an on/off switch: it determines whether RAIM is active or not.

The *Pfa* argument sets the probability of false alarm of the w-test used in the "identification" step of the RAIM algorithm. Increasing this parameter increases the integrity but may reduce the availability of the positional solution.

The *Pmd* argument sets the probability of missed detection, which the receiver uses to compute the Minimal Detectable Bias and hence the XERL values.

The *Reliability* argument sets the probability of false alarm of the Overall Model test used in the "detection" step of the RAIM algorithm.

The value to be provided in the *Pfa*, *Pmd* and *Reliability* arguments are the base-10 logarithms of the desired probabilities. For instance, if you want a probability of false alarm of 1e-6, you have to set the *Pfa* argument to -6.

Note that this command has no effect when the receiver is configured in static PVT mode with the **setPVTMode, Static** command. In static PVT mode, the RAIM algorithm uses fixed parameters that cannot be changed by the user.

Examples

To configure the receiver outlier detection with a probability of 1e-4 (0.01%) that a false alarm will be raised (type I error), a probability of 1e-4 (0.01%) that an outlier will be missed (type II error) and an Overall Model probability of false alarm of 1e-6 (0.0001%), use:

```
COM1> srl, on, -4, -4, -6 <CR>
$R: srl, on, -4, -4, -6
    RAIMLevels, on, -4, -4, -6
COM1>
```

To disable the outlier detection, use:

```
COM1> srl, off <CR>
$R: srl, off
    RAIMLevels, off, -4, -4, -6
COM1>
```

| srd grd | setReceiverDynamics getReceiverDynamics | Level | Motion | | | | | | | |
|------------|--|----------|----------------|--|--|--|--|--|--|--|
| | | Max | Static | | | | | | | |
| | | High | Quasistatic | | | | | | | |
| | | Moderate | Pedestrian | | | | | | | |
| | | Low | Automotive | | | | | | | |
| | | | RaceCar | | | | | | | |
| | | | HeavyMachinery | | | | | | | |
| | | | UAV | | | | | | | |
| | | | Unlimited | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Motion](#)

Use these commands to set the type of dynamics the GNSS antenna is subjected to.

The *Level* argument sets the balance between noise and dynamics in the GNSS measurements and the PVT solution. If rapid displacements (such as those caused by shocks, drops, and oscillations) need to be detected, the *Level* argument can be set to *High*. In that case, high-frequency motion becomes visible at the expense of an increase in the noise. Conversely, if noise reduction is important, the *Level* argument can be set to *Low*. It is generally recommended to keep the default value (*Moderate*), where the receiver will sense the dynamics and adapt itself accordingly. The *Max* level is a special setting, for which the navigation filter is disabled and the receiver computes epoch-by-epoch independent PVT solutions. Note that the *Max* level can lead to a longer latency of the PVT output.

The *Motion* argument defines the general characteristics of the receiver motion, such as the expected speed, rotation, and vibration level. This can help the receiver to optimize certain parameters for your application.

For example, when selecting the *Pedestrian* motion, signal reacquisition will be faster after a long outage, as the position is known not to have changed much.

| Motion | Description |
|----------------|---|
| Static | Fixed base and reference stations. |
| Quasistatic | Low speed, limited area motion typical of surveying applications. |
| Pedestrian | Low speed (<7m/s) motion. E.g. pedestrians, low-speed land vehicles, ... |
| Automotive | Medium speed (<50m/s) motion. E.g. passenger cars, rail vehicles. This setting is generally adequate for most applications. |
| RaceCar | High speed terrestrial vehicle. E.g. race cars, ... |
| HeavyMachinery | Construction equipment, tractors, ... |
| UAV | Unmanned Aerial Vehicle. |
| Unlimited | Unconstrained motion. |

Example

```
COM1> srd, Max <CR>
$R: srd, Max
ReceiverDynamics, Max, Automotive
COM1>
```

| ernf grnf | exeResetNavFilter getResetNavFilter | Level | | | | | | | | |
|--------------|--|---|--|--|--|--|--|--|--|--|
| | | + PVT + AmbRTK + GNSSAttitude + AmbGNSSAttitude all | | | | | | | | |

RxControl: Navigation > Receiver Initialization > Reset Navigation Filter

Use this command to reset the different navigation filters in the receiver. The user can reset each navigation filter independently or together with the value `all`.

The following values for *Level* are defined:

| Level | Description |
|-----------------|--|
| PVT | Reset the whole PVT filter such that all previous positioning information is discarded, including the RTK ambiguities and the INS/GNSS integration filter when applicable. |
| AmbRTK | Only reset the ambiguities used in RTK positioning to float status. |
| GNSSAttitude | Reset the whole attitude filter such that all previous attitude information is discarded and the filter is re-initialized, including the attitude ambiguities. |
| AmbGNSSAttitude | Only reset the ambiguities used in attitude computation to float status. |

Example

```
COM1> ernf, PVT <CR>
$R: ernf, PVT
    ResetNavFilter, PVT
COM1>
```

| SSU gsu | setSatelliteUsage getSatelliteUsage | Satellite | | | | | | | | |
|------------|--|--|--|--|--|--|--|--|--|--|
| | | none +G01 ... G32 +R01 ... R24 +R25 +R26 +R27 +R28 +R29 +R30 +E01 ... E36 +S120 ... S158 +C01 ... C63 +J01 ... J07 +GPS +GLONASS +GALILEO +SBAS +BEIDOU +QZSS all | | | | | | | | |

[RxControl: Navigation > Advanced User Settings > PVT > Satellite Usage](#)

Use these commands to define/inquire which satellites are allowed to be included in the PVT computation. It is possible to enable or disable a single satellite (e.g. G01 for GPS PRN1), or a whole constellation. Gxx, Exx, Rxx, Cxx and Sxxx refer to a GPS, Galileo, GLONASS, BeiDou and SBAS satellite respectively. GLONASS satellites must be referenced by their slot number in this command.

Examples

To only use GPS measurements in the PVT computation, use:

```
COM1> ssu, GPS <CR>
$R: ssu, GPS
  SatelliteUsage, G01+G02+G03+G04+G05+G06+G07+G08+G09+G10+G11
  +G12+G13+G14+G15+G16+G17+G18+G19+G20+G21+G22+G23+G24+G25+G26
  +G27+G28+G29+G30+G31+G32
COM1>
```

To add the usage of SBAS measurements in the PVT, use:

```
COM1> ssu, +SBAS <CR>
$R: ssu, +SBAS
  SatelliteUsage, G01+G02+G03+G04+G05+G06+G07+G08+G09+G10+G11
  +G12+G13+G14+G15+G16+G17+G18+G19+G20+G21+G22+G23+G24+G25+G26
  ...
COM1>
```

To remove the measurement of one satellite from the PVT, use:

```
COM1> ssu, -S120 <CR>
$R: ssu, -S120
  SatelliteUsage, G01+G02+G03+G04+G05+G06+G07+G08+G09+G10+G11
  +G12+G13+G14+G15+G16+G17+G18+G19+G20+G21+G22+G23+G24+G25+G26
  ...
CM1>
```


| ssbc gsbc | setSBASCorrections getSBASCorrections | Satellite | SISMode | NavMode | DO229Version | | | | | |
|--------------|--|--|----------------------------|---|-----------------------|--|--|--|--|--|
| | | <u>auto</u> EGNOS WAAS MSAS GAGAN SDCM S120 ... S158 | Test <u>Operational</u> | EnRoute PrecApp <u>MixedSystems</u> | <u>auto</u> DO229C | | | | | |

RxControl: Navigation > Positioning Mode > SBAS Corrections

Use these commands to define/inquire the details on the usage of SBAS data in the PVT computation. This command does not define whether SBAS corrections are to be used or not in the PVT (this is done by the **setPVTMode** command), but it specifies how these corrections should be used.

The *Satellite* argument defines the provider of SBAS corrections, being either an individual satellite or a satellite system. If EGNOS, WAAS, MSAS, GAGAN or SDCM is selected, the receiver restricts the automatic selection of a satellite to those that are part of the EGNOS, WAAS, MSAS, GAGAN or SDCM system. When auto is selected for the *Satellite* argument, the receiver will automatically select a satellite on the basis of the location of the receiver and on the availability of SBAS corrections.

The *SISMode* argument defines the interpretation of a "Do Not Use for Safety Applications" message.

When set to Operational, the receiver will discard all SBAS corrections received from a satellite upon reception of a MT00 from that satellite. Note that MT02 content encoded in a MT00 message will be interpreted by the receiver as a MT02 message: only MT00 with all '0' symbols will be interpreted as a true "Do Not Use for Safety Applications". When the argument *SISMode* is set to Test, the receiver will ignore the reception of a "Do Not Use for Safety Applications" message. This provides the possibility to use a signal from a SBAS system in test mode.

The SBAS standards, which have their origin in aviation, make a distinction between two positioning applications: en-route and precision approach. The choice between both applications influences the length of the interval during which the SBAS corrections are valid. During a precision approach the validity of the data is much shorter. The receiver can operate in both modes, which is controlled by the *NavMode* argument.

In EnRoute or in PrecApp mode, the receiver only uses the satellite systems for which SBAS corrections are available. For best positioning accuracy, it is typically preferable to include all satellites in the position computation, even if they are not corrected by SBAS. This is achieved by the MixedSystems mode.

The *DO229Version* argument can be used to specify which version of the DO 229 standard to conform to.

Example

To force the receiver to use corrections from PRN 122 and ignore message MT00:

```
COM1> ssbc, S122, Test <CR>
$R: ssbc, S122, Test
      SBASCorrections, S122, Test, MixedSystems, auto
```

COM1>

| snu gnu | setSignalUsage getSignalUsage | PVT | NavData | | | | | | | |
|------------|----------------------------------|---|---|--|--|--|--|--|--|--|
| | | +GPSL1CA +GPSL2PY +GPSL2C +GPSL5 +GLOL1CA +GLOL2P +GLOL2CA +GLOL3 +GALL1BC +GALE5a +GALE5b +GALE5 +GEOL1 +GEOL5 +BDSB1I +BDSB2I +BDSB3I +BDSB1C +BDSB2a +QZSL1CA +QZSL2C +QZSL5 all | +GPSL1CA +GPSL2PY +GPSL2C +GPSL5 +GLOL1CA +GLOL2P +GLOL2CA +GLOL3 +GALL1BC +GALE5a +GALE5b +GALE5 +GEOL1 +GEOL5 +BDSB1I +BDSB2I +BDSB3I +BDSB1C +BDSB2a +QZSL1CA +QZSL2C +QZSL5 all | | | | | | | |

[RxControl: Navigation > Advanced User Settings > PVT > Signal Usage](#)

Use these commands to define/inquire which signal types are used by the receiver.

The *PVT* argument lists the signals that can be used by the PVT. Removing a signal from the list will disable the usage of the corresponding range, phase & Doppler measurements in the PVT computation.

The *NavData* argument lists the signals for which the receiver is allowed to decode the navigation message. Removing a signal from the list will disable the usage of the corresponding navigation information (ephemeris, ionosphere parameters ...).

Example

To force the receiver to only use the L1 GPS C/A measurements and navigation information in the PVT solution, use:

```
COM1> snu, GPSL1CA, GPSL1CA <CR>
$R: snu, GPSL1CA, GPSL1CA
      SignalUsage, GPSL1CA, GPSL1CA
COM1>
```

| sspc gspc | setStaticPosCartesian getStaticPosCartesian | Position Position | X | Y | Z | Datum | | | | |
|--------------|--|---|--|--|--|---|--|--|--|--|
| | | + Cartesian1 + Cartesian2 + Cartesian3 + Cartesian4 + Cartesian5 all | -8000000.0000 ...0.0000 ...8000000.0000 m | -8000000.0000 ...0.0000 ...8000000.0000 m | -8000000.0000 ...0.0000 ...8000000.0000 m | WGS84 ETRS89 NAD83 NAD83_PA NAD83_MA GDA94 GDA2020 User1 User2 Other | | | | |

[RxControl: Navigation > Positioning Mode > PVT Mode](#)

Use these commands to define/inquire a set of Cartesian coordinates. This command should be used in conjunction with the **setPVTMode** command to specify a reference position. The Cartesian coordinates in the X, Y and Z arguments must refer to the antenna reference point (ARP), and not to the marker.

The argument *Datum* specifies the datum to which the coordinates refer. When the PVT engine is in static mode (**setPVTMode**, **Static** command), the specified datum is reflected in the *Datum* field of the position-related SBF blocks (e.g. *PVTCartesian*). Note that the receiver does not apply any datum transformation to the X, Y and Z coordinates. In particular, the coordinates are encoded without change into the relevant differential correction messages.

| Datum | Description |
|----------|---|
| WGS84 | WGS84 or ITRFxx (the receiver does not make a distinction between them) |
| ETRS89 | European ETRS89 (ETRF2000 realization) |
| NAD83 | NAD83(2011), North American Datum (2011) |
| NAD83_PA | NAD83(PA11), North American Datum, Pacific plate (2011) |
| NAD83_MA | NAD83(MA11), North American Datum, Marianas plate (2011) |
| GDA94 | GDA94(2010), Geocentric Datum of Australia (2010) |
| GDA2020 | GDA2020, Geocentric Datum of Australia 2020 |
| User1 | First user-defined datum. The corresponding ellipsoid must be defined with the setUserEllipsoid command. |
| User2 | Second user-defined datum |
| Other | Datum not in the list or unknown |

Example

To set up a static base station in Cartesian coordinates:

```
COM1> sspc, Cartesian1, 4019952.028, 331452.954, 4924307.458 <CR>
$R: sspc, Cartesian1, 4019952.028, 331452.954, 4924307.458
      StaticPosCartesian, Cartesian1, 4019952.0280, 331452.9540,
      4924307.4580, WGS84
COM1> spm, Static, , Cartesian1 <CR>
$R: spm, Static, , Cartesian1
```

```
PVTMode, Static, StandAlone+SBAS+DGPS+RTKFloat+RTKFixed,  
    Cartesian1  
COM1>
```

| sspg gspg | setStaticPosGeodetic getStaticPosGeodetic | Position Position | Latitude | Longitude | Altitude | Datum | | | | |
|--------------|--|--|---|---|--|---|--|--|--|--|
| | | + Geodetic1 + Geodetic2 + Geodetic3 + Geodetic4 + Geodetic5 all | -90.000000000 ... 0.000000000 ... 90.000000000 deg | -180.000000000 ... 0.000000000 ... 180.000000000 deg | -1000.0000 ... 0.0000 ... 30000.0000 m | WGS84 ETRS89 NAD83 NAD83_PA NAD83_MA GDA94 GDA2020 User1 User2 Other | | | | |

[RxControl: Navigation > Positioning Mode > PVT Mode](#)

Use these commands to define/inquire a set of geodetic coordinates. This command should be used in conjunction with the **setPVTMode** command to specify a reference position. The geodetic coordinates in the *Latitude*, *Longitude* and *Altitude* arguments must refer to the antenna reference point (ARP), and not to the marker.

The argument *Datum* specifies the datum to which the coordinates refer. See the **setStaticPosCartesian** command for a short description of the supported datums.

Example

To set up a static base station in geodetic coordinates:

```
COM1> sspg, Geodetic1, 50.86696443, 4.71347657, 114.880 <CR>
$R: sspg, Geodetic1, 50.86696443, 4.71347657, 114.880
    StaticPosGeodetic, Geodetic1, 50.86696443, 4.71347657, 114.8800,
    WGS84
COM1> spm, Static, , Geodetic1 <CR>
$R: spm, Static, , Geodetic1
    PVTMode, Static, StandAlone+SBAS+DGPS+RTKFloat+RTKFixed,
    Geodetic1
COM1>
```

| | | | | | | | | | | |
|-----|---------------------|--------------|--------------|--|--|--|--|--|--|--|
| stm | setTroposphereModel | ZenithModel | MappingModel | | | | | | | |
| gtm | getTroposphereModel | | | | | | | | | |
| | | off | Niell | | | | | | | |
| | | Saastamoinen | MOPS | | | | | | | |
| | | MOPS | | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Atmosphere](#)

Use these commands to define/inquire the type of model used to correct tropospheric errors in the PVT computation.

The *ZenithModel* parameter indicates which model the receiver uses to compute the dry and wet delays for radio signals at 90 degree elevation. The modelled zenith tropospheric delay depends on assumptions for the local air total pressure, the water vapour pressure and the mean temperature. The following zenith models are defined:

| ZenithModel | Description |
|--------------|--|
| off | The measurements will not be corrected for the troposphere delay. This may be desirable if the receiver is connected to a GNSS signal simulator. |
| Saastamoinen | Saastamoinen, J. (1973). "Contributions to the theory of atmospheric refraction". In three parts. Bulletin Geodesique, No 105, pp. 279-298; No 106, pp. 383-397; No. 107, pp. 13-34. |
| MOPS | Minimum Operational Performance Standards for Global Positioning/Wide Area Augmentation System Airborne Equipment RTCA/DO-229C, November 28, 2001. |

The *Saastamoinen* model uses user-provided values of air temperature, total air pressure referenced to the Mean Sea Level and relative humidity (see **setTroposphereParameters** command) and estimates actual values adjusted to the receiver height.

The MOPS model neglects the user-provided values and instead assumes a seasonal model for all the climatic parameters. Local tropospheric conditions are estimated based on the coordinates and time of the year.

The use of the *Saastamoinen* model can be recommended if external information on temperature, pressure, humidity is available. Otherwise it is advisable to rely on climate models.

The zenith delay is mapped to the current elevation for each satellite using the requested *MappingModel*. The following mapping models are defined:

| MappingModel | Description |
|--------------|---|
| Niell | Niell, A.E. (1996). Global Mapping Functions for the atmosphere delay at radio wavelengths, Journal of Geophysical Research, Vol. 101, No. B2, pp. 3227-3246. |
| MOPS | Minimum Operational Performance Standards for Global Positioning/Wide Area Augmentation System Airborne Equipment RTCA/DO-229C, November 28, 2001. |

Examples

```
COM1> stm, MOPS, MOPS <CR>  
$R: stm, MOPS, MOPS  
TroposphereModel, MOPS, MOPS  
COM1>
```

```
COM1> gtm <CR>  
$R: gtm  
TroposphereModel, MOPS, MOPS  
COM1>
```


| | | | | | | | | | | |
|-----|--------------------------|-----------------------------------|--|--------------------|--|--|--|--|--|--|
| stp | setTroposphereParameters | Temperature | Pressure | Humidity | | | | | | |
| gtp | getTroposphereParameters | | | | | | | | | |
| | | -100.0 ... 15.0 ... 100.0 degC | 800.00 ... 1013.25 ... 1500.00 hPa | 0 ... 50 ... 100 % | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Atmosphere](#)

Use these commands to define/inquire the climate parameters to be used when the zenith troposphere is estimated using the Saastamoinen model (see the **setTroposphereModel** command).

The troposphere model assumes the climate parameters to be valid for a receiver located at the Mean Sea Level (MSL). If you want to use your receiver with a weather station, you have to convert the measured *Temperature*, *Pressure* and *Humidity* to MSL.

Example

```
COM1> stp, 25, 1013, 60<CR>
$R: stp, 25, 1013, 60
    TroposphereParameters, 25.0, 1013.00, 60
COM1>
```

3.2.7 Attitude Determination

| sal gal | setAntennaLocation getAntennaLocation | Antenna Antenna | Mode | DeltaX | DeltaY | DeltaZ | | | | |
|------------|--|-------------------------|----------------|---|---|---|--|--|--|--|
| | | + Aux1 + Base all | auto manual | -1000.0000 ... 0.0000 ... 1000.0000 m | -1000.0000 ... 0.0000 ... 1000.0000 m | -1000.0000 ... 0.0000 ... 1000.0000 m | | | | |

RxControl: Navigation > Positioning Mode > GNSS Attitude

Use this command to define/inquire the relative location of the antennas in the vehicle reference frame in the context of attitude determination. See appendix A for a description of the vehicle reference frame.

The attitude of a vehicle (more precisely the heading and pitch angles) can be determined from the orientation of the baseline between two antennas attached to the vehicle. These two antennas can be connected to two receivers configured in moving-base RTK operation (moving-base attitude), or to a single multi-antenna receiver (multi-antenna attitude). Use the command **setGNSSAttitude** to enable attitude determination.

In multi-antenna attitude, *Antenna* should be set to `Aux1` to specify the relative position of the aux1 antenna with respect to the main antenna. In moving-base attitude, **setAntennaLocation** should be invoked at the rover receiver with the *Antenna* argument set to `Base` to specify the relative position of the base antenna with respect to the rover antenna.

In `auto` mode, the receiver determines the attitude angles assuming that the baseline between the antenna ARPs is parallel to the longitudinal axis of the vehicle, and that the aux1/base antenna is in front of the main/rover antenna (i.e. towards the direction of movement). The length of the baseline is automatically computed by the receiver, and the baseline may be flexible. The *DeltaX*, *DeltaY* and *DeltaZ* arguments are ignored in `auto` mode.

In `manual` mode, the user can specify the exact position of the aux1/base antenna with respect to the main/rover antenna in the vehicle reference frame. Selecting `manual` mode implies that the baseline is rigid. The *DeltaX*, *DeltaY* and *DeltaZ* coordinates are ARP-to-ARP.

Example

In the case of moving-base attitude determination, if the moving-base antenna is located one meter to the left of the rover antenna, and 10 cm below, you should use:

```
COM1> sal, Base, manual, 0, -1, 0.1 <CR>
$R: sal, Base, manual, 0, 1, 0.1
    AntennaLocation, Base, manual, 0.0000, -1.0000, 0.1000
COM1>
```

| | | | | | | | | | | |
|-----|-------------------|---------------------------------------|-------------------------------------|--|--|--|--|--|--|--|
| sto | setAttitudeOffset | Heading | Pitch | | | | | | | |
| gto | getAttitudeOffset | | | | | | | | | |
| | | -360.000 ... 0.000 ... 360.000 deg | -90.000 ... 0.000 ... 90.000 deg | | | | | | | |

[RxControl: Navigation](#) > [Positioning Mode](#) > [GNSS Attitude](#)

Use this command to specify the offsets that the receiver applies to the computed attitude angles.

The attitude of a vehicle can be determined from the orientation of the baseline between two antennas attached to the vehicle. By default, the receiver determines the attitude angles assuming that the baseline between the antenna ARPs is parallel to the longitudinal axis of the vehicle. Attitude biases appear when this is not the case. The user can use this command to provide the value of the biases, such that the receiver can compensate for them before outputting the attitude.

The receiver subtracts the provided biases from the attitude angles before encoding them in NMEA or in the `AttEuler` SBF block.

Another way to avoid attitude biases is to provide the accurate position of the antennas in the vehicle reference frame. See the command **setAntennaLocation** for more details.

Example

```
COM1> sto, 93.2, -0.4<CR>
$R: sto, 93.2, -0.4
    AttitudeOffset, 93.200, -0.400
COM1>
```

| | | | | | | | | | | |
|-----|-----------------|--------------|------------------|--|--|--|--|--|--|--|
| sga | setGNSSAttitude | Source | MultiAntennaMode | | | | | | | |
| gga | getGNSSAttitude | | | | | | | | | |
| | | none | + Float | | | | | | | |
| | | MovingBase | + Fixed | | | | | | | |
| | | MultiAntenna | | | | | | | | |

[RxControl: Navigation > Positioning Mode > GNSS Attitude](#)

Use this command to define/inquire the way GNSS-based attitude is computed.

The attitude of a vehicle (more precisely the heading and pitch angles) can be determined from the orientation of the baseline between two antennas attached to the vehicle. See also the **setAntennaLocation** command.

The *Source* argument specifies how to compute the GNSS-based attitude:

| Source | Description |
|--------------|--|
| none | GNSS attitude computation is disabled. |
| MovingBase | Attitude is computed from the baseline between antennas connected to two receivers configured in moving-base RTK operation (moving-base attitude). |
| MultiAntenna | Attitude is computed from the baseline between antennas connected to a single multi-antenna receiver (multi-antenna attitude). |

When *Source* is `MultiAntenna`, the second argument specifies which type of attitude solution is allowed for output (fixed or float ambiguities). For highest accuracy, fixed ambiguity mode should be selected.

Example

```
COM1> sga, MovingBase <CR>
$R: sga, MovingBase
      GNSSAttitude, MovingBase, Fixed
COM1>
```

3.2.8 Datum Definition

| sgd ggd | setGeodeticDatum getGeodeticDatum | TargetDatum | | | | | | | | |
|------------|--------------------------------------|---|--|--|--|--|--|--|--|--|
| | | WGS84 ETRS89 NAD83 NAD83_PA NAD83_MA GDA94 GDA2020 Default User1 User2 | | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Datum](#)

Use this command to define the datum to which you want the coordinates to refer.

| TargetDatum | Description |
|-------------|---|
| WGS84 | Equivalent to <code>Default</code> |
| ETRS89 | European ETRS89 (ETRF2000 realization) |
| NAD83 | NAD83(2011), North American Datum (2011) |
| NAD83_PA | NAD83(PA11), North American Datum, Pacific plate (2011) |
| NAD83_MA | NAD83(MA11), North American Datum, Marianas plate (2011) |
| GDA94 | GDA94(2010), Geocentric Datum of Australia (2010) |
| GDA2020 | GDA2020, Geocentric Datum of Australia 2020 |
| Default | Default datum, which depends on the positioning mode as explained below except when a built-in local coordinate operation is manually selected with the setLocalCoordOperation command. In that case, the datum is set accordingly to the selected coordinate operation. |
| User1 | First user-defined datum. The corresponding transformation parameters must be specified by the setUserDatum and setUserDatumVel commands, while the corresponding ellipsoid must be defined by the setUserEllipsoid command. |
| User2 | Second user-defined datum |

By default (argument *TargetDatum* set to `Default`), the datum depends on the positioning mode. For standalone and SBAS positioning, the coordinates refer to a global datum: WGS84 or ITRF (recent realisations of WGS84 and ITRF are closely aligned and the receiver considers them equivalent). When using DGNSS or RTK corrections from a regional DGNSS/RTK provider, the coordinates usually refer to a regional datum (e.g. ETRS89 in Europe or NAD83 in North America).

With this command, the user can select the datum the coordinates should refer to. In case you are using corrections from a regional DGNSS/RTK provider, the datum to be specified here must be the datum used by your correction provider.

When a non-default datum is selected, the receiver transforms all the WGS84/ITRF coordinates to the specified datum. Positions obtained using local or regional DGNSS/RTK corrections are not transformed, as it is assumed that the selected datum is the one used by the DGNSS/RTK provider.

In the current firmware version, the `WGS84` value for the *TargetDatum* argument has no effect, but it is kept for backwards compatibility reasons. Setting *TargetDatum* to `WGS84` is equivalent to setting it to `Default`.

Example

```
COM1> sgd, ETRS89 <CR>
$R: sgd, ETRS89
      GeodeticDatum, ETRS89
COM1>
```

| sud gud | setUserDatum getUserDatum | Datum Datum | T_x | T_y | T_z | R_x | R_y | R_z | D | |
|------------|------------------------------|----------------|----------------------|----------------------|----------------------|------------------|------------------|------------------|-------------------|--|
| | | + User1 | -2000000.00 | -2000000.00 | -2000000.00 | -100.0000 | -100.0000 | -100.0000 | -100.00000 | |
| | | + User2 | ... 0.00 | ... 0.00 | ... 0.00 | ... 0.0000 | ... 0.0000 | ... 0.0000 | ... 0.00000 | |
| | | all | ... 2000000.00 mm | ... 2000000.00 mm | ... 2000000.00 mm | ... 100.0000 mas | ... 100.0000 mas | ... 100.0000 mas | ... 100.00000 ppb | |

[RxControl: Navigation > Receiver Operation > Position > Datum](#)

Use these commands to define datum transformation parameters from the global WGS84/ITRF datum to the user datum identified by the first argument.

The receiver applies the linearized form of the Helmert similarity transformation. The coordinates in WGS84/ITRF are transformed to the user datum using the following formula:

$$\begin{pmatrix} X \\ Y \\ Z \end{pmatrix}_{User} = \begin{pmatrix} T_x \\ T_y \\ T_z \end{pmatrix} + \begin{pmatrix} D+1 & -R_z & R_y \\ R_z & D+1 & -R_x \\ -R_y & R_x & D+1 \end{pmatrix} \cdot \begin{pmatrix} X \\ Y \\ Z \end{pmatrix}_{WGS84/ITRF}$$

where T_x , T_y and T_z are the three translation components, R_x , R_y and R_z are the rotation angles and D is the scale factor. Note that the rotation angles are expressed in radians in the above formula, but they must be provided in milliarcsecond (1 mas = $2\pi/360/3600000$ radians) in the arguments of the command. The sign convention corresponds to that of the IERS Conventions (2010), Technical Note No. 36.

The time derivative of the transformation parameters can be specified with the command **setUserDatumVel**.

For the receiver to apply the transformation parameters, the corresponding user datum must be selected in the **setGeodeticDatum** command.

Example

```
COM1> sud, User1, 52.1, 49.3, -58.5, 0.891, 5.390, -8.712,
1.34<CR>
$R: sud, User1, 52.1, 49.3, -58.5, 0.891, 5.390, -8.712, 1.34
UserDatum, User1, 52.10, 49.30, -58.50, 0.8910, 5.3900, -8.7120,
1.34000
COM1>
```

| sudv gudv | setUserDatumVel getUserDatumVel | Datum Datum | <i>TxVel</i> | <i>TyVel</i> | <i>TzVel</i> | <i>RxVel</i> | <i>RyVel</i> | <i>RzVel</i> | <i>DVel</i> | <i>RefYear</i> |
|--------------|------------------------------------|---------------------------|--|--|--|--|--|--|---|--|
| | | + User1 + User2 all | -2000.00 ... 0.00 ... 2000.00 mm/yr | -2000.00 ... 0.00 ... 20000.00 mm/yr | -2000.00 ... 0.00 ... 2000.00 mm/yr | -10.0000 ... 0.0000 ... 10.0000 mas/yr | -10.0000 ... 0.0000 ... 10.0000 mas/yr | -10.0000 ... 0.0000 ... 10.0000 mas/yr | -1.00000 ... 0.00000 ... 1.00000 ppb/yr | 1900.00 ... 2000.00 ... 2100.00 yr |

[RxControl: Navigation > Receiver Operation > Position > Datum](#)

Use these commands to define the time derivative of the seven datum transformation parameters defined with the **setUserDatum** command.

For instance, *TxVel* is the yearly change of the X-translation component. At the epoch specified with *RefYear* (in decimal years), the X-translation component is *Tx* as defined in **setUserDatum**. One year later, the X-translation component is *Tx+TxVel*, etc.

Refer to the **setUserDatum** command for a description of the datum transformation formula implemented in the receiver.

Example

```
COM1> sudv, User1, 0.1, 0.1, -1.8, 0.081, 0.49, -0.792, 0.08,
      2000<CR>
$R: sudv, User1, 0.1, 0.1, -1.8, 0.081, 0.49, -0.792, 0.08, 2000
    UserDatumVel, User1, 0.10, 0.10, -1.80, 0.0810, 0.4900, -0.7920,
      0.08000, 2000.00
COM1>
```


| sue gue | setUserEllipsoid getUserEllipsoid | Datum Datum | A | Invf | | | | | | |
|------------|--------------------------------------|---------------------------|---|---|--|--|--|--|--|--|
| | | + User1 + User2 all | 6300000.000 ... 6378137.000 ... 6400000.000 m | 290.000000000 ... 298.257223563 ... 305.000000000 | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Datum](#)

Use these commands to define the ellipsoid associated with the `User1` or `User2` datum.

a is the reference ellipsoid semi-major axis and $Invf$ is the inverse of the flattening.

See also the **setGeodeticDatum** and the **setUserDatum** commands.

Example

```
COM1> sue, User1, 6378388, 297 <CR>
$R: sue, User1, 6378388, 297
      UserEllipsoid, User1, 6378388.000, 297.000000000
COM1>
```

3.2.9 Transformation to Local Coordinates

| smth gmth | setENHTransfoHorizontal getENHTransfoHorizontal | TransfoID TransfoID | DeltaE | DeltaN | E0 | N0 | AlphaEE | AlphaEN | AlphaNE | AlphaNN |
|--------------|--|------------------------|---|---|---|---|---|---|---|---|
| | | + lt1 all | -250.0000 ... 0.0000 ... 250.0000 m | -250.0000 ... 0.0000 ... 250.0000 m | -8000000.0000 ... 0.0000 ... 8000000.0000 m | -8000000.0000 ... 0.0000 ... 8000000.0000 m | -1000.0000 ... 0.0000 ... 1000.0000 ppm | -1000.0000 ... 0.0000 ... 1000.0000 ppm | -1000.0000 ... 0.0000 ... 1000.0000 ppm | -1000.0000 ... 0.0000 ... 1000.0000 ppm |

[RxControl: Navigation > Receiver Operation > Position > Local Transformations](#)

This command defines how to adjust the easting and northing coordinates if a plane grid coordinate adjustment is enabled with the *ENHTransfo* argument of the **setLocalCoordOperation** command.

If enabled, the receiver applies the following transformation as last step in the computation of the easting and northing, prior to outputting them in the *PosProjected* SBF block:

$$\begin{pmatrix} E_T \\ N_T \end{pmatrix} = \begin{pmatrix} E_S \\ N_S \end{pmatrix} + \begin{pmatrix} \delta E \\ \delta N \end{pmatrix} + \begin{pmatrix} \alpha_{EE} & \alpha_{EN} \\ \alpha_{NE} & \alpha_{NN} \end{pmatrix} \cdot \begin{pmatrix} E_S - E_0 \\ N_S - N_0 \end{pmatrix}$$

where E_S and N_S are the easting and northing prior to the transformation, and the other parameters are the arguments of this command. Note that the *alpha* arguments are expressed in ppm.

Example

```
COM1> smth, lt1, 10.904, 10.904, 156.341, 1.3, 1.34, 1.34, 1.34,
      1.34<CR>
$R: smth, lt1, 10.904, 10.904, 156.341, 1.3, 1.34, 1.34, 1.34, 1.34
      ENHTransfoHorizontal, lt1, 10.9040, 10.9040, 156.3410, 1.3000,
      1.3400, 1.3400, 1.3400, 1.3400
COM1>
```

| smtv gmtv | setENHTransfoVertical getENHTransfoVertical | TransfoID TransfoID | DeltaH | E0 | N0 | AlphaHE | AlphaHN | | | |
|--------------|--|------------------------|---|---|---|---|---|--|--|--|
| | | +lt1 all | -250.0000 ...0.0000 ...250.0000 m | -8000000.0000 ...0.0000 ...8000000.0000 m | -8000000.0000 ...0.0000 ...8000000.0000 m | -1000.0000 ...0.0000 ...1000.0000 ppm | -1000.0000 ...0.0000 ...1000.0000 ppm | | | |

[RxControl: Navigation > Receiver Operation > Position > Local Transformations](#)

This command defines how to adjust the height coordinate if a plane grid coordinate adjustment is enabled with the *ENHTransfo* argument of the **setLocalCoordOperation** command.

If enabled, the receiver applies the following transformation as last step in the computation of the height, prior to outputting it in the *Alt* field of the *PosProjected* SBF block:

$$H_T = H_S + \delta H + \alpha_{HE}(E_S - E_0) + \alpha_{HN}(N_S - N_0)$$

where E_S , N_S and H_S are the easting, northing and height before transformation, in meters, and the other parameters are the arguments of this command. Note that the *alphaHE* and *alphaHN* arguments are expressed in ppm.

Example

```
COM1> smtv, lt1, 10.904, 156.341, 1.3, 1.34, 1.34<CR>
$R: smtv, lt1, 10.904, 156.341, 1.3, 1.34, 1.34
    ENHTransfoVertical, lt1, 10.9040, 156.3410, 1.3000, 1.3400,
    1.3400
COM1>
```

| slco glco | setLocalCoordOperation getLocalCoordOperation | OpName (100) | ENHTransfo | | | | | | | |
|--------------|--|--------------|-------------|--|--|--|--|--|--|--|
| | | NETWORK | none lt1 | | | | | | | |

[RxControl: Navigation > Receiver Operation > Position > Local Transformations](#)

Use this command to define the set of operations needed to obtain coordinates in a local coordinate reference system (CRS). The coordinates in the local CRS can be geodetic coordinates (latitude, longitude and local height) reported in the `PosLocal` SBF block, and/or plane grid coordinates (easting, northing) reported in the `PosProjected` SBF block.

The list of possible operations, i.e. the list of valid values for the `OpName` argument, is returned by the `1stLocalCoordOperations` command. The list contains at least two entries: `NONE`, which disables the local operations, and `NETWORK`, which instructs the receiver to use the operation set provided by the DGPS/RTK service provider. In addition, a number of built-in operations are also available. The `NETWORK` operation is the default.

If the `OpName` argument does not match any entry in the list returned by `1stLocalCoordOperations`, `NONE` is assumed.

When selecting the `NETWORK` mode, it is recommended to specify the regional datum in which the network operates, using the `setGeodeticDatum` command. This allows the receiver to continue to output local coordinates during RTK/DGPS outages without datum shift issues. This is not needed when selecting one of the built-in operations.

In some cases, a final adjustment is still needed to obtain accurate plane grid coordinates. The `ENHTransfo` argument can be used for that purpose. It selects a local transformation to be applied as final step in the computation of the easting, northing and local height. The corresponding transformation parameters must be set with the `setENHTransfoHorizontal` and `setENHTransfoVertical` commands. By default, this final adjustment is disabled.

Example

```
COM1> slco, NONE, lt1<CR>
$R: slco, NONE, lt1
    LocalCoordOperation, NONE, lt1
COM1>
```

| llc | lstLocalCoordOperations | Operation | | | | | | | | |
|-----|-------------------------|-----------|--|--|--|--|--|--|--|--|
| | | Overview | | | | | | | | |

Use this command with the argument *Operation* set to *Overview* to get a list of all built-in local coordinate operations. See also the **setLocalCoordOperation** command.

Example

```
COM1> llc, Overview <CR>
$R; llc, Overview
... Here comes the list of known coordinate operations ...
COM1>
```

3.2.10 Timing and Time Management

| scst gcst | setClockSyncThreshold getClockSyncThreshold | Threshold | | | | | | | | |
|--------------|--|---|--|--|--|--|--|--|--|--|
| | | ClockSteering usec500 msec1 msec2 msec3 msec4 msec5 | | | | | | | | |

[RxControl: Navigation > Receiver Operation > Timing](#)

Use these commands to define/inquire the maximum allowed offset between the receiver internal clock and the system time defined by the **setTimingSystem** command.

If the argument `ClockSteering` is selected, the receiver internal clock is continuously steered to the system time to within a couple of nanoseconds. Clock steering accuracy is dependent on the satellite visibility, and it is recommended to only enable it under open-sky conditions.

If any other argument is selected, the internal clock is left free running. Synchronization with the system time is done through regular millisecond clock jumps. More specifically, when the receiver detects that the time offset is larger than *Threshold*, it initiates a clock jump of an integer number of milliseconds to re-synchronise its internal clock with the system time. These clock jumps have no influence on the generation of the xPPS pulses: the xPPS pulses are always maintained within a few nanoseconds from the requested time, regardless of the value of the *Threshold* argument.

Refer to section 2.3 for a more detailed description of the time keeping in your receiver.

Example

```
COM1> scst, msec1<CR>
$R: scst, msec1
      ClockSyncThreshold, msec1
COM1>
```

| sep gep | setEventParameters getEventParameters | Event Event | Polarity | Delay | | | | | | |
|------------|--|-----------------------------|----------------------|--|--|--|--|--|--|--|
| | | + EventA + EventB all | Low2High High2Low | -500.000000 ... 0.000000 ... 500.000000 ms | | | | | | |

[RxControl: Navigation > Receiver Operation > Timing](#)

Use these commands to define/inquire the polarity of the electrical transition on which the receiver will react on its `Event` input(s). The polarity of each event pin can be set individually or simultaneously by using the value `all` for the *Event* argument.

The command also allows defining a time delay for each event. This can be handy when the electrical transition at the event pin is not synchronous with the actual event that needs to be timed. For example, if the electrical transition occurs 100 milliseconds prior to the actual event of interest, the *Delay* argument must be set to 100. *Delay* is positive when the event of interest occurs after the electrical transition, and negative otherwise.

The event time (corrected by the specified delay) is available in the `ExtEvent` SBF block. The position at that time is available in the `ExtEventPVTCartesian` and `ExtEventPVTGeodetic` SBF blocks and the attitude angles in the `ExtEventAttEuler` SBF block. Beware that, when using large *Delay* values in high-dynamics conditions, the position accuracy may degrade.

Note that, when an event pin is configured in `TimeSync` mode with the **`setTimeSyncSource`** command, the functionality of the pin changes: the *Delay* argument has no effect, and no SBF blocks are generated upon electrical transitions. See the **`setTimeSyncSource`** command for details.

Example

```
COM1> sep, EventA, High2Low, 10<CR>
$R: sep, EventA, High2Low, 10
    EventParameters, EventA, High2Low, 10.000000
COM1>
```

| | | | | | | | | | | |
|-------|--------------|--------|--|--|--|--|--|--|--|--|
| sntp | setNTPServer | Enable | | | | | | | | |
| gnntp | getNTPServer | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

RxControl: Navigation > Receiver Operation > Timing

Use this command to enable or disable the built-in NTP (Network Time Protocol) server.

When enabled, the NTP server accepts UDP timestamp requests on port number 123.

Example

```
COM1> sntp, on<CR>
$R: sntp, on
      NTPServer, on
COM1>
```


| spps gpps | setPPSParameters getPPSParameters | Interval | Polarity | Delay | TimeScale | MaxSyncAge | PulseWidth | | | |
|--------------|--------------------------------------|--|----------------------|--|---|---------------------|------------------------------------|--|--|--|
| | | off msec10 msec20 msec50 msec100 msec200 msec250 msec500 sec1 sec2 sec5 sec10 sec30 sec60 | Low2High High2Low | -1000000.00 ... 0.00 ... 1000000.00 ns | GPS Galileo BeiDou GLONASS UTC RxClock | 0 ... 60 ... 3600 s | 0.001 ... 5.000 ... 1000.000 ms | | | |

[RxControl: Navigation > Receiver Operation > Timing](#)

Use these commands to define/inquire the parameters of the x-pulse-per-second (xPPS) output. Refer to section 1.19 for additional information on the xPPS functionality.

The *Interval* argument specifies the time interval between the pulses. A special value "off" is defined to disable the xPPS signal.

The *Polarity* argument defines the polarity of the xPPS signal.

The *Delay* argument can be used to compensate for the overall signal delays in the system (including antenna, antenna cable and xPPS cable). Setting *Delay* to a higher value causes the xPPS pulse to be generated earlier. For example, if the antenna cable is replaced by a longer one, the overall signal delay could be increased by, say, 20 ns. If *Delay* is left unchanged, the xPPS pulse will come 20 ns too late. To re-synchronize the xPPS pulse, *Delay* has to be increased by 20 ns.

The xPPS pulses are aligned with the time system set with the *TimeScale* argument. `RxClock` corresponds to the receiver time scale. When setting *TimeScale* to `RxClock`, the xPPS pulses are synchronous with the internal measurement epochs.

The xPPS timing information is derived primarily from the satellites of the system selected with the *TimeScale* argument. If there is no satellite from that system available, the receiver will use information from other constellations to maintain the continuity of the pulses. If all satellite signals are blocked, the xPPS pulses will continue to be generated for a duration set with the *MaxSyncAge* argument. If *MaxSyncAge* is set to 0, or if *TimeScale* is set to `RxClock`, this timeout is disabled.

The *PulseWidth* argument sets the duration of the PPS pulse. The maximum duration of the pulse equals the PPS interval minus 100 microseconds, even if the requested *PulseWidth* is longer than that.

Example

```
COM1> spps, sec1, Low2High, 23.40, GPS, 60, 0.1<CR>
$R: spps, sec1, Low2High, 23.40, GPS, 60, 0.1
    PPSParameters, sec1, Low2High, 23.40, GPS, 60, 0.100
COM1>
```

| | | | | | | | | | | |
|------|---------------|--------|--|--|--|--|--|--|--|--|
| srom | setREFOUTMode | Enable | | | | | | | | |
| grom | getREFOUTMode | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

[RxControl: Navigation > Advanced User Settings > Receiver Clock](#)

Use this command to configure the 10-MHz REF OUT frequency reference output of the receiver.

The *Enable* argument enables or disables the frequency reference output at the REF OUT connector.

Example

```
COM1> srom, on<CR>
$R: srom, on
    REFOUTMode, on
COM1>
```

| | | | | | | | | | | |
|------|-------------------|--------|--|--|--|--|--|--|--|--|
| stss | setTimeSyncSource | Source | | | | | | | | |
| gtss | getTimeSyncSource | | | | | | | | | |
| | | none | | | | | | | | |
| | | EventA | | | | | | | | |
| | | EventB | | | | | | | | |

[RxControl: Navigation > Receiver Operation > Timing](#)

Use this command to set which event input pin to be used as TimeSync input.

When an event pin is configured as TimeSync input, the receiver will synchronize its internal time base to the electrical transitions on that pin. Instead of reporting the time of electrical transitions on the event pin in the `ExtEvent` SBF block, the receiver will synchronize itself to the transitions.

The transition polarity (rising or falling edge) is set with the `setEventParameters` command.

A typical use case of the TimeSync input is in conjunction with the REF IN input: the receiver is fed with a 10 MHz frequency reference on its REF IN input, and to a one-per-second time pulse on its TimeSync input. The 10 MHz frequency and the one-per-second time pulse originate from the same clock.

Example

```
COM1> stss, EventB<CR>
$R: stss, EventB
      TimeSyncSource, EventB
COM1>
```

| sts gts | setTimingSystem getTimingSystem | System | | | | | | | | |
|------------|------------------------------------|----------------------------------|--|--|--|--|--|--|--|--|
| | | Galileo GPS BeiDou auto | | | | | | | | |

[RxControl: Navigation > Receiver Operation > Timing](#)

Use these commands to define/inquire the reference time system for the computation of the receiver clock bias.

As part of the PVT computation, the receiver determines the offset between its own time (receiver time) and the time of the GNSS system specified with the *System* argument. This offset is reported in the `RxClkBias` field of the `PVTCartesian` and `PVTGeodetic` SBF blocks.



Note that at least one satellite of the selected system must be visible and tracked by the receiver. Otherwise no PVT will be computed.

When the *System* argument is set to `auto`, the receiver automatically selects the GNSS system according to the availability of satellites. This is the recommended setting.

Example

```
COM1> sts, GPS<CR>
$R: sts, GPS
    TimingSystem, GPS
COM1>
```

3.2.11 Station Settings

| smp gmp | setMarkerParameters getMarkerParameters | MarkerName (60) | MarkerNumber (2) | MarkerType (20) | StationCode (10) | MonumentIdx | ReceiverIdx | CountryCode (3) | | |
|------------|--|-----------------|------------------|-----------------|------------------|-------------|-------------|-----------------|--|--|
| | | SEPT | Unknown | Unknown | | 0...9 | 0...9 | | | |

[RxControl: Navigation > Receiver Setup > Station Settings](#)

Use these commands to define/inquire the marker and station parameters.

The set of allowed characters for the *MarkerName* argument and for the *StationCode* argument is limited to:

_0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz

The *StationCode* argument is the site code associated to the station (typically four characters). *MonumentIdx* can be used to identify the monument when there are multiple monuments at the same station. *ReceiverIdx* can be used to identify the receiver when there are multiple receivers at the same monument. A three-letter ISO country code can be specified with the *CountryCode* argument.

If internal logging is enabled in one of the IGS file naming modes, the file name depends on the settings of the **setMarkerParameters** command. Refer to the description of the logging commands (**setFileNaming**, **setRINEXLogging**) for details.

The parameters set by this command are copied into the *ReceiverSetup* SBF block, which defines the file name and the header contents when converting SBF files into RINEX with the *sbf2rin* program.

Example

```
COM1> smp, Test, 356, GEODETIC, TST1, 0, 0, BEL<CR>
$R: smp, Test, 356, GEODETIC, TST1, 0, 0, BEL
    MarkerParameters, Test, 356, GEODETIC, TST1, 0, 0, BEL
COM1>
```

| | | | | | | | | | | |
|-----|--------------------|---------------|--|--|--|--|--|--|--|--|
| soc | setObserverComment | Comment (120) | | | | | | | | |
| goc | getObserverComment | | | | | | | | | |
| | | Unknown | | | | | | | | |

[RxControl: Navigation > Receiver Setup > Station Settings](#)

Use these commands to define/inquire the content of the `Comment` SBF block.

Examples

```
COM1> soc, "Data taken with choke ring antenna"<CR>
$R: soc, "Data taken with choke ring antenna"
    ObserverComment, "Data taken with choke ring antenna"
COM1>

COM1> goc <CR>
$R: goc
    ObserverComment, "Data taken with choke ring antenna"
COM1>
```

| | | | | | | | | | | |
|-----|-----------------------|---------------|-------------|--|--|--|--|--|--|--|
| sop | setObserverParameters | Observer (20) | Agency (40) | | | | | | | |
| gop | getObserverParameters | | | | | | | | | |
| | | Unknown | Unknown | | | | | | | |

[RxControl: Navigation > Receiver Setup > Station Settings](#)

Use these commands to define/inquire the observer name or ID, and his/her agency. These parameters are copied in the `ReceiverSetup` SBF block and in the header of RINEX observation files.

The length of the arguments complies with the RINEX format definition.

Examples

```
COM1> sop, TestObserver, TestAgency <CR>
$R: sop, TestObserver, TestAgency
    ObserverParameters, "TestObserver", "TestAgency"
COM1>

COM1> gop <CR>
$R: gop
    ObserverParameters, "TestObserver", "TestAgency"
COM1>
```

3.2.12 General Input/Output

| | | | | | | | | | | |
|------|------------------------------|------|--|--|--|--|--|--|--|--|
| scia | setCheckInternetAvailability | Mode | | | | | | | | |
| gcia | getCheckInternetAvailability | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

[RxControl: Communication > Network Settings > General](#)

This command enables or disables the continuous checking of Internet access. When active, the check is done every 1 minute. Therefore, it may take up to 1 minute for changes in Internet availability to be reported.

Example

```
COM1> scia, on <CR>
$R: scia, on
    CheckInternetAvailability, on
COM1>
```


| scs gcs | setCOMSettings getCOMSettings | Cd Cd | Rate | DataBits | Parity | StopBits | FlowControl | | | |
|------------|----------------------------------|-----------------------------------|--|--------------|--------|-------------|------------------------|--|--|--|
| | | + COM1 + COM2 + COM3 all | baud1200 baud2400 baud4800 baud9600 baud19200 baud38400 baud57600 <u>baud115200</u> baud230400 | <u>bits8</u> | No | <u>bit1</u> | <u>none</u> RTS CTS | | | |

RxControl: Communication > COM Port Settings

Use these commands to define/inquire the communication settings of the receiver's COM ports. By default, all COM ports are set to a baud rate of 115200 baud, using 8 data-bits, no parity, 1 stop-bit and no flow control.

Depending on your receiver hardware, it may be that not all COM ports support flow control. Please refer to the receiver Hardware Manual or User Manual to check which COM ports are equipped with the RTS/CTS lines.

When modifying the settings of the current connection, make sure to also modify the settings of your terminal emulation program accordingly.

Example

```
COM1> scs, COM1, baud19200, bits8, No, bit1, RTS|CTS<CR>
$R: scs, COM1, baud19200, bits8, No, bit1, RTS|CTS
    COMSettings, COM1, baud19200, bits8, No, bit1, RTS|CTS
COM1>
```

| | | | | | | | | | | |
|------|-------------------------|------|--|--|--|--|--|--|--|--|
| scda | setCrossDomainWebAccess | Mode | | | | | | | | |
| gcda | getCrossDomainWebAccess | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

[RxControl: Communication > Network Settings > General](#)

This command enables or disables true open access across domain boundaries according to the CORS specification (Cross-Origin Resource Sharing).

Setting the *Mode* argument to `on` enables the cross-domain access to the receiver web server, and as such it allows external client applications (e.g. your own web application) to access receiver data via HTTP requests. Please contact Septentrio support for additional information on the receiver's JavaScript libraries.

Example

```
COM1> scda, on <CR>
$R: scda, on
      CrossDomainWebAccess, on
COM1>
```

| | | | | | | | | | | |
|------|-------------------|-------|-------|--|--|--|--|--|--|--|
| sdcm | setDaisyChainMode | DC | Mode | | | | | | | |
| gdc | getDaisyChainMode | DC | | | | | | | | |
| | | + DC1 | Raw | | | | | | | |
| | | + DC2 | ASCII | | | | | | | |
| | | all | | | | | | | | |

[RxControl: Communication > Input/Output Selection](#)

Use this command to define how data is transferred in a daisy chain configured with the **setDataInOut** command.

By default (*Mode* is *Raw*), incoming bytes are transferred in small chunks from the input to the output connector.

In some cases, it is preferred to transmit complete ASCII strings at once. This can be done by configuring the daisy chain in ASCII mode. A string is considered complete when a carriage-return and/or a line-feed character is received.

Example

```
COM1> sdcm, DC1, ASCII<CR>
$R: sdcm, DC1, ASCII
    DaisyChainMode, DC1, ASCII
COM1>
```

| sdio gdiio | setDataInOut getDataInOut | Cd Cd | Input | Output | Show | | | | | |
|---------------|------------------------------|-----------------|-------------|-----------------|-----------|--|--|--|--|--|
| | | + DSK1 | none | none | (off) | | | | | |
| | | + COM1 | CMD | + RTCMv2 | (on) | | | | | |
| | | + COM2 | RTCMv2 | + RTCMv3 | (waiting) | | | | | |
| | | + COM3 | RTCMv3 | + CMRv2 | | | | | | |
| | | + USB1 | CMRv2 | + <u>SBE</u> | | | | | | |
| | | + USB2 | DC1 | + <u>NMEA</u> | | | | | | |
| | | + IP10 ... IP17 | DC2 | + ASCIIIDisplay | | | | | | |
| | | + NTR1 | ASCIIN | + DC1 | | | | | | |
| | | + NTR2 | <u>auto</u> | + DC2 | | | | | | |
| | | + NTR3 | | + Encapsulate | | | | | | |
| | | + NTR4 | | + LBandBeam1 | | | | | | |
| | | + IPS1 | | + LBandBeam2 | | | | | | |
| | | + IPS2 | | + LBandBeam3 | | | | | | |
| | | + IPS3 | | + LBandBeam4 | | | | | | |
| | | + IPS4 | | | | | | | | |
| | | + IPS5 | | | | | | | | |
| | | + IPR1 | | | | | | | | |
| | | + IPR2 | | | | | | | | |
| | | + IPR3 | | | | | | | | |
| | | + IPR4 | | | | | | | | |
| | | + IPR5 | | | | | | | | |
| | | all | | | | | | | | |

[RxControl: Communication > Input/Output Selection](#)

Use these commands to define/inquire the type of data that the receiver should accept/send on a given connection descriptor (*Cd* - see 1.1.5).

The *Input* argument is used to tell the receiver how to interpret incoming bytes on the connection *Cd*. If a connection is to be used for receiving user commands or differential corrections in RTCM or CMR format, it is recommended to leave it in the default `auto` input mode. In this mode, the receiver automatically detects the input format.

It is also possible to set the input format explicitly. `CMD` means that the connection is to be used for user command input exclusively. `RTCMv2`, `RTCMv3` and `CMRv2` can be used to manually select the differential correction format, overriding the auto detection. `ASCIIN` is used for connections receiving free-formatted ASCII messages, e.g. from an external meteo sensor.

In `auto` mode, the receiver automatically detects the `CMD`, `RTCMv2`, `RTCMv3`, or `CMRv2` formats. The other input formats must be specified explicitly.

A connection that is not configured in `CMD` mode or `auto` mode will be blocked for user commands. There are two ways to re-enable the command input on a blocked connection. The first way is to reconfigure the connection by entering the command **`setDataInOut`** from another connection. The second way is to send the "escape sequence" consisting of a succession of ten "S" characters to the blocked connection within a time interval shorter than 5 seconds.

A connection that is configured in `auto` mode will initially accept user commands and differential corrections. However, as soon as differential corrections have been detected, the connection is blocked for user commands until the escape sequence is received.

The *Output* argument is used to select the types of data allowed as output. The receiver supports outputting different data types on the same connection. The `ASCIIIDisplay` is a textual report of the tracking and PVT status at a fixed rate of 1Hz. It can be used to get a quick overview of the receiver operation. The `LBandBeam1` option is to output

the stream of bytes decoded from an L-Band beam (not available for some proprietary streams). The `Encapsulate` option has the effect of encapsulating all non-SBF output into the `EncapsulatedOutput` SBF block. For instance, setting the `Output` argument to `NMEA+Encapsulate` instructs the receiver to encapsulate all NMEA messages into the `EncapsulatedOutput` SBF block.

`DC1` and `DC2` represent two internal pipes that can be used to create a daisy-chain. Set the `Input` argument to `DCi` to connect the input of pipe *i* to the specified connection. Set the `Output` argument to `DCi` to connect the output of pipe *i* to the specified connection. The daisy-chain can operate in binary or ASCII mode, as configured with the `setDaisyChainMode` command.

After the `Cd`, `Input` and `Output` arguments, an extra read-only `Show` argument will be returned in the command reply. This last argument can take the value `on`, `off` or `waiting`, depending on whether the connection descriptor is open, close, or waiting for a connection.

The `Input` argument is ignored for output-only connections, and the `Output` argument is ignored for input-only connections. See section 1.1.5 for details.

Note that not all input connections can accept user commands, check section 1.1.5 for details.

Examples

```
COM1> sdio, COM1, CMD <CR>
$R: sdio, COM1, CMD
    DataInOut, COM1, CMD, SBF, (on)
COM1>
```

On receivers that have three COM ports, to set up a two-way daisy-chain between COM2 and COM3, i.e. to have all incoming bytes from COM2 redirected to COM3 and all incoming bytes from COM3 redirected to COM2, enter the following commands from a connection different than COM2 and COM3:

```
COM1> sdio, COM2, DC1, DC2 <CR>
$R: sdio, COM2, DC1, DC2
    DataInOut, COM2, DC1, DC2, (on)
COM1> sdio, COM3, DC2, DC1 <CR>
$R: sdio, COM3, DC2, DC1
    DataInOut, COM3, DC2, DC1, (on)
COM1>
```

| sdds gdds | setDynamicDNS getDynamicDNS | Provider | UserName (40) | Password (40) | Hostname (40) | Bind | | | | |
|--------------|--------------------------------|--------------------------------|---------------|---------------|---------------|------------------|--|--|--|--|
| | | off dyndns.org no-ip.com | | | | auto Ethernet | | | | |

[RxControl: Communication > Network Settings > DynDNS](#)

This command configures the built-in dynamic DNS client (DynDNS or DDNS).

Before using DynDNS, you will need to create an account and define a hostname for your receiver at one of the supported DynDNS providers. The list of supported providers is shown below.

| Provider | Description |
|------------|-----------------|
| off | DynDNS disabled |
| dyndns.org | dyndns.org |
| no-ip.com | no-ip.com |

The *Provider* argument specifies your DynDNS provider, the *UserName* and *Password* arguments specify the account credentials at this provider, and the *Hostname* is the full hostname associated to your receiver. Setting the *Provider* to `off` disabled the DynDNS functionality.

On receivers with multiple active network interfaces, the receiver registers the public IP address of the interface with the highest priority (Ethernet first, then WiFi), unless a specific interface is forced with the *Bind* argument.

The receiver checks every 2 minutes if the public IP address has changed, and updates the DynDNS server if needed. In addition a forced DynDNS server update is performed every 30 days. This is done to prevent the expiration of a DynDNS entry.

The DynDNS settings configured by this command are applied immediately and are kept upon a power cycle and even after a reset to factory default (see command **exeResetReceiver**).

Note that this command is not shown in the output of the **lstConfigFile** command.

Example

```
COM1> sdds, dyndns.org, Bart, MyPwd, rx1.dyndns-free.com,
      Ethernet<CR>
$R: sdds, dyndns.org, Bart, MyPwd, rx1.dyndns-free.com, Ethernet
      DynamicDNS, dyndns.org, Bart, MyPwd, rx1.dyndns-free.com,
      Ethernet
COM1>
```

| eecm gecm | exeEchoMessage getEchoMessage | Cd | Message (242) | EndOfLine | | | | | | |
|--------------|----------------------------------|---------------|---------------|-----------|--|--|--|--|--|--|
| | | DSK1 | A:Unknown | none | | | | | | |
| | | COM1 | | + CR | | | | | | |
| | | COM2 | | + LF | | | | | | |
| | | COM3 | | all | | | | | | |
| | | USB1 | | | | | | | | |
| | | USB2 | | | | | | | | |
| | | IP10 ... IP17 | | | | | | | | |
| | | IPS1 | | | | | | | | |
| | | IPS2 | | | | | | | | |
| | | IPS3 | | | | | | | | |
| | | IPS4 | | | | | | | | |
| | | IPS5 | | | | | | | | |
| | | IPR1 | | | | | | | | |
| | | IPR2 | | | | | | | | |
| | | IPR3 | | | | | | | | |
| | | IPR4 | | | | | | | | |
| | | IPR5 | | | | | | | | |
| | | DC1 | | | | | | | | |
| | | DC2 | | | | | | | | |

[RxControl: Communication > Output Settings > Echo Message](#)

Use this command to send a message to one of the connections of the receiver.

The *Message* argument defines the message that should be sent on the *Cd* port. If the given message starts with "A:", the remainder of the message is considered an ASCII string that will be forwarded without changes to the requested connection. If the given message starts with "H:", the remainder of the message is considered a hexadecimal representation of a succession of bytes to be sent to the requested connection. In this case, the string should be a succession of 2-character hexadecimal values separated by a single whitespace.

Make sure to enclose the string between double quotes if it contains whitespaces. The maximum length of the *Message* argument (including the A: or H: prefix) is 242 characters.

The *EndOfLine* argument defines which end-of-line character should be sent after the message. That argument is ignored when the *Message* argument starts with H:.

To send a message at a regular interval instead of once, use the command **setPeriodicEcho**.

When the *Cd* argument is DC1 or DC2, the message is injected into one of the internal daisy-chain pipes. See the **setDataInOut** command for details.

Examples

To send the string "Hello world!" to COM2, use:

```
COM1> eecm, COM2, "A:Hello world!", none <CR>
$R: eecm, COM2, "A:Hello world!", none
EchoMessage, COM2, "A:Hello world!", none
COM1>
```

To send the same string, the following command can also be used:

```
COM1> eecm, COM2, "H:48 65 6C 6C 6F 20 77 6F 72 6C 64 21", none
<CR>
$R: eecm, COM2, "H:48 65 6C 6C 6F 20 77 6F 72 6C 64 21", none
```

```
EchoMessage, COM2, "H:48 65 6C 6C 6F 20 77 6F 72 6C 64 21", none  
COM1>
```


| | | | | | | | | | | |
|-----|------------------|----------|--|--|--|--|--|--|--|--|
| shs | setHttpsSettings | Protocol | | | | | | | | |
| ghs | getHttpsSettings | | | | | | | | | |
| | | + HTTP | | | | | | | | |
| | | + HTTPS | | | | | | | | |
| | | all | | | | | | | | |

RxControl: Communication > Network Settings > Security

This command can be used to enable or disable http and/or https access to the receiver. By default, both http and https are enabled.

Secure http access requires the user to provide a certificate to the receiver. This is done by navigating to the "Communication > Web Server/TLS" page of the web interface, and uploading a .pem file containing the certificate. By default, if no user-provided certificate is available, the receiver will use a self-signed certificate instead. The user-provided certificate can be erased with **exeResetReceiver, hard, HTTPSCertificate** command, reverting to the self-signed certificate.

Note that the https certificate is also applicable to the built-in NTRIP caster in TLS mode. See also the **setNtripCasterSettings** command.

Example

```
COM1> shs, HTTP<CR>
$R: shs, HTTP
      HttpsSettings, HTTP
COM1>
```

| sipf gipf | setIPFiltering getIPFiltering | Mode | AddrList (200) | | | | | | | |
|--------------|----------------------------------|-----------|----------------|--|--|--|--|--|--|--|
| | | off on | | | | | | | | |

[RxControl: Communication > Network Settings > Security](#)

Use this command to configure the IP filtering functionality. When IP filtering is enabled, only the specified IP addresses are allowed to connect to the receiver.

By default, IP filtering is off (the *Mode* argument is `off`) and the receiver accepts connections from any IP address.

When enabling IP filtering (*Mode* set to `on`), the *AddrList* argument must contain a whitespace-separated list of IP addresses (IPv4) allowed to connect to the receiver. Only IP addresses are allowed here, not hostnames. To enable a whole range of IP addresses, a netmask can also be specified using the so-called "slash notation", where the IP address is followed by a forward slash (/) and the subnet mask number from 0 to 32.

After entering the command, existing IP connections are kept active, but any new connection from a non-allowed IP address will be rejected.

Example

```
COM1> sipf, on, 192.168.0.7 192.168.2.0/24<CR>
$R: sipf, on, 192.168.0.7 192.168.2.0/24
    IPFiltering, on, 192.168.0.7 192.168.2.0/24
COM1>
```

| | | | | | | | | | | |
|------|-------------------|--------------------------|--------------------|--|--|--|--|--|--|--|
| sipp | setIPPortSettings | Command | FTPControl | | | | | | | |
| gipp | getIPPortSettings | | | | | | | | | |
| | | 1 ... 28784 ... 65535 | 1 ... 21 ... 65535 | | | | | | | |

[RxControl: Communication > Network Settings > General](#)

Use these commands to define/inquire the port numbers where the receiver listens for incoming TCP/IP connections.

The *Command* argument defines the port where the receiver listens for user commands.

The *FTPControl* argument defines the FTP control port number.

The IP port numbers configured by this command keep their value upon a power cycle and even after a reset to factory default (see command **exeResetReceiver**).

Note that this command is not shown in the output of the **lstConfigFile** command.



When selecting a port number, make sure to avoid conflicts with other services (for example select a different port than in the **setIPServerSettings** and the **setIPReceiveSettings** commands).

Example

```
COM1> sipp, 12345, 21<CR>
$R: sipp, 12345, 21
    IPPortSettings, 12345, 21
COM1>
```

| sirs | setIPReceiveSettings | Cd | Port | Mode | TCPAddress (40) | | | | | |
|------|----------------------|---|-------------|----------------|-----------------|--|--|--|--|--|
| girs | getIPReceiveSettings | Cd | | | | | | | | |
| | | + IPR1 + IPR2 + IPR3 + IPR4 + IPR5 all | 0 ... 65535 | TCP2Way UDP | 0.0.0.0 | | | | | |

[RxControl: Communication > Network Settings > General](#)

This command configures the "IP receive" ports (IPR).

When *Mode* is set to `TCP2Way`, the receiver connects to the specified port of a server of which the IP address or hostname is provided in the *TCPAddress* argument. It then receives all data sent by this server on that port. The TCP2Way connection is bidirectional, and it is possible to send data to the server or to process commands from the server.

When *Mode* is set to `UDP`, the receiver listens for incoming UDP messages on its port identified by the *Port* argument. In `UDP` mode, the *TCPAddress* argument is ignored. Note that, contrary to the TCP connection, the UDP connection is unidirectional.

If *Port* is set to 0, the corresponding IPR connection is disabled.

This command is the counterpart of the **setIPServerSettings** command. **setIPServerSettings** configures the sender side of the communication, while **setIPReceiveSettings** configures the receiver side.



When selecting a port number, make sure to avoid conflicts with other services (for example select a different port than in the **setIPPortSettings** command).

Example

```
COM1> sirs, IPR1, 28785, TCP2Way, 192.168.10.5<CR>
$R: sirs, IPR1, 28785, TCP2Way, 192.168.10.5
    IPReceiveSettings, IPR1, 28785, TCP2Way, 192.168.10.5
COM1>
```

| siss giss | setIPServerSettings getIPServerSettings | Cd Cd | Port | Mode | UDPAddress (200) | | | | | |
|--------------|--|---|-----------|-----------------------|------------------|--|--|--|--|--|
| | | + IPS1 + IPS2 + IPS3 + IPS4 + IPS5 all | 0...65535 | TCP UDP TCP2Way | 255.255.255.255 | | | | | |

[RxControl: Communication > Network Settings > General](#)

By default (*Mode* set to `TCP`), this command defines the TCP/IP port where the receiver's IP Servers (IPS) listen for incoming TCP/IP connections. When a client connects to an IPS port, all output data specified for that port are streamed to the client.

In `TCP` mode, the IPS port is unidirectional: it only sends data and incoming bytes are discarded. The `TCP2Way` mode is the same as the `TCP` mode, except that the receiver will also process input data (such as user commands or differential corrections). An IPS port configured in `TCP2Way` mode can only accept a single client at a time.

When *Mode* is set to `UDP` and *UDPAddress* is set to `255.255.255.255`, the IPS works in UDP broadcast mode. In that mode, the IPS data stream is delivered to any host on the local network listening to the IP port specified by the *Port* argument.

When *Mode* is set to `UDP` and *UDPAddress* contains a whitespace-separated list of IP addresses or hostnames, the IPS data stream is only delivered to the specified hosts. Remember to enclose the *UDPAddress* argument between double quotes when it contains whitespaces.

Use the **setDataInOut** command and the various output setting commands (e.g. **setNMEAOutput**) to define the data stream to be output by the IPS connections. Note that the UDP implementation is meant to be used with small data volumes and low update rates. It is the user's responsibility to only enable short messages at low rate when using UDP, in order to prevent throughput degradation of the network.

It is possible to configure some IPS connections in UDP mode, and others in TCP mode. The *UDPAddress* argument is ignored in TCP mode.



When selecting a port number, make sure to avoid conflicts with other services (for example select a different port than in the **setIPPortSettings** command).

All IPS connections must use different ports. Set the *Port* argument to 0 to disable an IPS connection.

Example

```
COM1> siss, IPS1, 28785, UDP, 255.255.255.255<CR>
$R: siss, IPS1, 28785, UDP, 255.255.255.255
    IPServerSettings, IPS1, 28785, UDP, 255.255.255.255
COM1>
```

| sips gips | setIPSettings getIPSettings | Mode | IP (16) | Netmask (16) | Gateway (16) | Domain (63) | DNS1 (16) | DNS2 (16) | MTU | |
|--------------|--------------------------------|----------------|---------|---------------|--------------|-------------|-----------|-----------|------------|--|
| | | DHCP Static | 0.0.0.0 | 255.255.255.0 | 0.0.0.0 | | 0.0.0.0 | 0.0.0.0 | 0 ... 1500 | |

[RxControl: Communication > Network Settings > General](#)

Use these commands to define the IP (Internet Protocol) settings of the receiver's Ethernet port. By default, the receiver is configured to use DHCP.

In `Static` mode, the receiver will not attempt to request an address via DHCP. It will use the specified IP address, netmask, gateway, domain name and DNS. `DNS1` is the primary DNS, and `DNS2` is the backup DNS. The arguments `IP`, `Netmask`, `Gateway`, `Domain`, `DNS1`, and `DNS2` are ignored in `DHCP` mode.

In `Static` mode, the value of `MTU` is used as the MTU of the Ethernet port. When `MTU` is set to 0, the receiver will use the default MTU. In `DHCP` mode, setting `MTU` to 0 will result in using the MTU supplied by the DHCP server. When set to any other value, `MTU` will override the DHCP Server once the link is established.

The IP settings configured by this command keep their value upon a power cycle and even after a reset to factory default (see command `exeResetReceiver`).

Note that this command is not shown in the output of the `lstConfigFile` command.

The command `getIPSettings` cannot be used to get the current IP address assigned to the receiver by the DHCP server. The current IP address can be retrieved from the command `lstInternalFile`, `IPParameters`, or from the `IPStatus` SBF block.

Example

```
COM1> sips, Static, 192.168.1.123, 255.255.252.0, 192.168.1.255,
      mydomain.local, 192.168.100.3, 192.168.100.4, 1500<CR>
$R: sips, Static, 192.168.1.123, 255.255.252.0, 192.168.1.255,
      mydomain.local, 192.168.100.3, 192.168.100.4, 1500
      IPSettings, Static, 192.168.1.123, 255.255.252.0, 192.168.1.255,
      mydomain.local, 192.168.100.3, 192.168.100.4, 1500
COM1>
```

| spe gpe | setPeriodicEcho getPeriodicEcho | Cd Cd | Message (201) | Interval | | | | | | |
|------------|------------------------------------|-----------------------------------|---------------|--|--|--|--|--|--|--|
| | | + COM1 + COM2 + COM3 all | A:Unknown | off once msec100 msec200 msec500 sec1 sec2 sec5 sec10 sec15 sec30 sec60 min2 min5 min10 min15 min30 min60 | | | | | | |

[RxControl: Communication > Output Settings > Periodic Echo message](#)

Use this command to periodically send a message to one of the connections of the receiver.

The *Message* argument defines the message that should be sent on the *Cd* port. If the given message starts with "A:", the remainder of the message is considered an ASCII string that will be forwarded to the requested connection. All occurrences of the %%CR character sequence are replaced by a single carriage return character (ASCII code 13d) and all occurrences of the %%LF character sequence are replaced by a single line feed character (ASCII code 10d). If the *Message* argument starts with "H:", the remainder of the message is considered a hexadecimal representation of a succession of bytes to be sent to the requested connection. In this case, the string should be a succession of 2-character hexadecimal values separated by a single whitespace.

Make sure to enclose the string between double quotes if it contains whitespaces. The maximum length of the *Message* argument (including the A: or H: prefix) is 201 characters.

The *Interval* argument defines the interval at which the message should be sent.

To send a message only once, set *Interval* to *once*. The only difference with the command **exeEchoMessage** is that **exeEchoMessage** cannot be stored in the boot configuration file, while **setPeriodicEcho** can. This can be used to output a message once at each reset or reboot. The third example below shows how to do this.

Examples

To send the string "Hello!<CR><LF>" to COM2 every minute, use:

```
COM1> spe, COM2, "A:Hello!%%CR%%LF", sec60 <CR>
$R: spe, COM2, "A:Hello!%%CR%%LF", sec60
    PeriodicEcho, COM2, "A:Hello!%%CR%%LF", sec60
COM1>
```

The same can be achieved with the following command:

```
COM1> spe, COM2, "H:48 65 6C 6C 6F 21 0D 0A", sec60 <CR>
$R: spe, COM2, "H:48 65 6C 6C 6F 21 0D 0A", sec60
```

```
    PeriodicEcho, COM2, "H:48 65 6C 6C 6F 21 0D 0A", sec60  
COM1>
```

To let the receiver output the string "Hello!<CR><LF>" to COM2 at each reset, use the following command sequence:

```
COM1> spe, COM2, "A:Hello!%%CR%%LF", once <CR>  
$R: spe, COM2, "A:Hello!%%CR%%LF", once  
    PeriodicEcho, COM2, "A:Hello!%%CR%%LF", once  
COM1> eccf, Current, Boot <CR>  
$R: eccf, Current, Boot  
    CopyConfigFile, Current, Boot  
COM1>
```


| sp2p gp2p | setPointToPoint getPointToPoint | SessionID SessionID | Mode | Cd | ClientIP (20) | ServerIP (20) | Auth | Password (40) | ConnectTimeout | ActivityTimeout |
|--------------|------------------------------------|------------------------|---------------|----------------------|---------------|---------------|---------------------|---------------|----------------|---------------------------|
| | | + P2PP1 all | Off Server | COM1 COM2 COM3 | 192.168.50.2 | 192.168.50.1 | None PAP CHAP | | 60 ... 300 s | 10 ... 600 ... 32000 s |

[RxControl: Communication > Network Settings > P2P Protocol](#)

The receiver features a Point-to-Point Protocol (P2PP) server, which emulates an IP link over a serial port. To avoid confusion with Precise Point Positioning, this feature is referred to as P2PP in Septentrio receivers. This command configures the P2PP server.

In the current version, the receiver implements a single P2PP server, and the first argument (*ServerID*) can only take the value `P2PP1`.

The *Mode* argument enables the P2PP server (it is disabled by default).

Cd sets the COM port to be used for the point-to-point communication. The baud rate and hardware flow control must be configured with the **setCOMSettings** command.

ClientIP sets the IP address that will be given to the client (i.e. your local computer) when a connection is established.

ServerIP sets the IP address that will be given to the server (i.e. the receiver) when a connection is established.

Auth determines whether the client needs to authenticate itself when establishing the connection. `PAP` will use Password Authentication Protocol and `CHAP` will use Challenge Handshake Authentication Protocol. When authentication is enabled, the *Password* argument sets the password that will need to be supplied.

ConnectTimeout sets the maximum time, in seconds, that a connection attempt may consume before being refused.

ActivityTimeout sets the maximum time, in seconds, that a connection may be idle (no data transfer) before it is disconnected.

When a timeout occurs, the receiver will shut down the P2PP server and restart it. When a server is enabled, and the configuration is correct, the receiver will start the P2PP server within a maximum of 30 seconds.

Example

```
COM1> sp2p, P2PP1, Off, COM1, 255.255.255.255, 255.255.255.255,
      PAP, P@ssw0rd1, 60, 600<CR>
$R: sp2p, P2PP1, Off, COM1, 255.255.255.255, 255.255.255.255, PAP,
    P@ssw0rd1, 60, 600
    PointToPoint, P2PP1, Off, COM1, 255.255.255.255, 255.255.255.255,
    PAP, P@ssw0rd1, 60, 600
COM1>
```

| spfw gpfw | setPortFirewall getPortFirewall | Interface Interface | OpenPorts | PortList (100) | | | | | | |
|--------------|------------------------------------|------------------------|---|----------------|--|--|--|--|--|--|
| | | + Ethernet all | none <u>default</u> all PortList | | | | | | | |

[RxControl: Communication > Network Settings > Security](#)

Use this command to configure the receiver firewall, i.e. to specify the list of IP ports which are open to receive data.

The list of open ports can be specified independently for all network interfaces. The default (*OpenPorts* is set to `default`) depends on the interface, as follows:

| Interface | Description |
|-----------|-----------------------------|
| Ethernet | By default, all ports open. |

It is possible to close all ports (*OpenPorts* is `none`), to open all ports (*OpenPorts* is `all`), or to manually specify a list of ports to open (*OpenPorts* is `PortList`). In the latter case, the list of port numbers needs to be specified in the *PortList* argument. The different port numbers must be separated by whitespaces. The *PortList* argument is ignored if *OpenPorts* is not set to `PortList`.

Example

```
COM1> spfw, Ethernet, PortList, 21 80 28784<CR>
$R: spfw, Ethernet, PortList, 21 80 28784
    PortFirewall, Ethernet, PortList, 21 80 28784
COM1>
```

3.2.13 NTRIP Settings

| snmp gnmp | setNtripCasterMountPoints getNtripCasterMountPoints | MountPointID MountPointID | Enable | MPName (32) | ExtServer | UserName (20) | Password (40) | ClientAuth | | |
|--------------|--|--------------------------------|-----------|-------------|-----------|---------------|---------------|---------------|--|--|
| | | + MP1 + MP2 + MP3 all | off on | | No Yes | | | none basic | | |

RxControl: Communication > NTRIP Settings > NTRIP Caster settings

This command defines the general characteristics of the mount points available on the built-in NTRIP caster. The caster supports up to three mount points.

The *Enable* argument enables or disables a mount point. The *MPName* argument is the mount point name, as it will appear in the stream record of the caster source table. Make sure to give each enabled mount point a different name.

The *ExtServer* argument defines if the mount point is allowed to receive a stream from a remote NTRIP server (argument set to `Yes`), or if only local streams are allowed, i.e. streams originating from the receiver's own NTRIP server. The *UserName* and *Password* arguments are the credentials needed for the remote server to feed data. These arguments are ignored if *ExtServer* is set to `No`.

The *ClientAuth* argument defines the mount point client access protection. If set to `none`, all clients will be able to connect without providing credentials.

Note that the caster is reset each time a setting is changed with this command.

Example

```
COM1> snmp, MP1, on, MyMP, Yes, MyUser, MyPwd, basic<CR>
$R: snmp, MP1, on, MyMP, Yes, MyUser, MyPwd, basic
    NtripCasterMountPoints, MP1, on, MyMP, Yes, MyUser, MyPwd, basic
COM1>
```

| smf gmpf | setNtripCasterMPFormat getNtripCasterMPFormat | MountPointID MountPointID | Format | ManualFt (30) | FtDetails (100) | | | | | |
|-------------|--|--------------------------------|---|---------------|-----------------|--|--|--|--|--|
| | | + MP1 + MP2 + MP3 all | RTCMv2 RTCMv3 CMR NMEA <u>RAW</u> manual | | | | | | | |

[RxControl: Communication > NTRIP Settings > NTRIP Caster settings](#)

Use this command to define the format of the streams available on the caster mount points.

The *Format* argument defines the stream format, as will be reported in the `<format>` field of the sourcetable STR records. It is possible to select one of the predefined formats, or to enter a user-defined format. The latter is done by setting the *Format* argument to `manual` and by providing the format string with the *ManualFt* argument. The *ManualFt* argument is ignored when *Format* is not set to `manual`.

The *FtDetails* argument sets the contents of the `<format-details>` field of the sourcetable STR records.

When you need a comma in the *ManualFt* or *FtDetails* argument, use the `"%%CM"` escape sequence. Do not forget to enclose the string between double quotes if it contains whitespaces.

Note that the caster is reset each time a stream format is changed with this command.



When feeding a stream to the caster, make sure that the format of the stream corresponds to the settings in this command.

Example

```
COM1> smf, MP1, manual, RAW%%CMNMEA, "SBF (1s)%%CM NMEA (5s)"<CR>
$R: smf, MP1, manual, RAW%%CMNMEA, "SBF (1s)%%CM NMEA (5s)"
      NtripCasterMPFormat, MP1, manual, RAW%%CMNMEA, "SBF (1s)%%CM NMEA
      (5s)"
COM1>
```

| sncs gnss | setNtripCasterSettings getNtripCasterSettings | Mode | Port | Identifier (100) | TlsPort | | | | | |
|--------------|--|-----------|-------------------------|------------------|-------------------------|--|--|--|--|--|
| | | off on | 0 ... 2101 ... 65535 | default | 0 ... 2102 ... 65535 | | | | | |

[RxControl: Communication > NTRIP Settings > NTRIP Caster settings](#)

Use this command to enable and configure the built-in NTRIP caster.

The *Port* argument specifies on which IP port the caster can be accessed in "unsecure" mode, and the *TlsPort* specifies on which TLS port the caster can be accessed. The TLS certificate is the same as the https certificate. See the **setHttpsSettings** command for details.

Note that, if *Port* and *TlsPort* are equal, TLS is disabled.

The *Identifier* argument is a free text that can be used to describe the caster. If *Identifier* is set to the string "default", it is replaced by the receiver name and serial number. This text will appear in the "Identifier" field of the caster record in the NTRIP source table.

Example

```
COM1> sncs, on, 2101, default, 2102<CR>
$R: sncs, on, 2101, default, 2102
NtripCasterSettings, on, 2101, default, 2102
COM1>
```

| sncu gncu | setNtripCasterUsers getNtripCasterUsers | UserID UserID | UserName (20) | Password (40) | MountPoints | MaxClients | | | | |
|--------------|--|--|---------------|---------------|--|------------|--|--|--|--|
| | | + User1 + User2 + User3 + User4 + User5 all | | | none + MP1 + MP2 + MP3 all | 1 ... 10 | | | | |

RxControl: Communication > NTRIP Settings > NTRIP Caster settings

This command defines the user accounts (user name and password) that clients can use to connect to the built-in NTRIP caster. The password must contain at least one character (empty passwords are not supported). Up to five user accounts can be defined.

The *MounPoints* argument defines the list of mount points allowed for a given user account.

The caster can accept up to 10 concurrent client connections in total. The *MaxClients* argument can be used to limit the number of clients that are allowed to concurrently connect using a particular account.

To delete a user account, enter this command with an empty *UserName* argument.

Note that the caster is reset each time a user account is added, deleted or modified with this command.

Example

```
COM1> sncu, User1, MyUser, MyPwd, all, 1<CR>
$R: sncu, User1, MyUser, MyPwd, all, 1
    NtripCasterUsers, User1, MyUser, MyPwd, all, 1
COM1>
```

| snts gnts | setNtripSettings getNtripSettings | Cd Cd | Mode | Caster (40) | Port | UserName (20) | Password (40) | MountPoint (32) | Version | SendGGA |
|--------------|--------------------------------------|---|-------------------------|-------------|----------------------|---------------|---------------|-----------------|----------|---|
| | | +NTR1 +NTR2 +NTR3 +NTR4 all | off Server Client | | 0...2101 ...65535 | | | | v1 v2 | auto off sec1 sec5 sec10 sec60 |

RxControl: Communication > NTRIP Settings > NTRIP Server/Client settings

Use this command to specify the parameters of the NTRIP connection referenced by the *Cd* argument.

The *Mode* argument specifies the type of NTRIP connection. In *Server* mode, the receiver is sending data to an NTRIP caster. In *Client* mode, the receiver gets data from the NTRIP caster. Set *Mode* to *off* to disable the connection.

Caster is the hostname or IP address of the NTRIP caster to connect to. To send data to the built-in NTRIP caster, use "localhost" for the *Caster* argument. *Port*, *UserName*, *Password* and *MountPoint* are the IP port number, the user name, the password and the mount point to be used when connecting to the NTRIP caster. The default NTRIP port number is 2101. Note that the receiver encrypts the password so that it cannot be read back with the command **getNtripSettings**.

The *Version* argument specifies which version of the NTRIP protocol to use (v1 or v2).

The *SendGGA* argument specifies whether or not to send NMEA GGA messages to the NTRIP caster, and at which rate. In *auto* mode (the default), the receiver automatically sends GGA messages if requested by the caster. This argument is ignored in NTRIP server mode.

Example

```
COM1> snts, NTR1, Client, ntrip.com, 2101, USER, PWD, MP1, v2,
      auto<CR>
$R: snts, NTR1, Client, ntrip.com, 2101, USER, PWD, MP1, v2, auto
    NtripSettings, NTR1, Client, ntrip.com, 2101, USER, PWD, MP1, v2,
      auto
COM1>
```

| Inst | IstNTRIPSourceTable | Caster (40) | Port | | | | | | | |
|------|---------------------|-------------|----------------------|--|--|--|--|--|--|--|
| | | | 0...2101 ...65535 | | | | | | | |

Use this command to retrieve the source table from the specified NTRIP caster.

Caster is the hostname or IP address of the NTRIP caster to connect to, and *Port* is the IP port number. The default NTRIP port number is 2101.

Example

```
COM1> lnst, ntripcaster <CR>
$R; lnst, ntripcaster
---->
$-- BLOCK 1 / 0 C
HTTP/1.1 200 OK
Ntrip-Version: Ntrip/2.0
Ntrip-Flags: st_filter,st_auth,st_match,st_strict
Server: NTRIP Caster/2.0.15
...
$-- BLOCK 1 / 0 C
ENDSOURCETABLE
COM1>
```


| sntt gntt | setNtripTlsSettings getNtripTlsSettings | Cd Cd | Enable | Fingerprint (96) | | | | | | |
|--------------|--|---|-----------|------------------|--|--|--|--|--|--|
| | | + NTR1 + NTR2 + NTR3 + NTR4 all | off on | | | | | | | |

[RxControl: Communication > NTRIP Settings > NTRIP Server/Client settings](#)

Use this command to enable or disable TLS on the NTRIP connection referenced by the *Cd* argument.

If the caster's certificate is known by a publicly-trusted certification authority (CA), the receiver will authenticate it by following the usual CA chain of trust, starting from root certificates present on the receiver. In that case, the *Fingerprint* argument should be left empty. If the NTRIP caster uses a self-signed certificate or a certificate only known by a private CA, its SHA-256 fingerprint must be provided. The self-signed certificate of the built-in caster (localhost) is present in the trust-zone of the receiver, and so the *Fingerprint* argument can be left empty for NTRIP client or server connections to localhost.

The examples below show different formats for the *Fingerprint* argument.

Examples

```
COM1> sntt, NTR1, on, ""<CR>
$R: sntt, NTR1, on, ""
    NtripTlsSettings, NTR1, on, ""
COM1>
```

Lower and upper case characters are allowed:

```
COM1> sntt, NTR1, on, Aa:Bb:56:78:90:12: ... 78:90:12:34 <CR>
$R: sntt, NTR1, on, Aa:Bb:56:78:90:12: ... 78:90:12:34
    NtripTlsSettings, NTR1, on, "AA:BB:56:78:90:12: ... 78:90:12:34"
COM1>
```

When using whitespaces as delimiter, do not forget to enclose the fingerprint in double quotes:

```
COM1> sntt, NTR1, on, "Aa Bb 56 78 90 12 ... 78 90 12 34"<CR>
$R: sntt, NTR1, on, "Aa Bb 56 78 90 12 ... 78 90 12 34"
    NtripTlsSettings, NTR1, on, "AA:BB:56:78:90:12: ... 78:90:12:34"
COM1>
```

It is also allowed to leave out the delimiters in the fingerprint:

```
COM1> sntt, NTR1, on, AaBb56789012 ... 78901234 <CR>
$R: sntt, NTR1, on, AaBb56789012 ... 78901234
    NtripTlsSettings, NTR1, on, "AA:BB:56:78:90:12: ... 78:90:12:34"
COM1>
```

3.2.14 NMEA Configuration

| enoc gnoc | exeNMEAOnce getNMEAOnce | Cd | Messages | | | | | | | |
|--------------|----------------------------|---------------|----------|--|--|--|--|--|--|--|
| | | DSK1 | +ALM | | | | | | | |
| | | COM1 | +DTM | | | | | | | |
| | | COM2 | +GBS | | | | | | | |
| | | COM3 | +GGA | | | | | | | |
| | | USB1 | +GLL | | | | | | | |
| | | USB2 | +GNS | | | | | | | |
| | | IP10 ... IP17 | +GRS | | | | | | | |
| | | NTR1 | +GSA | | | | | | | |
| | | NTR2 | +GST | | | | | | | |
| | | NTR3 | +GSV | | | | | | | |
| | | NTR4 | +HDT | | | | | | | |
| | | IPS1 | +RMC | | | | | | | |
| | | IPS2 | +ROT | | | | | | | |
| | | IPS3 | +VTG | | | | | | | |
| | | IPS4 | +ZDA | | | | | | | |
| | | IPS5 | +HRP | | | | | | | |
| | | IPR1 | +LLQ | | | | | | | |
| | | IPR2 | +RBP | | | | | | | |
| | | IPR3 | +RBV | | | | | | | |
| | | IPR4 | +RBD | | | | | | | |
| | | IPR5 | +AVR | | | | | | | |
| | | | +GGAux1 | | | | | | | |
| | | | +GGK | | | | | | | |
| | | | +GFA | | | | | | | |
| | | | +GGQ | | | | | | | |
| | | | +LLK | | | | | | | |
| | | | +GMP | | | | | | | |
| | | | +TFM | | | | | | | |
| | | | +SNC | | | | | | | |
| | | | +THS | | | | | | | |

[RxControl: Communication > Output Settings > NMEA Output Once](#)

Use this command to output a set of NMEA messages on a given connection. This command differs from the related **setNMEAOutput** command in that it instructs the receiver to output the specified messages only once, instead of at regular intervals.

The *Cd* argument defines the connection descriptor (see 1.1.5) on which the message(s) should be output and the *Messages* argument defines the list of messages that should be output. Refer to appendix C for a short description of the NMEA sentences.

Please make sure that the connection specified by *Cd* is configured to allow NMEA output (this is the default for all connections). See the **setDataInOut** command.

Example

To output the receiver position on COM1, use:

```
COM1> enoc, COM1, GGA <CR>
$R: enoc, COM1, GGA
NMEAOnce, COM1, GGA
COM1>
```

| sno gno | setNMEAOutput getNMEAOutput | Stream Stream | Cd | Messages | Interval | | | | | |
|------------|--------------------------------|----------------------------------|---|---|--|--|--|--|--|--|
| | | + Stream1 ... Stream10 all | none DSK1 COM1 COM2 COM3 USB1 USB2 IP10 ... IP17 NTR1 NTR2 NTR3 NTR4 IPS1 IPS2 IPS3 IPS4 IPS5 IPR1 IPR2 IPR3 IPR4 IPR5 + GGAaux1 + GGK + GFA + GGQ + LLK + GMP + TXTbase + TFM + SNC + THS | none + ALM + DTM + GBS + GGA + GLL + GNS + GRS + GSA + GST + GSV + HDT + RMC + ROT + VTG + ZDA + HRP + LLQ + RBP + RBV + RBD + AVR + GGAaux1 + GGK + GFA + GGQ + LLK + GMP + TXTbase + TFM + SNC + THS | off OnChange msec10 msec20 msec40 msec50 msec100 msec200 msec500 sec1 sec2 sec5 sec10 sec15 sec30 sec60 min2 min5 min10 min15 min30 min60 | | | | | |

[RxControl: Communication > Output Settings > NMEA Output > NMEA Output Intervals](#)

Use this command to output a set of NMEA messages on a given connection at a regular interval. The *Cd* argument defines the connection descriptor (see 1.1.5) on which the message(s) should be output and the *Messages* argument defines the list of messages that should be output. Refer to appendix C for a short description of the NMEA sentences.

This command is the counterpart of the **setSBFOutput** command for NMEA sentences. Please refer to the description of that command for a description of the arguments.

Examples

To output GGA at 1Hz and RMC at 10Hz on COM1, use:

```
COM1> sno, Stream1, COM1, GGA, sec1 <CR>
$R: sno, Stream1, COM1, GGA, sec1
NMEAOutput, Stream1, COM1, GGA, sec1
COM1> sno, Stream2, COM1, RMC, msec100 <CR>
$R: sno, Stream2, COM1, RMC, msec100
NMEAOutput, Stream2, COM1, RMC, msec100
COM1>
```

To get the list of NMEA messages currently output, use:

```
COM1> gno <CR>
$R: gno
```

```
NMEAOutput, Stream1, COM1, GGA, sec1
NMEAOutput, Stream2, COM1, RMC, msec100
NMEAOutput, Stream3, none, none, off
NMEAOutput, Stream4, none, none, off
NMEAOutput, Stream5, none, none, off
NMEAOutput, Stream6, none, none, off
NMEAOutput, Stream7, none, none, off
NMEAOutput, Stream8, none, none, off
NMEAOutput, Stream9, none, none, off
NMEAOutput, Stream10, none, none, off
COM1>
```

| snp gnp | setNMEAPrecision getNMEAPrecision | NrExtraDigits | Compatibility | LocalDatum | MinStdDev | | | | | |
|------------|--------------------------------------|---------------|---------------------------|-------------|-----------------------------|--|--|--|--|--|
| | | 0...2...3 | Nominal Mode1 Mode2 | off only | 0.000...0.001 ...1.000 m | | | | | |

[RxControl: Communication > Output Settings > NMEA Output > Customize](#)

Use these commands to define/inquire the number of extra digits in the latitude, longitude and altitude reported in NMEA sentences and to tune certain sentences to be compatible with third-party applications that are not fully compliant with the NMEA 0183 standard.

When *NrExtraDigits* is 0, the latitude and longitude are reported in degrees with 5 decimal digit, and altitude is reported in meters with 2 decimal digit. These default numbers of digits lead to a centimeter-level resolution of the position. To represent RTK positions with their full precision (millimeter-level), it is recommended to set *NrExtraDigits* to 2.

Note that increasing the number of digits (setting *NrExtraDigits* to a non-zero value) may cause the NMEA standard to be broken, as the total number of characters in a sentence may end up exceeding the prescribed limit of 82.

When setting the argument *Compatibility* to *Mode1*, the GPS Quality Indicator in GGA sentences is set to the value "2: Differential GPS" for all non-standalone positioning modes, the Mode Indicator in GNS sentences is set to "D: Differential" for all non-standalone positioning modes, and the Course Over Ground in the VTG sentences is not a null field for stationary receivers.

When setting the argument *Compatibility* to *Mode2*, the Course Over Ground in the VTG sentences is not a null field for stationary receivers.

The *LocalDatum* argument specifies whether transformation parameters sent out by the RTK service provider should be applied or not in NMEA sentences GGA and GNS. If *LocalDatum* is *off*, the transformation parameters are not applied, and the coordinates in GGA and GNS correspond to the coordinates in the *PVTGeodetic* SBF block. If *LocalDatum* is *only* and the relevant transformation parameters have been received, the coordinates are transformed to the local datum and correspond to the *PosLocal* SBF block. If the transformation parameters are not available, the coordinates are untransformed (in particular, the datum setting of the *setGeodeticDatum* command has no effect). The TFM proprietary NMEA sentence can be used to determine which transformation has been applied.

The *MinStdDev* argument defines the minimum standard deviation values that can be encoded in the GST sentence. If an actual standard deviation is below the value provided in *MinStdDev*, the value in *MinStdDev* is encoded instead.

Example

```
COM1> snp, 2, Mode2, off, 0.05<CR>
$R: snp, 2, Mode2, off, 0.05
    NMEAPrecision, 2, Mode2, off, 0.050
COM1>
```

| | | | | | | | | | | |
|------|-----------------|----------|--|--|--|--|--|--|--|--|
| snti | setNMEATalkerID | TalkerID | | | | | | | | |
| gnti | getNMEATalkerID | | | | | | | | | |
| | | auto | | | | | | | | |
| | | GP | | | | | | | | |
| | | GN | | | | | | | | |

[RxControl: Communication > Output Settings > NMEA Output > Customize](#)

Use these commands to define/inquire the "Device Talker" for NMEA sentences. The device talker allows users to identify the type of equipment from which the NMEA sentence was issued.

When the *TalkerID* argument is set to `auto`, the talker will depend on the type of solution that is output. For a GNSS solution, "GN" is used if satellites from multiple constellations are used, "GP" for a GPS only solution, "GA" for a Galileo only solution, and "BD" for a BeiDou only solution.

Note that the command is ignored for the NMEA sentences where it would conflict with the standard. For example, the GSV sentence reporting the GPS visibility will always have its device talker set to "GP" regardless of the **setNMEATalkerID** command.

Example

```
COM1> snti, GP <CR>
$R: snti, GP
    NMEATalkerID, GP
COM1>
```

| | | | | | | | | | | |
|-----|----------------|---------|--|--|--|--|--|--|--|--|
| snv | setNMEAVersion | Version | | | | | | | | |
| gnv | getNMEAVersion | | | | | | | | | |
| | | v3x | | | | | | | | |
| | | v4x | | | | | | | | |

[RxControl: Communication > Output Settings > NMEA Output > Customize](#)

Use this command to set the NMEA version the receiver should comply with.

If v3x is selected, the NMEA sentences are formatted according to the 3.01 version of the standard. If v4x is selected, system ID, signal ID and navigational status fields are added in some sentences according to version 4.11 of the NMEA standard.

Example

```
COM1> snv, v4x<CR>
$R: snv, v4x
    NMEAVersion, v4x
COM1>
```

3.2.15 SBF Configuration

| | | | | | | | | | | |
|------|------------------------|-----------|--|--|--|--|--|--|--|--|
| smrf | setMeas3MaxRefInterval | MaxIntrvl | | | | | | | | |
| gmrf | getMeas3MaxRefInterval | | | | | | | | | |
| | | OnlyRef | | | | | | | | |
| | | msec500 | | | | | | | | |
| | | sec1 | | | | | | | | |
| | | sec5 | | | | | | | | |
| | | sec10 | | | | | | | | |
| | | sec30 | | | | | | | | |
| | | sec60 | | | | | | | | |

[RxControl: Communication > Output Settings > SBF Output > Customize](#)

Use this command to define at which interval to encode reference epochs (i.e. full measurements) into the `Meas3Ranges` SBF block. Refer to the description of the `Meas3Ranges` block for a definition of the reference epochs.

When generating the `Meas3Ranges` SBF block, the receiver automatically selects an optimal interval between reference epochs. This command allows the user to define the maximum interval allowed for his application. Setting the `MaxIntrvl` argument to `OnlyRef` forces the receiver to only encode reference epochs in `Meas3Ranges`. This will allow to decode all epochs independently of any previous epoch, at the expense of a larger average SBF block size.

Example

```
COM1> smrf, OnlyRef<CR>
$R: smrf, OnlyRef
    Meas3MaxRefInterval, OnlyRef
COM1>
```


| sbgp gsgp | setSBFGroups getSBFGroups | Group Group | Messages | | | | | | | |
|--------------|------------------------------|---|---|--|--|--|--|--|--|--|
| | | + Group1 + Group2 + Group3 + Group4 all | none [SBF List] + Measurements + Meas3 + RawNavBits + GPS + GLO + GAL + GEO + BDS + QZS + PVTCart + PVTGeod + PVTExtra + Attitude + Time + Events + DiffCorr + Status + LBand + PostProcess + Rinex + RinexMeas3 + Support | | | | | | | |

[RxControl: Communication > Output Settings > SBF Groups](#)

Use these commands to define/inquire user-defined groups of SBF blocks that can be re-used in the **exeSBFOnce** and the **setSBFOutput** commands. The purpose of defining groups is to ease the typing effort when the same set of SBF blocks are to be addressed regularly.

The list of supported SBF blocks [SBF List] can be found in appendix B.

A number of predefined groups of SBF blocks are available (such as `Measurements`). See the command **setSBFOutput** for a description of these predefined groups.

Example

To output the messages `MeasEpoch`, `PVTCartesian` and `DOP` as one group on COM1 at a rate of 1Hz, you could use the following sequence of commands:

```
COM1> sbgp, Group1, MeasEpoch+PVTCartesian+DOP <CR>
$R: sbgp, Group1, MeasEpoch+PVTCartesian+DOP
      SBFGroups, Group1, MeasEpoch+PVTCartesian+DOP
COM1> sso, Stream1, COM1, Group1, sec1 <CR>
$R: sso, Stream1, COM1, Group1, sec1
      SBFOutput, Stream1, COM1, Group1, sec1
COM1>
```

| esoc gsoc | exeSBFOnce getSBFOnce | Cd | Messages | | | | | | | |
|--------------|--------------------------|---------------|----------------|--|--|--|--|--|--|--|
| | | DSK1 | [SBF List] | | | | | | | |
| | | COM1 | + Measurements | | | | | | | |
| | | COM2 | + Meas3 | | | | | | | |
| | | COM3 | + GPS | | | | | | | |
| | | USB1 | + GLO | | | | | | | |
| | | USB2 | + GAL | | | | | | | |
| | | IP10 ... IP17 | + GEO | | | | | | | |
| | | NTR1 | + BDS | | | | | | | |
| | | NTR2 | + QZS | | | | | | | |
| | | NTR3 | + PVTCart | | | | | | | |
| | | NTR4 | + PVTGeod | | | | | | | |
| | | IPS1 | + PVTEExtra | | | | | | | |
| | | IPS2 | + Attitude | | | | | | | |
| | | IPS3 | + Time | | | | | | | |
| | | IPS4 | + Status | | | | | | | |
| | | IPS5 | + LBand | | | | | | | |
| | | IPR1 | + UserGroups | | | | | | | |
| | | IPR2 | + PostProcess | | | | | | | |
| | | IPR3 | + Rinex | | | | | | | |
| | | IPR4 | + RinexMeas3 | | | | | | | |
| | | IPR5 | + Support | | | | | | | |

RxControl: Communication > Output Settings > SBF Output Once

Use this command to output a set of SBF blocks on a given connection. This command differs from the related **setSBFOutput** command in that it instructs the receiver to output the specified SBF blocks only once, instead of at regular intervals.

The *Cd* argument defines the connection descriptor (see 1.1.5) on which the message(s) should be output and the *Messages* argument defines the list of messages that should be output. The list of SBF blocks [SBF List] supported by the **exeSBFOnce** command can be found in appendix B.

Make sure that the connection specified by *Cd* is configured to allow SBF output (this is the default for all connections). See also the **setDataInOut** command.

Predefined groups of SBF blocks (such as *Measurements*) can be addressed in the *Messages* argument. These groups are defined in the table below.

When using this command to output a block that is also scheduled with the **setSBFOutput** command, the block will be sent twice. Note that this can cause duplicate measurement or PVT epochs in the SBF stream.

| Messages | Description |
|--------------|---|
| Measurements | +MeasEpoch +MeasExtra +EndOfMeas |
| Meas3 | +Meas3Ranges +Meas3CN0HiRes +Meas3Doppler +Meas3PP +Meas3MP |
| GPS | +GPSNav +GPSAlm +GPSIon +GPSUtc |
| GLO | +GLONav +GLOAlm +GLOTTime |
| GAL | +GALNav +GALAlm +GALIon +GALUtc +GALGstGps |
| GEO | +GEONav +GEOAlm |
| BDS | +BDSAlm +BDSNav +BDSIon +BDSUtc |
| QZS | +QZSNav +QZSAlm |

| Messages (Continued) | Description |
|----------------------|---|
| PVTCart | +PVTCartesian +PosCovCartesian +VelCovCartesian +BaseVectorCart |
| PVTGeod | +PVTGeodetic +PosCovGeodetic +VelCovGeodetic +BaseVectorGeod +PosLocal |
| PVTEExtra | +DOP +PVTSupport +PVTSupportA +EndOfPVT |
| Attitude | +AuxAntPositions +AttEuler +AttCovEuler +EndOfAtt |
| Time | +ReceiverTime |
| Status | +SatVisibility +ChannelStatus +ReceiverStatus +InputLink +OutputLink +IPStatus +NTRIPClientStatus +NTRIPServerStatus +CosmosStatus +QualityInd +DiskStatus +RFStatus +DynDNSStatus +P2PPStatus |
| LBand | +LBandTrackerStatus +LBandBeams |
| UserGroups | +Group1 +Group2 +Group3 +Group4 |
| PostProcess | +MeasEpoch +MeasExtra +GPSNav +GPSIon +GPSUtc +GLONav +GLOTime +GALNav +GALIon +GALUtc +GALGstGps +GEONav +BDSNav +BDSIon +BDSUtc +QZSNav +ReceiverSetup +Commands |
| Rinex | +MeasEpoch +GPSNav +GPSIon +GPSUtc +GLONav +GALNav +GALUtc +GALGstGps +GEONav +BDSNav +QZSNav +PVTGeodetic +ReceiverSetup +Comment |
| RinexMeas3 | +Meas3Ranges +GPSNav +GPSIon +GPSUtc +GLONav +GALNav +GALUtc +GALGstGps +GEONav +BDSNav +QZSNav +ReceiverSetup +Comment |
| Support | +MeasEpoch +MeasExtra +EndOfMeas +GPSNav +GPSAlm +GPSIon +GPSUtc +GLONav +GLOAlm +GLOTime +GALNav +GALAlm +GALIon +GALUtc +GALGstGps +GEONav +GEOAlm +BDSAlm +BDSNav +BDSIon +BDSUtc +QZSNav +PVTGeodetic +PosCovGeodetic +BaseVectorGeod +AuxAntPositions +AttEuler +DOP +PVTSupport +PVTSupportA +EndOfPVT +ChannelStatus +ReceiverStatus +InputLink +OutputLink +ReceiverSetup +Commands +RxMessage +LBandTrackerStatus +IPStatus +NTRIPClientStatus +NTRIPServerStatus +CosmosStatus +QualityInd +LBandBeams +DiskStatus +RFStatus +DynDNSStatus +P2PPStatus |

Example

To output the next MeasEpoch block, use:

```
COM1> esoc, COM1, MeasEpoch <CR>
$R: esoc, COM1, MeasEpoch
    SBFOnce, COM1, MeasEpoch
COM1>
```

| SSO gso | setSBFOutput getSBFOutput | Stream Stream | Cd | Messages | Interval | | | | | |
|------------|------------------------------|--|---|--|--|--|--|--|--|--|
| | | + Stream1 ... Stream10 + Res1 + Res2 + Res3 + Res4 all | none DSK1 COM1 COM2 COM3 USB1 USB2 IP10 ... IP17 NTR1 NTR2 NTR3 NTR4 IPS1 IPS2 IPS3 IPS4 IPS5 IPR1 IPR2 IPR3 IPR4 IPR5 | none [SBF List] + Measurements + Meas3 + RawNavBits + GPS + GLO + GAL + GEO + BDS + QZS + PVTCart + PVTGeod + PVTExtra + Attitude + Time + Event + DiffCorr + Status + LBand + UserGroups + PostProcess + Rinex + RinexMeas3 + Support | off OnChange msec10 msec20 msec40 msec50 msec100 msec200 msec500 sec1 sec2 sec5 sec10 sec15 sec30 sec60 min2 min5 min10 min15 min30 min60 | | | | | |

RxControl: Communication > Output Settings > SBF Output > SBF Output

Use this command to output a set of SBF blocks on a given connection at a regular interval.

A *Stream* is defined as a list of messages that should be output with the same interval on one connection descriptor (*Cd* - see 1.1.5). In other words, one *Stream* is associated with one *Cd* and one *Interval*, and contains a list of SBF blocks defined by the *Messages* argument.

The list of supported SBF blocks [SBF List] can be found in appendix B.

Predefined groups of SBF blocks (such as *Measurements*) can be addressed in the *Messages* argument. These groups are defined in the table below.

| Messages | Description |
|--------------|--|
| Measurements | +MeasEpoch +MeasExtra +EndOfMeas |
| Meas3 | +Meas3Ranges +Meas3CN0HiRes +Meas3Doppler +Meas3PP +Meas3MP |
| RawNavBits | +GPSRawCA +GPSRawL2C +GPSRawL5 +GLORawCA +GALRawFNAV +GALRawINAV +GEORawL1 +GEORawL5 +BDSRaw +BDSRawB1C +BDSRawB2a +NAVICRaw +QZSRawL1CA +QZSRawL2C +QZSRawL5 |
| GPS | +GPSNav +GPSAlm +GPSIon +GPSUtc |
| GLO | +GLONav +GLOAlm +GLOTime |
| GAL | +GALNav +GALAlm +GALIon +GALUtc +GALGstGps +GALSARRLM |

| Messages (Continued) | Description |
|----------------------|---|
| GEO | +GEOMT00 +GEOPRNMMask +GEOFastCorr +GEOIntegrity +GEOFastCorrDegr +GEONav +GEODegrFactors +GEONetworkTime +GEOAlm +GEOIGPMask +GEOLongTermCorr +GEOIonoDelay +GEOServiceLevel +GEOClockEphCovMatrix |
| BDS | +BDSAlm +BDSNav +BDSIon +BDSUtc |
| QZS | +QZSNav +QZSAlm |
| PVTCart | +PVTCartesian +PosCovCartesian +VelCovCartesian +BaseVectorCart |
| PVTGeod | +PVTGeodetic +PosCovGeodetic +VelCovGeodetic +BaseVectorGeod +PosLocal |
| PVTExtra | +DOP +PVTSupport +PVTSupportA +EndOfPVT |
| Attitude | +AuxAntPositions +AttEuler +AttCovEuler +EndOfAtt |
| Time | +ReceiverTime +xPPSOffset |
| Event | +ExtEvent +ExtEventPVTCartesian +ExtEventPVTGeodetic +ExtEventBaseVectGeod +ExtEventAttEuler |
| DiffCorr | +DiffCorrIn +BaseStation +RTCMDatum |
| Status | +SatVisibility +ChannelStatus +ReceiverStatus +InputLink +OutputLink +IPStatus +NTRIPClientStatus +NTRIPServerStatus +CosmosStatus +QualityInd +DiskStatus +RFStatus +DynDNSStatus +P2PPStatus |
| LBand | +LBandTrackerStatus +LBandBeams |
| UserGroups | +Group1 +Group2 +Group3 +Group4 |
| PostProcess | +MeasEpoch +MeasExtra +GEORawL1 +GPSNav +GPSIon +GPSUtc +GLONav +GLOTime +GALNav +GALIon +GALUtc +GALGstGps +GEONav +BDSNav +BDSIon +BDSUtc +QZSNav +DiffCorrIn +ReceiverSetup +Commands +ExtEvent |
| Rinex | +MeasEpoch +GPSNav +GPSIon +GPSUtc +GLONav +GALNav +GALUtc +GALGstGps +GEONav +BDSNav +QZSNav +PVTGeodetic +ReceiverSetup +Comment |
| RinexMeas3 | +Meas3Ranges +GPSNav +GPSIon +GPSUtc +GLONav +GALNav +GALUtc +GALGstGps +GEONav +BDSNav +QZSNav +ReceiverSetup +Comment |

| Messages (Continued) | Description |
|----------------------|--|
| Support | +MeasEpoch +MeasExtra +EndOfMeas +GPSRawCA +GPSRawL2C +GPSRawL5 +GLORawCA +GALRawFNAV +GALRawINAV +GEORawL1 +GEORawL5 +BDSRaw +BDSRawB1C +BDSRawB2a +NAVICRaw +QZSRawL1CA +QZSRawL2C +QZSRawL5 +GPSNav +GPSAlm +GPSIon +GPSUtc +GLONav +GLOAlm +GLOTime +GALNav +GALAlm +GALIon +GALUtc +GALGstGps +GEONav +GEOAlm +BDSAlm +BDSNav +BDSIon +BDSUtc +QZSNav +QZSAlm +PVTGeodetic +PosCovGeodetic +BaseVectorGeod +AuxAntPositions +AttEuler +DOP +PVTSupport +PVTSupportA +EndOfPVT +ExtEvent +DiffCorrIn +BaseStation +ChannelStatus +ReceiverStatus +InputLink +OutputLink +ReceiverSetup +Commands +RxMessage +LBandTrackerStatus +IPStatus +NTRIPClientStatus +NTRIPServerStatus +CosmosStatus +QualityInd +LBandBeams +DiskStatus +RFStatus +DynDNSStatus +P2PPStatus |

The *Interval* argument defines the rate at which the SBF blocks specified in the *Messages* argument are output. If set to `off`, the SBF blocks are disabled. If set to `OnChange`, the SBF blocks are output at their natural renewal rate (see section 4.1.8). If a specific interval is specified (e.g. `sec1` corresponds to an interval of 1 second), the SBF blocks are decimated from their renewal rate to the specified interval. Some blocks can only be output at their renewal rate (e.g. the `GPSNav` block). For these blocks, the receiver ignores the value of the *Interval* argument and always assumes `OnChange`. The list of those blocks can be found in appendix B (see the "Flex Rate" column).

Please make sure that the connection specified by *Cd* is configured to allow SBF output (this is the default for all connections). See the **setDataInOut** command.

`Res1` to `Res4` are reserved values of *Stream*. These streams are not saved in the configuration files and, as a consequence, they will always be reset at boot time. For most users, it is not recommended to use these streams.

Example

To output the `MeasEpoch` block at 10Hz and the `PVTGeodetic` block at 1Hz on COM1, use the following sequence:

```
COM1> sso, Stream1, COM1, MeasEpoch, msec100 <CR>
$R: sso, Stream1, COM1, MeasEpoch, msec100
    SBFOutput, Stream1, COM1, MeasEpoch, msec100
COM1> sso, Stream2, COM1, PVTGeodetic, sec1 <CR>
$R: sso, Stream2, COM1, PVTGeodetic, sec1
    SBFOutput, Stream2, COM1, PVTGeodetic, sec1
COM1>
```

3.2.16 RTCM v2.x Settings

| sr2c gr2c | setRTCMv2Compatibility getRTCMv2Compatibility | PRCType | GLoToD | RTKVersion | | | | | | |
|--------------|--|------------------------|----------|---------------------|--|--|--|--|--|--|
| | | Standard GroupDelay | Tk Tb | v2.1 v2.2orLater | | | | | | |

[RxControl: Communication > Input Settings > Differential Corrections > RTCMv2](#)

Use these commands to define/inquire the compatibility of the RTCM 2.x input correction stream. This command applies to rover receivers only and should be used in case the available base station correction stream is not fully compatible with the latest version of the RTCM 2.x standard.

The *PRCType* argument is used to handle a difference in the interpretation of DGPS corrections between the version 2.0 of the RTCM standard and later versions. If the base station is sending RTCM Message Type 1 based on version 2.0, the value *GroupDelay* must be selected to have a correct usage of incoming corrections.

The *GLoToD* argument specifies how to interpret the time-of-day field in the differential GLONASS correction message (MT31). Select *Tb* to be compatible with RTCM version up to 2.2, and select *Tk* to be compatible with RTCM 2.3 and later.

The *RTKVersion* argument specifies if the base station encodes RTK correction messages (MT18 to MT21) according to version 2.1 of the RTCM standard, or according to version 2.2 or above.

Example

To make to rover receiver compatible with a base station sending RTCM 2.2 corrections, use:

```
COM1> sr2c, , Tb <CR>
$R: sr2c, , Tb
      RTCMv2Compatibility, Standard, Tb, v2.2orLater
COM1>
```

| sr2f gr2f | setRTCMv2Formatting getRTCMv2Formatting | ReferenceID | GLOToD | | | | | | | |
|--------------|--|-------------|----------|--|--|--|--|--|--|--|
| | | 0...1023 | Tk Tb | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv2](#)

Use these commands to define/inquire the reference station ID assigned to the receiver when operating in base station mode. The reference station ID is transmitted in the first word of each outgoing RTCM v2.x message.

The argument *GLOToD* specifies how to encode the time-of-day field in the differential GLONASS correction message (MT31). Select *Tb* to be compatible with RTCM version up to 2.2, and select *Tk* to be compatible with RTCM 2.3 and later.

Examples

```
COM1> sr2f, 345 <CR>
$R: sr2f, 345
    RTCMv2Formatting, 345, Tk
COM1>
```

```
COM1> gr2f <CR>
$R: gr2f
    RTCMv2Formatting, 345, Tk
COM1>
```


| sr2i gr2i | setRTCMv2Interval getRTCMv2Interval | Message Message | ZCount | | | | | | | |
|--------------|--|---|--------------|--|--|--|--|--|--|--|
| | | + RTCM1 + RTCM3 + RTCM9 + RTCM16 + RTCM17 + RTCM22 + RTCM23 24 + RTCM31 + RTCM32 all | 1...2...1000 | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv2](#)

Use these commands to define/inquire at which interval the RTCM v2.x messages specified in the *Message* argument should be generated. The related **setRTCMv2IntervalObs** command must be used to specify the interval of some RTK-related messages such as messages 18 and 19.

The interval for every message is given in the *ZCount* argument, in units of 0.6 seconds. For example, to generate a message every 6 seconds, *ZCount* should be set to 10.

For the ephemerides message (RTCM17), the ephemerides are sent out one satellite at a time, at a rate specified by this command. For instance, if *ZCount* is set to 1 and there are 12 ephemerides to send out, it takes $0.6 \times 12 = 7.2$ seconds to send the whole ephemerides set.

The intervals specified with this command are not connection-specific: all the connections which output a given RTCM v2.x message will output it with the same interval.

Note that this command only defines the interval of RTCM messages. To make the receiver actually output these messages, use the **setRTCMv2Output** and **setDataInOut** commands.

Refer to appendix D for an overview of the supported RTCM v2.x messages.

Examples

```
COM1> sr2i, RTCM22, 15 <CR>
$R: sr2i, RTCM22, 15
    RTCMv2Interval, RTCM22, 15
COM1>

COM1> gr2i <CR>
$R: gr2i
    RTCMv2Interval, RTCM1, 2
    RTCMv2Interval, RTCM3, 2
    RTCMv2Interval, RTCM16, 2
    RTCMv2Interval, RTCM22, 15
    RTCMv2Interval, RTCM23|24, 2
COM1>
```

| sr2b gr2b | setRTCMv2IntervalObs getRTCMv2IntervalObs | Message Message | Interval | | | | | | | |
|--------------|--|---------------------------------|-------------|--|--|--|--|--|--|--|
| | | +RTCM18 19 +RTCM20 21 all | 1 ... 600 s | | | | | | | |

[RxControl: Communication](#) > [Output Settings](#) > [Differential Corrections](#) > [RTCMv2](#)

Use these commands to define/inquire at which interval the RTCM v2.x messages specified in the *Message* argument should be generated. The related **setRTCMv2Interval** command must be used to specify the interval of other supported RTCM v2.x messages.

The intervals specified with this command are not connection-specific: all the connections which output a given RTCM v2.x message will output it with the same interval.

Note that this command only defines the interval of RTCM messages. To make the receiver actually output these messages, use the **setRTCMv2Output** and **setDataInOut** commands.

Examples

```
COM1> sr2b, RTCM20|21, 2 <CR>
$R: sr2b, RTCM20|21, 2
    RTCMv2IntervalObs, RTCM20|21, 2
COM1>
```

```
COM1> gr2b <CR>
$R: gr2b
    RTCMv2IntervalObs, RTCM18|19, 1
    RTCMv2IntervalObs, RTCM20|21, 2
COM1>
```

| | | | | | | | | | | |
|------|--------------------|--------------|--|--|--|--|--|--|--|--|
| sr2m | setRTCMv2Message16 | Message (90) | | | | | | | | |
| gr2m | getRTCMv2Message16 | | | | | | | | | |
| | | Unknown | | | | | | | | |

[RxControl: Communication](#) > [Output Settings](#) > [Differential Corrections](#) > [RTCMv2](#)

Use these commands to define/inquire the string that will be transmitted in the RTCM v2.x message 16. The argument *Message* can contain up to 90 characters.

Note that this command only defines the content of message 16. To make the receiver actually output this message, use the **setRTCMv2Output** and **setDataInOut** commands.

Example

To send the string "Hello" in message 16 over COM2 at the default interval, use the following sequence:

```
COM1> sr2m, Hello <CR>
$R: sr2m, Hello
    RTCMv2Message16, "Hello"
COM1> sr2o, COM2, RTCM16 <CR>
$R: sr2o, COM2, RTCM16
    RTCMv2Output, COM2, RTCM16
COM1> sdio, COM2, , RTCMv2 <CR>
$R: sdio, COM2, , RTCMv2
    DataInOut, COM2, auto, RTCMv2
COM1>
```

| sr2o gr2o | setRTCMv2Output getRTCMv2Output | Cd Cd | Messages | | | | | | | |
|--------------|------------------------------------|-----------------|---|--|--|--|--|--|--|--|
| | | + COM1 | none | | | | | | | |
| | | + COM2 | + RTCM1 | | | | | | | |
| | | + COM3 | + RTCM3 | | | | | | | |
| | | + USB1 | + RTCM9 | | | | | | | |
| | | + USB2 | + RTCM16 | | | | | | | |
| | | + IP10 ... IP17 | + RTCM18 19 | | | | | | | |
| | | + NTR1 | + RTCM20 21 | | | | | | | |
| | | + NTR2 | + RTCM22 | | | | | | | |
| | | + NTR3 | + RTCM23 24 | | | | | | | |
| | | + NTR4 | + RTCM31 | | | | | | | |
| | | + IPS1 | + RTCM32 | | | | | | | |
| | | + IPS2 | + RTCM17 | | | | | | | |
| | | + IPS3 | + DGPS | | | | | | | |
| | | + IPS4 | + RTK | | | | | | | |
| | | + IPS5 | all | | | | | | | |
| | | + IPR1 | | | | | | | | |
| | | + IPR2 | | | | | | | | |
| | | + IPR3 | | | | | | | | |
| | | + IPR4 | | | | | | | | |
| | | + IPR5 | | | | | | | | |
| | | all | | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv2](#)

Use these commands to define/inquire which RTCM v2.x messages are enabled for output on a given connection descriptor (*Cd* - see 1.1.5). The *Messages* argument specifies the RTCM message types to be enabled. Some pairs of messages are always enabled together, such as messages 18 and 19. DGPS is an alias for "RTCM1+RTCM3+RTCM31" and RTK is an alias for "RTCM3+RTCM18 | 19+RTCM22+RTCM31".

Refer to appendix D for an overview of the supported RTCM v2.x messages.

Please make sure that the connection specified by *Cd* is configured to allow RTCMv2 output, which can be done with the **setDataInOut** command. The interval at which each message is output is to be specified with the **setRTCMv2Interval** or the **setRTCMv2IntervalObs** command.

Example

To enable RTCM v2.x messages 3, 18, 19 and 22 on COM2, use the following sequence:

```
COM1> sr2o, COM2, RTCM3+RTCM18|19+RTCM22 <CR>
$R: sr2o, COM2, RTCM3+RTCM18|19+RTCM22
    RTCMv2Output, COM2, RTCM3+RTCM18|19+RTCM22
COM1> sdio, COM2, , RTCMv2 <CR>
$R: sdio, COM2, , RTCMv2
    DataInOut, COM2, auto, RTCMv2
COM1>
```

| sr2u gr2u | setRTCMv2Usage getRTCMv2Usage | MsgUsage | | | | | | | | |
|--------------|----------------------------------|---|--|--|--|--|--|--|--|--|
| | | none + RTCM1 + RTCM3 + RTCM9 + RTCM15 + RTCM18 19 + RTCM20 21 + RTCM22 + RTCM23 24 + RTCM31 + RTCM32 + RTCM34 + RTCM17 + RTCM59 all | | | | | | | | |

[RxControl: Communication > Input Settings > Differential Corrections > RTCMv2](#)

Use this command to restrict the list of incoming RTCM v2.x messages that the receiver is allowed to use in its differential PVT computation.

A short description of the supported RTCM v2.x messages can be found in appendix D.

Example

To only accept RTCM1 and RTCM3 corrections from the base station 1011, use the following sequence:

```
COM1> sr2u, RTCM1+RTCM3 <CR>
$R: sr2u, RTCM1+RTCM3
    RTCMv2Usage, RTCM1+RTCM3
COM1> sdcu, , , manual, 1011 <CR>
$R: sdcu, , , manual, 1011
    DiffCorrUsage, LowLatency, 3600.0, manual, 1011 ...
COM1>
```

3.2.17 RTCM v3.x Settings

| | | | | | | | | | | |
|------|---------------------|--------|-----------------|--|--|--|--|--|--|--|
| sr3t | setRTCMv3CRSTransfo | Mode | TargetName (32) | | | | | | | |
| gr3t | getRTCMv3CRSTransfo | | | | | | | | | |
| | | auto | | | | | | | | |
| | | manual | | | | | | | | |

[RxControl: Communication > Input Settings > Differential Corrections > RTCMv3](#)

Use this command to specify how to apply the coordinate reference system (CRS) transformation parameters contained in RTCM v3.x message types 1021 to 1023.

In `auto` mode (the default), the receiver decodes and applies the coordinate transformation parameters from message types 1021-1023. If your RTK provider sends transformation parameters for more than one target CRS, the receiver selects the first transformation parameters it receives.

In `manual` mode, you can force the receiver to only apply the transformation to the target CRS specified with the second argument. The *TargetName* argument must exactly match the name used by the RTK provider. The available target datum names can be found in the `RTCMDatum` SBF block.

Example

To force using the target CRS identified as "4258" by the RTK network, use:

```
COM1> sr3t, manual, "4258"<CR>
$R: sr3t, manual, "4258"
      RTCMv3CRSTransfo, manual, "4258"
COM1>
```

| | | | | | | | | | | |
|------|----------------|---------------|--|--|--|--|--|--|--|--|
| sr3d | setRTCMv3Delay | Delay | | | | | | | | |
| gr3d | getRTCMv3Delay | | | | | | | | | |
| | | 0.0...600.0 s | | | | | | | | |

[RxControl: Communication](#) > [Output Settings](#) > [Differential Corrections](#) > [RTCMv3](#)

Use this command to instruct the receiver to generate and output RTCM v3.x messages with a certain delay.

It is possible to impose a global delay to all RTCM v3.x messages by setting the *Delay* to a non-zero value. This can be used in situations where multiple base stations must be configured to transmit their corrections in a time-multiplexed way. For example, base station A would compute and transmit its corrections at every 10-second epoch (in the GPS time scale), and base station B would compute and transmit its corrections 5 seconds after the 10-second epochs. In that case, receiver B would be configured with the *Delay* argument set to 5.

See also the **setRTCMv3Interval** command to configure the message interval.

Example

To generate the RTCM1001 message with an interval of 10 seconds and a time shift of 2 seconds, use:

```
COM1> sr3i, RTCM1001|2, 10 <CR>
$R: sr3i, RTCM1001|2, 10
    RTCMv3Interval, RTCM1001|2, 10
COM1> sr3d, 2 <CR>
$R: sr3d, 2
    RTCMv3Delay, 2
COM1>
```

| sr3f gr3f | setRTCMv3Formatting getRTCMv3Formatting | ReferenceID | MSMSignals | GLOL2 | RxType (32) | | | | | |
|--------------|--|-------------|---|-------------|-------------|--|--|--|--|--|
| | | 0...4095 | +GPSL1CA +GPSL2PY +GPSL2C +GPSL5 +GLOL1CA +GLOL2P +GLOL2CA +GLOL3 +GALL1BC +GALE5a +GALE5b +GALE5 +GEOL1 +GEOL5 +BDSB1I +BDSB2I +BDSB3I +BDSB1C +BDSB2a +QZSL1CA +QZSL2C +QZSL5 +NAVICL5 all | L2CA L2P | default | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv3](#)

Use these commands to configure the RTCM v3.x message contents when operating in base station mode.

The *ReferenceID* argument specifies the reference station ID transmitted in the header of each outgoing RTCM v3.x message.

The *MSMSignals* argument specifies the signal types to be encoded in MSM messages. For an observable to be actually encoded in MSM, the corresponding signal type must be enabled with this command, the signal must be enabled for tracking (see the **setSignalTracking** command), and a suitable MSM message must be enabled with the **setRTCMv3Output** command.

The *GLOL2* argument applies to message types 1011 and 1012 (GLONASS L1 and L2 observables). It specifies which of the L2P or the L2CA observables must be encoded in RTCM1011 and RTCM1012.

The *RxType* argument can be used to change the receiver type that is transmitted in message 1033, i.e. to change the way the receiver identifies itself to the RTCM network. Setting *RxType* to "default" reverts to the default receiver type.

Example

```
COM1> sr3f, 345 <CR>
$R: sr3f, 345
    RTCMv3Formatting, 345, GPSL1CA+GPSL2PY+GLOL1CA+GLOL2CA+GALL1BC+
    GALE5a+BDSB1I+BDSB2I+QZSL1CA+QZSL2C, L2CA, default
COM1>
```


| sr3i gr3i | setRTCMv3Interval getRTCMv3Interval | Message Message | Interval | | | | | | | |
|--------------|--|--|----------------------------|--|--|--|--|--|--|--|
| | | + RTCM1001 2 + RTCM1003 4 + RTCM1005 6 + RTCM1007 8 + RTCM1009 10 + RTCM1011 12 + RTCM1013 + RTCM1019 + RTCM1020 + RTCM1029 + RTCM1033 + RTCM1042 + RTCM1044 + RTCM1045 + RTCM1046 + RTCM1230 + MSM1 ... MSM7 all | 0.1 ... 1.0 ... 600.0 s | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv3](#)

Use these commands to define/inquire at which interval RTCM v3.x messages should be generated.

The intervals specified with this command are not connection-specific: all the connections which output a given RTCM v3.x message will output it with the same interval.

Using `MSMi` for the *Message* argument sets the interval of all Multiple Signal Messages of type *i*. Refer to appendix D for an overview of the supported RTCM v3.x messages.

For the ephemerides messages (e.g. RTCM1019), the ephemerides are sent out one satellite at a time, at a rate specified by this command. For instance, if *Interval* is set to 1 and there are 12 GPS ephemerides to send out, it takes 12 seconds to send the whole GPS ephemerides set.

By default, RTCM v3.x messages are generated at integer multiples of the specified interval in the GPS time scale. The command `setRTCMv3Delay` can be used to introduce a time offset.

Note that this command only defines the interval of RTCM messages. To make the receiver actually output these messages, use the `setRTCMv3Output` and `setDataInOut` commands.

Example

```
COM1> sr3i, RTCM1001|2, 2 <CR>
$R: sr3i, RTCM1001|2, 2
    RTCMv3Interval, RTCM1001|2, 2
COM1>
```

| | | | | | | | | | | |
|------|----------------------|---------------|--|--|--|--|--|--|--|--|
| sr3m | setRTCMv3Message1029 | Message (120) | | | | | | | | |
| gr3m | getRTCMv3Message1029 | | | | | | | | | |
| | | Unknown | | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv3](#)

Use these commands to define/inquire the string that will be transmitted in the RTCM v3.x message 1029. The argument *Message* can contain up to 120 characters.

Note that this command only defines the content of message 1029. To make the receiver actually output this message, use the **setRTCMv3Output** and **setDataInOut** commands.

Example

To send the string "Hello" in message 1029 over COM2 at the default interval, use the following sequence:

```
COM1> sr3m, Hello <CR>
$R: sr3m, Hello
    RTCMv3Message1029, "Hello"
COM1> sr3o, COM2, RTCM1029 <CR>
$R: sr3o, COM2, RTCM1029
    RTCMv3Output, COM2, RTCM1029
COM1> sdio, COM2, , RTCMv3 <CR>
$R: sdio, COM2, , RTCMv3
    DataInOut, COM2, auto, RTCMv3
COM1>
```

| sr3o gr3o | setRTCMv3Output getRTCMv3Output | Cd Cd | Messages | | | | | | | |
|--------------|------------------------------------|-----------------|-------------------|--|--|--|--|--|--|--|
| | | + COM1 | none | | | | | | | |
| | | + COM2 | + RTCM1001 | | | | | | | |
| | | + COM3 | + RTCM1002 | | | | | | | |
| | | + USB1 | + RTCM1003 | | | | | | | |
| | | + USB2 | + RTCM1004 | | | | | | | |
| | | + IP10 ... IP17 | + RTCM1005 | | | | | | | |
| | | + NTR1 | + <u>RTCM1006</u> | | | | | | | |
| | | + NTR2 | + RTCM1007 ... | | | | | | | |
| | | + NTR3 | RTCM1013 | | | | | | | |
| | | + NTR4 | + RTCM1019 | | | | | | | |
| | | + IPS1 | + RTCM1020 | | | | | | | |
| | | + IPS2 | + RTCM1029 | | | | | | | |
| | | + IPS3 | + <u>RTCM1033</u> | | | | | | | |
| | | + IPS4 | + RTCM1042 | | | | | | | |
| | | + IPS5 | + RTCM1044 | | | | | | | |
| | | + IPR1 | + RTCM1045 | | | | | | | |
| | | + IPR2 | + RTCM1046 | | | | | | | |
| | | + IPR3 | + RTCM1071 | | | | | | | |
| | | + IPR4 | + RTCM1072 | | | | | | | |
| | | + IPR5 | + RTCM1073 | | | | | | | |
| | | all | + <u>RTCM1074</u> | | | | | | | |
| | | | + RTCM1075 | | | | | | | |
| | | | + RTCM1076 | | | | | | | |
| | | | + RTCM1077 | | | | | | | |
| | | | + RTCM1081 | | | | | | | |
| | | | + RTCM1082 | | | | | | | |
| | | | + RTCM1083 | | | | | | | |
| | | | + <u>RTCM1084</u> | | | | | | | |
| | | | + RTCM1085 | | | | | | | |
| | | | + RTCM1086 | | | | | | | |
| | | | + RTCM1087 | | | | | | | |
| | | | + RTCM1091 | | | | | | | |
| | | | + RTCM1092 | | | | | | | |
| | | | + RTCM1093 | | | | | | | |
| | | | + <u>RTCM1094</u> | | | | | | | |
| | | | + RTCM1095 | | | | | | | |
| | | | + RTCM1096 | | | | | | | |
| | | | + RTCM1097 | | | | | | | |
| | | | + RTCM1101 ... | | | | | | | |
| | | | RTCM1107 | | | | | | | |
| | | | + RTCM1111 ... | | | | | | | |
| | | | RTCM1117 | | | | | | | |
| | | | + RTCM1121 | | | | | | | |
| | | | + RTCM1122 | | | | | | | |
| | | | + RTCM1123 | | | | | | | |
| | | | + <u>RTCM1124</u> | | | | | | | |
| | | | + RTCM1125 | | | | | | | |
| | | | + RTCM1126 | | | | | | | |
| | | | + RTCM1127 | | | | | | | |
| | | | + RTCM1131 ... | | | | | | | |
| | | | RTCM1137 | | | | | | | |
| | | | + <u>RTCM1230</u> | | | | | | | |
| | | | + MSM1 | | | | | | | |
| | | | + MSM2 | | | | | | | |
| | | | + MSM3 | | | | | | | |
| | | | + MSM4 | | | | | | | |
| | | | + MSM5 | | | | | | | |
| | | | + MSM6 | | | | | | | |
| | | | + MSM7 | | | | | | | |
| | | | all | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > RTCMv3](#)

Use these commands to define/inquire which RTCM v3.x messages are enabled for output on a given connection descriptor (*Cd* - see 1.1.5). The *Messages* argument specifies the RTCM message types to be enabled.

A short description of the supported RTCM v3.x message types can be found in appendix D. `MSMi` enables the Multiple Signal Message - Type *i* from all constellations. Make sure to disable the legacy observation messages (MT1001-1004 and MT1009-1012) when enabling MSM messages as it is not advised to mix them.

Please make sure that the connection specified by *Cd* is configured to allow RTCMv3 output, which can be done with the `setDataInOut` command. The interval at which each message is output is to be specified with the `setRTCMv3Interval` command.

Example

To enable RTCM v3.x messages 1001, 1002, 1005 and 1006 on COM2, use the following sequence:

```
COM1> sr3o, COM2, RTCM1001+RTCM1002+RTCM1005+RTCM1006 <CR>
$R: sr3o, COM2, RTCM1001+RTCM1002+RTCM1005+RTCM1006
    RTCMv3Output, COM2, RTCM1001+RTCM1002+RTCM1005+RTCM1006
COM1> sdio, COM2, , RTCMv3 <CR>
$R: sdio, COM2, , RTCMv3
    DataInOut, COM2, auto, RTCMv3
COM1>
```

| sr3u gr3u | setRTCMv3Usage getRTCMv3Usage | MsgUsage | | | | | | | | |
|--------------|----------------------------------|--|--|--|--|--|--|--|--|--|
| | | none + RTCM1001 ... <u>RTCM1013</u> + RTCM1015 + RTCM1016 + RTCM1017 + RTCM1019 ... <u>RTCM1027</u> + RTCM1029 + RTCM1033 + RTCM1037 + RTCM1038 + RTCM1039 + RTCM1042 + RTCM1044 + RTCM1045 + RTCM1046 + RTCM1071 ... <u>RTCM1077</u> + RTCM1081 ... <u>RTCM1087</u> + RTCM1091 ... <u>RTCM1097</u> + RTCM1111 ... <u>RTCM1117</u> + RTCM1121 ... <u>RTCM1127</u> + RTCM1230 + MSM1 + MSM2 + MSM3 + MSM4 + MSM5 + MSM6 + MSM7 all | | | | | | | | |

[RxControl: Communication > Input Settings > Differential Corrections > RTCMv3](#)

Use this command to restrict the list of incoming RTCM v3.x messages that the receiver is allowed to use in its differential PVT computation.

A short description of the supported RTCM v3.x messages can be found in appendix D. `MSMi` is an alias to enable the Multiple Signal Message - Type *i* from all constellations at once.

Example

To only accept RTCM1001 and RTCM1002 corrections from the base station 1011, use the following sequence:

```
COM1> sr3u, RTCM1001+RTCM1002 <CR>
$R: sr3u, RTCM1001+RTCM1002
    RTCMv3Usage, RTCM1001+RTCM1002
COM1> sdcu, , , manual, 1011 <CR>
$R: sdcu, , , manual, 1011
    DiffCorrUsage, LowLatency, 3600.0, manual, 1011 ...
COM1>
```

3.2.18 CMR v2.0 Settings

| | | | | | | | | | | |
|------|--------------------|-------------|--|--|--|--|--|--|--|--|
| sc2f | setCMRv2Formatting | ReferenceID | | | | | | | | |
| gc2f | getCMRv2Formatting | | | | | | | | | |
| | | 0...31 | | | | | | | | |

[RxControl: Communication](#) > [Output Settings](#) > [Differential Corrections](#) > [CMRv2](#)

Use these commands to define/inquire the reference station ID assigned to the receiver when operating in base station mode. The reference station ID is transmitted in the header of each outgoing CMR v2.0 message.

Examples

```
COM1> sc2f, 12 <CR>
$R: sc2f, 12
    CMRv2Formatting, 12
COM1>
```

```
COM1> gc2f <CR>
$R: gc2f
    CMRv2Formatting, 12
COM1>
```

| sc2i gc2i | setCMRv2Interval getCMRv2Interval | Message Message | Interval | | | | | | | |
|--------------|--------------------------------------|---|-----------------------------------|--|--|--|--|--|--|--|
| | | + CMR0 + CMR1 + CMR2 + CMR3 all | 0.1 ... <u>1.0</u> ... 600.0 s | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > CMRv2](#)

Use these commands to define/inquire at which interval CMR v2.0 messages should be generated.

The intervals specified with this command are not connection-specific: all the connections which output a given CMR v2.0 message will output it with the same interval.

Note that this command only defines the interval of CMR messages. To make the receiver actually output these messages, use the **setCMRv2Output** and **setDataInOut** commands.

Refer to appendix D for an overview of the supported CMR v2.0 messages.

Examples

```
COM1> sc2i, CMR0, 2 <CR>
```

```
$R: sc2i, CMR0, 2
```

```
    CMRv2Interval, CMR0, 2
```

```
COM1>
```

```
COM1> gc2i <CR>
```

```
$R: gc2i CMRv2Interval, CMR0, 2
```

```
    CMRv2Interval, CMR1, 1 CMRv2Interval, CMR2, 1
```

```
COM1>
```

| | | | | | | | | | | |
|------|------------------|-------------|-------------|-----------|--|--|--|--|--|--|
| sc2m | setCMRv2Message2 | ShortID (8) | LongID (50) | COGO (16) | | | | | | |
| gc2m | getCMRv2Message2 | | | | | | | | | |
| | | Unknown | Unknown | Unknown | | | | | | |

[RxControl: Communication](#) > [Output Settings](#) > [Differential Corrections](#) > [CMRv2](#)

Use these commands to define/inquire the strings that will be transmitted in the CMR v2.0 message 2.

The argument *ShortID* is the short station ID. It can contain up to 8 characters in compliance with the CMR standard. If less than 8 characters are defined, the string will be right justified and padded with spaces.

The argument *LongID* is the long station ID. It can contain up to 50 characters in compliance with the CMR standard. If less than 50 characters are defined, the string will be right justified and padded with spaces.

The argument *COGO* is the COGO code. It can contain up to 16 characters in compliance with the CMR standard. If less than 16 characters are defined, the string will be right justified and padded with spaces.

Note that this command only defines the contents of message 2. To make the receiver actually output this message, use the **setCMRv2Output** and **setDataInOut** commands.

Example

To send the string "Hello" as short station ID and send CMR2 messages through COM2, use the following sequence:

```
COM1> sc2m, Hello <CR>
$R: sc2m, Hello
      CMRv2Message2, "Hello", "Unknown", "Unknown"
COM1> sc2o, COM2, CMR2 <CR>
$R: sc2o, COM2, CMR2
      CMRv2Output, COM2, CMR2
COM1> sdio, COM2, , CMRv2 <CR>
$R: sdio, COM2, , CMRv2
      DataInOut, COM2, auto, CMRv2
COM1>
```


| sc2o gc2o | setCMRv2Output getCMRv2Output | Cd Cd | Messages | | | | | | | |
|--------------|----------------------------------|-----------------|---------------|--|--|--|--|--|--|--|
| | | + COM1 | none | | | | | | | |
| | | + COM2 | + <u>CMR0</u> | | | | | | | |
| | | + COM3 | + <u>CMR1</u> | | | | | | | |
| | | + USB1 | + CMR2 | | | | | | | |
| | | + USB2 | + <u>CMR3</u> | | | | | | | |
| | | + IP10 ... IP17 | all | | | | | | | |
| | | + NTR1 | | | | | | | | |
| | | + NTR2 | | | | | | | | |
| | | + NTR3 | | | | | | | | |
| | | + NTR4 | | | | | | | | |
| | | + IPS1 | | | | | | | | |
| | | + IPS2 | | | | | | | | |
| | | + IPS3 | | | | | | | | |
| | | + IPS4 | | | | | | | | |
| | | + IPS5 | | | | | | | | |
| | | + IPR1 | | | | | | | | |
| | | + IPR2 | | | | | | | | |
| | | + IPR3 | | | | | | | | |
| | | + IPR4 | | | | | | | | |
| | | + IPR5 | | | | | | | | |
| | | all | | | | | | | | |

[RxControl: Communication > Output Settings > Differential Corrections > CMRv2](#)

Use these commands to define/inquire which CMR v2.0 messages are enabled for output on a given connection descriptor (*Cd* - see 1.1.5). The *Messages* argument specifies the CMR message types to be enabled. Refer to appendix D for an overview of the supported CMR v2.0 messages.

Please make sure that the connection specified by *Cd* is configured to allow CMRv2 output, which can be done with the **setDataInOut** command. The interval at which each message is output is to be specified with the **setCMRv2Interval** command.

Example

To enable CMR v2.0 message 0 on COM2, use the following sequence:

```
COM1> sc2o, COM2, CMR0 <CR>
$R: sc2o, COM2, CMR0
    CMRv2Output, COM2, CMR0
COM1> sdio, COM2, , CMRv2 <CR>
$R: sdio, COM2, , CMRv2
    DataInOut, COM2, auto, CMRv2
COM1>
```

| sc2u gc2u | setCMRv2Usage getCMRv2Usage | MsgUsage | | | | | | | | |
|--------------|--------------------------------|---|--|--|--|--|--|--|--|--|
| | | none + <u>CMR0</u> + <u>CMR1</u> + <u>CMR2</u> + <u>CMR3</u> + <u>CMR0p</u> + <u>CMR0w</u> all | | | | | | | | |

RxControl: Communication > Input Settings > Differential Corrections > CMRv2

Use this command to restrict the list of incoming CMR v2.0 messages that the receiver is allowed to use in its differential PVT computation. CMR0p and CMR0w refer to the CMR+ and CMR-W variants respectively.

A short description of the supported CMR v2.0 messages can be found in appendix D.

Example

To only accept CMR0 from the base station 12, use the following sequence:

```
COM1> sc2u, CMR0 <CR>
$R: sc2u, CMR0
      CMRv2Usage, CMR0
COM1> sdcu, , , manual, 12 <CR>
$R: sdcu, , , manual, 12
      DiffCorrUsage, LowLatency, 3600.0, manual, 12 ...
COM1>
```

3.2.19 Internal Disk Logging

| | | | | | | | | | | |
|------|-------------------|--------|--------------|--|--|--|--|--|--|--|
| sdfa | setDiskFullAction | Disk | Action | | | | | | | |
| gdfa | getDiskFullAction | Disk | | | | | | | | |
| | | + DSK1 | DeleteOldest | | | | | | | |
| | | all | StopLogging | | | | | | | |

[RxControl: Logging > Internal Logging Settings > Global Logging Options](#)

Use these commands to define/inquire what the receiver should do when the disk identified by *Disk* is full.

The currently supported actions are as follows:

| Action | Description |
|--------------|---|
| DeleteOldest | The oldest file on the disk is automatically removed, unless the oldest file is also the current logging file. In that latter case, the logging stops. In incremental file naming mode, if the auto-incremented file name already exists, the existing file is overwritten. |
| StopLogging | All logging activity stops on the specified disk. |

Examples

```
COM1> sdfa, DSK1, StopLogging <CR>
$R: sdfa, DSK1, StopLogging
    DiskFullAction, DSK1, StopLogging
COM1>
```

```
COM1> gdfa <CR>
$R: gdfa
    DiskFullAction, DSK1, StopLogging
COM1>
```

| Idi | IstDiskInfo | Disk | Directory (60) | | | | | | | |
|-----|-------------|-------------|----------------|--|--|--|--|--|--|--|
| | | DSK1 all | | | | | | | | |

Use this command to retrieve information about the disk identified by the *Disk* argument. The reply to this command contains the disk size and free space in bytes and the list of all recorded files and directories.

The content of directories is not shown by default. To list the content of a directory, use the second argument to specify the directory name.

Example

```
COM1> ldi, DSK1 <CR>
$R; ldi, dsk1
---->
$-- BLOCK 1 / 0
<?xml version="1.0" encoding="ISO-8859-1" ?>
<DiskInfo version="0.1">
  <Disk name="DSK1" total="2030927872" free="2030764032" >
    <File name="log.sbf" size="16384" />
    <File name="leuv2050.07_" size="35196" />
  </Disk>
</DiskInfo>
COM1>
```

| sfn gfn | setFileNaming getFileNaming | Cd Cd | NamingType | FileName (20) | | | | | | |
|------------|--------------------------------|---------------|---|---------------|--|--|--|--|--|--|
| | | + DSK1 all | FileName Incremental IGS15M IGS1H IGS6H IGS24H | log | | | | | | |

[RxControl: Logging > Internal Logging Settings > SBF Logging and Upload](#)

Use these commands to define/inquire the file naming convention for the internal SBF, NMEA or user-message log files.

If *NamingType* is *FileName*, the file name is given by the third argument *FileName*, followed by the extension *.sbf*, *.nma* or *.ecm* for SBF, NMEA and user-message files respectively. User-message files contain messages entered by the command **exeEchoMessage** prefixed with the GPS week number and time of week in seconds.

If *NamingType* is *Incremental*, the file name is given by the first five characters of the *FileName* argument (right padded with "_" if necessary), followed by a modulo-1000 counter incrementing each time logging is stopped and restarted. The file name extension is *.sbf*, *.nma* or *.ecm* as described above. If the auto-incremented file name already exists on the disk, the receiver takes action as specified by the **setDiskFullAction** command.

The set of allowed characters for the *FileName* argument is:

_0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz

If *NamingType* is *IGS15M*, *IGS1H*, *IGS6H* or *IGS24H*, the receiver automatically creates a new file every 15 minutes, every hour, every 6 hours or every 24 hours respectively, and the file name adheres to the IGS/RINEX2.11 naming convention.

The 4-character station identifier is the first four letters of the station code as set by the **setMarkerParameters** command. If the station code is empty, the first four letters of the marker name are used.

If desired, it is also possible to add a log session ID prefix to all file names logged in IGS naming mode. This is enabled with the **setGlobalFileNamingOptions** command.

In IGS naming mode, the files are put in daily directories, the directory name being of the form *yyddd* with *yy* the 2-digit year and *ddd* the day of year. If *NamingType* is *FileName* or *Incremental*, the file is put in the root directory.

Note that the actual file name on the disk is case insensitive and only contains lower-case characters even if the user entered upper-case characters in the *FileName* argument.

If the naming convention is changed while logging is ongoing, the current file is closed and the logging continues in a new file with the name as specified.

Example

To have a fixed file name "mytest.sbf", use:

```
COM1> sfn, DSK1, FileName, mytest <CR>
$R: sfn, DSK1, FileName, mytest
```

```
FileNaming, DSK1, FileName, "mytest"  
COM1>
```

| | | | | | | | | | | |
|------|----------------------------|---------|--|--|--|--|--|--|--|--|
| sfno | setGlobalFileNamingOptions | BusyTag | | | | | | | | |
| gfno | getGlobalFileNamingOptions | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

[RxControl: Logging > Internal Logging Settings > Global Logging Options](#)

By default, files names follow the convention described with the logging commands (**setFileNaming**, **setRINEXLogging**).

By setting the *BusyTag* argument to `on`, a ".A" suffix is added to all files that are currently written to for easy identification. The suffix is removed when the file is closed.

Example

```
COM1> sfno, on<CR>
$R: sfno, on
    GlobalFileNamingOptions, on
COM1>
```

| emd gmd | exeManageDisk getManageDisk | Disk | Action | | | | | | | |
|------------|--------------------------------|------|----------------------------|--|--|--|--|--|--|--|
| | | DSK1 | Unmount Mount Format | | | | | | | |

[RxControl: Logging > Disk\(s\) > Disk Management](#)

Use this command to manage the disk identified by the *Disk* argument.

Specify the action `Format` to format the disk (all data will be lost).

The `Mount` and `Unmount` actions mount and unmount the disk respectively. Unmounting an internal disk makes it available as a mass-storage device when the USB cable is connected to a PC, i.e. it makes the disk appear as a drive on most file browsers. When the disk is mounted, it cannot be accessed as a mass-storage device. Internal logging is only possible when the disk is mounted. See the **setUMSDOnConnect** command to automatically unmount the disk upon connecting the USB cable.

Prior to formatting or unmounting the disk, make sure to stop all disk activities. If the specified action could not be performed, an error message is returned.

Example

To format the first disk (DSK1), use:

```
COM1> emd, DSK1, Format <CR>
$R: emd, DSK1, Format
ManageDisk, DSK1, Format
COM1>
```


| lrf | lstRecordedFile | Disk | FileName (60) | | | | | | | |
|-----|-----------------|------|---------------|--|--|--|--|--|--|--|
| | | DSK1 | | | | | | | | |

Use this command to retrieve the contents of one of the log files on the disk identified with the *Disk* argument.

The reply to this command consists in a succession of blocks starting with the "\$-- BLOCK" header, and terminating with the pseudo-prompt "---->" (see section Section 3.1.3, "Command Replies" for details). The decoding program must remove these headers and pseudo-prompts to recover the original file contents.

The download speed is highly influenced by the processor load. To speed up the download, it is recommended to stop the signal tracking, which can be done by typing the following command before starting the download: **setSatelliteTracking, none**.

The file download can be interrupted by sending ten uppercase "S" characters (simply by holding the "shift-S" key pressed) to the connection through which the download is taking place.

Examples

To output the contents of the internal log file named `log.sbf` on the first disk (DSK1), use:

```
COM1> lrf, DSK1, log.sbf <CR>
$R; lrf, DSK1, log.sbf
... Here comes the content of log.sbf ...
COM1>
```

If the file `log.sbf` does not exist, an error is returned:

```
COM1> lrf, DSK1, log.sbf <CR>
$R? lstRecordedFile: Argument 'FileName' could not be handled!
COM1>
```

| erf grf | exeRemoveFile getRemoveFile | Disk | FileName (200) | | | | | | | |
|------------|--------------------------------|------|----------------|--|--|--|--|--|--|--|
| | | DSK1 | none all | | | | | | | |

[RxControl: Logging > Remove Internal File](#)

Use this command to remove one file or an entire directory from the disk identified by the *Disk* argument.

If *FileName* is the name of a file, only that single file is removed from the disk. Files in a directory can be specified using dirname/filename.

If *FileName* is the name of a directory, the entire directory is deleted, except the file currently written to, if any.

If the reserved string `all` is used for the *FileName* argument, all files are removed from the selected disk, except the file currently written to, if any.

If there is no file nor directory named *FileName* on the disk or if the file is currently written to, an error message is returned.

Examples

To remove the file "ATRX2980.03_" from directory "03298", use:

```
COM1> erf, DSK1, 03298/ATRX2980.03_ <CR>
$R: erf, DSK1, 03298/ATRX2980.03_
      RemoveFile, DSK1, "03298/ATRX2980.03_"
COM1>
```

To remove all files from DSK1, use:

```
COM1> erf, DSK1, all <CR>
$R: erf, DSK1, all
      RemoveFile, DSK1, all
COM1>
```

| srxi grxl | setRINEXLogging getRINEXLogging | Cd Cd | FileDuration | ObsInterval | SignalTypes | ExtraObsTypes | RINEXVersion | MixedNav | | |
|--------------|------------------------------------|---------------|--|--|--|--|--------------|-----------|--|--|
| | | + DSK1 all | none hour1 hour6 hour24 minute15 | sec1 sec2 sec5 sec10 sec15 sec30 sec60 | none + GPSL1CA + GPSL2PY + GPSL2C + GPSL5 + GLOL1CA + GLOL2P + GLOL2CA + GLOL3 + GALL1BC + GALE5a + GALE5b + GALE5 + GEOL1 + GEOL5 + BDSB1I + BDSB2I + BDSB3I + BDSB1C + BDSB2a + QZSL1CA + QZSL2C + QZSL5 + NAVICL5 all | none + Dx + Sx + Channel all | v2x v3x | off on | | |

[RxControl: Logging > Internal RINEX Logging > RINEX Logging Options](#)

Use this command to configure RINEX file logging on the disk identified with the *Cd* argument.

The argument *FileDuration* specifies whether a new RINEX file should be started every 15 minutes, every hour, 6 hours or every day. When *FileDuration* is set to `none`, RINEX logging is disabled and all following arguments are ignored.

ObsInterval specifies the interval of the observation records.

SignalTypes sets the list of signals to encode in the RINEX observation files. The more signals are selected, the bigger the RINEX files.

By default, the RINEX files contain the code and carrier phase observables. The *ExtraObsTypes* argument allows to also include the Doppler (obs code Dx), the C/N₀ (obs code Sx), or the channel number (obs code X).

The argument *RinexVersion* selects which RINEX version to use.

The argument *MixedNav* specifies whether the navigation data is stored in separate files for each constellation (*MixedNav* set to `off`), or in a single mixed file (*MixedNav* set to `on`). This argument is ignored if *RINEXVersion* is `v2x`. Note that QZSS and BeiDou navigation data are only available in the mixed navigation file.

In the RINEX file names, the 4-character station identifier is the first four letters of the station code as set by the **setMarkerParameters** command. If the station code is empty, the first four letters of the marker name are used instead.

If desired, it is also possible to add a log session ID prefix to all RINEX file names. This is enabled with the **setGlobalFileNamingOptions** command.

RINEX files are put in daily directories, the directory name being of the form `yyddd` with `yy` the 2-digit year and `ddd` the day of year.

If a RINEX file is currently being logged when issuing this command, the new settings will only be applied when the next RINEX file will be started. This occurs at a rate specified by *FileDuration*. To force the new settings to be immediately applied, RINEX logging must be temporarily stopped (*FileDuration* set to `none`) and then re-enabled. Changing the RINEX settings (e.g. changing the list of signals to be stored in RINEX) results in the past data to be overwritten in the RINEX file.

Example

To create daily RINEX files with the observation file containing only GPS L1CA data at a 30-s interval, use:

```
COM1> srxl, DSK1, hour24, sec30, GPSL1CA <CR>
$R: srxl, DSK1, hour24, sec30, GPSL1CA
    RINEXLogging, DSK1, hour24, sec30, GPSL1CA, none, v2x, on
COM1>
```

| | | | | | | | | | | |
|------|------------------|------|--|--|--|--|--|--|--|--|
| suoc | setUMSDOnConnect | Mode | | | | | | | | |
| guoc | getUMSDOnConnect | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

[RxControl: Logging > Disk\(s\) > Disk Access over USB](#)

Use this command to enable or disable automatic activation of the USB mass-storage device (UMSD) upon connecting the USB port to a computer.

When the receiver is attached to your computer through an USB cable, the internal disk (DSK1) can be accessed using a standard file browser, where it appears as a removable drive or USB mass-storage device. This requires the disk to be unmounted by the receiver so that it can be accessed by your computer's operating system. Unmounting the disk can be done manually with the **exeManageDisk** command, or can be done automatically by the receiver each time the USB cable is attached to your computer.

When the *Mode* argument is `on`, each time the USB cable is connected, the receiver stops logging data and unmounts the internal disk. The disk becomes visible in your file browser. When the USB cable is disconnected, the internal disk is automatically remounted and logging resumes.

When *Mode* is `off`, activation of the USB mass-storage device is not done automatically and requires manually unmounting the internal disk with the **exeManageDisk** command.

Example

```
COM1> suoc, off<CR>
$R: suoc, off
    UMSDOnConnect, off
COM1>
```

3.2.20 FTP Push of Log Files

| | | | | | | | | | | |
|------|-----------------|-------------|-----------|-----------|---------------|--|--|--|--|--|
| sfpr | setFTPPushRINEX | Server (32) | Path (64) | User (12) | Password (24) | | | | | |
| gfpr | getFTPPushRINEX | | | anonymous | | | | | | |

[RxControl: Logging > Internal RINEX Logging > RINEX FTP Push Options](#)

Use this command to automatically send the onboard RINEX files to a remote FTP server (FTP Push). The arguments specify the FTP server hostname or IP address, the path to the remote directory where to put the RINEX files, and the login and password to use. Note that the receiver encrypts the password so that it cannot be read back with the command **getFTPPushRINEX**.

The RINEX files are FTPed when they are complete, as prescribed by the *FileDuration* settings in the **setRINEXLogging** command. The current files are also FTPed when the user disables RINEX logging.

The files are put in the remote directory specified in the *Path* argument. Special character sequences can be used to encode the file date in the path: %Y is replaced with the 2-digit year, %Y with the 4-digit year, %m with the month, %d with the day of the month, and %j with the day of the year (starting with 001). To put a literal "%" in the path, use %%. After expansion, *Path* must not be longer than 80 characters.

If the directory specified in the *Path* argument does not exist on the remote server, it is created.

If the transfer or the directory creation fails, an error is flagged (enter the command **lstInternalFile**, **Error** to see the errors and clear the error flag).

Example

```
COM1> sfpr, ftp.mydomain.com, mydata/%Y%m%d, myname, mypwd <CR>
$R: sfpr, ftp.mydomain.com, mydata/%Y%m%d, myname, mypwd
      FTPPushRINEX, "ftp.mydomain.com", "mydata/%Y%m%d",
      "myname", "7UU5CL7W1C75DWXX2TEXD3W"
COM1>
```

| | | | | | | | | | | |
|------|---------------|-------------|-----------|-----------|---------------|--|--|--|--|--|
| sfps | setFTPPushSBF | Server (32) | Path (64) | User (12) | Password (24) | | | | | |
| gfps | getFTPPushSBF | | | | | | | | | |
| | | | | anonymous | | | | | | |

[RxControl: Logging > Internal Logging Settings > SBF Logging and Upload](#)

Use this command to automatically send the onboard SBF files to a remote FTP server (FTP push). The arguments specify the FTP server hostname or IP address, the path to the remote directory where to put the SBF files, and the login and password to use. Note that the receiver encrypts the password so that it cannot be read back with the command **getFTPPushSBF**.

FTP push is only available in IGS file naming mode (see the **setFileNaming** command). Each time an SBF file is ready, it is FTPed to the specified server. For example, in **IGS1H** file naming mode, files are FTPed every hour. The current log file is also FTPed when the user disables internal logging.

The files are put in the remote directory specified in the *Path* argument. Special character sequences can be used to encode the file date in the path: `%Y` is replaced with the 2-digit year, `%Y` with the 4-digit year, `%m` with the month, `%d` with the day of the month, and `%j` with the day of the year (starting with 001). To put a literal "%" in the path, use `%%`. After expansion, *Path* must not be longer than 80 characters.

If the directory specified in the *Path* argument does not exist on the remote server, it is created.

If the transfer or the directory creation fails, an error is flagged (enter the command **lstInternalFile**, **Error** to see the errors and clear the error flag).

Example

```
COM1> sfps, ftp.mydomain.com, mydata/%Y%m%d, myname, mypwd <CR>
$R: sfps, ftp.mydomain.com, mydata/%Y%m%d, myname, mypwd
    FTPPushSBF, "ftp.mydomain.com", "mydata/%Y%m%d",
    "myname", "7UU5CL7W1C75DWXX2TEXD3W"
COM1>
```

| | | | | | | | | | | |
|------|----------------|-------------|-----------|-----------|---------------|--|--|--|--|--|
| efpt | exeFTPPushTest | Server (40) | Path (64) | User (20) | Password (40) | | | | | |
| gfpt | getFTPPushTest | | | | | | | | | |
| | | | | anonymous | | | | | | |

RxControl: Logging > Test FTP Push to Server

Use this command to test write access to a FTP server.

The arguments specify the FTP server hostname or IP address, the path to the remote directory where write access will be tested, and the login and password to use. The *Path* may contain variable fields as explained in the **setSBFFTP** command.

Upon receiving this command, the receiver tries to connect to the specified FTP server and to write a short file in the directory specified with the *Path* argument. The file is then deleted from the FTP server.

The process can take several minutes depending on the network latency. At the end, a report message is posted in the activity log. This message can be retrieved with the **lstInternalFile**, **RxMessages**, and is also available in the `RxMessage` SBF block.

Example

```
COM1> efpt, myftp.com, mydata/%Y%m%d, myname, mypwd<CR>
$R: efpt, myftp.com, mydata/%Y%m%d, myname, mypwd
    FTPPushTest, myftp.com, mydata/%Y%m%d, myname, mypwd
COM1>
```


3.2.21 MSS/L-Band Configuration

| lbb | lbbLBandBeams | | | | | | | | | |
|-----|---------------|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | |

Use this command to retrieve the list of user-defined and auto-defined L-Band beams.

The list contains user-defined beams (`User1`, `User2`,...) defined with the **setLBandBeams** command and service-specific beams which are automatically updated by the L-Band service provider. Only the enabled user-defined beams are shown.

For each beam, the list contains the beam carrier frequency in Hz, the baud rate, the beam name and the region code. For service-specific beams, the satellite longitude in degrees (from -180 to 180, positive east of Greenwich) and the grant status are also provided. The last entry shows the SVID to which the beam is mapped.

This command is very similar to the command **getLBandBeams**, the only difference being that the latter only reports the list of user-defined beams.

Example

```
COM1> 1lbb <CR>
$R; 1lbb
---->
$-- BLOCK 1 / 1
LBandBeams, User1, 1535165000, baud1200, "User", "E", Enabled, L13
...
COM1>
```

| slbb glbb | setLBandBeams getLBandBeams | Beam Beam | Frequency | Rate | Name (8) | Region (8) | Usage | | | |
|--------------|--------------------------------|---|--------------------------------|---|----------|------------|---------------------|--|--|--|
| | | + User1 + User2 + User3 + User4 all | 1525000000 ...1559000000 Hz | baud600 baud1200 baud2400 baud4800 | Unknown | Unknown | Disabled Enabled | | | |

[RxControl: L-band > Generic L-Band Settings > Satellite Beam Configuration](#)

This command can be used to define/inquire the parameters of user-defined L-Band beams. A beam is characterized by its frequency and baud rate (the *Frequency* and *Rate* arguments). Optionally, a beam name and region ID can also be associated to each beam, for information only. A beam can be enabled or disabled, as set by the *Usage* argument. Only enabled beams can be locked to.

Example

```
COM1> slbb, User1, 1537460000, baud1200, 25East, E, Enabled <CR>
$R: slbb, User1, 1537460000, baud1200, 25East, E, Enabled
    LBandBeams, User1, 1537460000, baud1200, "25East", "E", Enabled
COM1>
```

| slcs glcs | setLBandCustomServiceID getLBandCustomServiceID | ServiceID (4) | ScramblingVector | NDAUsage | | | | | | |
|--------------|--|---------------|------------------|-----------|--|--|--|--|--|--|
| | | 0000 | 0000 | off on | | | | | | |

[RxControl: L-band > Generic L-Band Settings > Satellite Beam Configuration](#)

This command can be used to define the Service ID, scrambling vector and Null-Data-Algorithm (NDA) usage of the L-Band service provider. The *ServiceID* and *ScramblingVector* are 4-digit hexadecimal numbers.

This command should only be used for test and maintenance purposes.

Example

```
COM1> slcs, A5A5, 0101, on<CR>
$R: slcs, A5A5, 0101, on
    LBandCustomServiceID, A5A5, 0101, on
COM1>
```

| sism glsm | setLBandSelectMode getLBandSelectMode | Mode | Service | Beam1 | Beam2 | Beam3 | Beam4 | | | |
|--------------|--|-----------------------|----------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|--|--|--|
| | | auto off manual | Inmarsat | User1 User2 User3 User4 | User1 User2 User3 User4 | User1 User2 User3 User4 | User1 User2 User3 User4 | | | |

RxControl: L-band > Generic L-Band Settings > Satellite Beam Configuration

This command can be used to define/inquire the main operation mode of the L-Band demodulator.

The following modes are available through the *Mode* argument:

| Mode | Description |
|--------|--|
| auto | The demodulator will try to lock to a visible beam, preferring beams to which access has been granted. The list of beams and their status can be retrieved by the command 1stLBandBeams . |
| off | The demodulator will be disabled and will not attempt to lock to any beam. |
| manual | The demodulator will attempt to lock to the beams identified in the <i>Beam1</i> arguments and ignore all other beams. The parameters of the beams (frequency and baud rate) can be retrieved by the command 1stLBandBeams . Make sure that the beams identified in the <i>Beam1</i> arguments are enabled (see command setLBandBeams). |

The second argument *Service* specifies which service the demodulator has to lock to.

Example

```
COM1> slsm, manual, Inmarsat, User1, User2, User2, User1<CR>
$R: slsm, manual, Inmarsat, User1, User2, User2, User1
    LBandSelectMode, manual, Inmarsat, User1, User2, User2, User1
COM1>
```

3.2.22 Cosmos Configuration

| | | | | | | | | | | |
|------|-----------------|--------|-----------------|--|--|--|--|--|--|--|
| scoc | setCosmosConfig | Enable | CustomerID (24) | | | | | | | |
| gcoc | getCosmosConfig | | | | | | | | | |
| | | off | | | | | | | | |
| | | on | | | | | | | | |

RxControl: Communication > Cosmos



Cosmos support is a beta feature and the command description below is subject to change.

Cosmos is a tool that makes it possible to visualize the health and status information of multiple GNSS receivers in a single dashboard, as well as to functionally manage these receivers.

To include the receiver in the Cosmos tool, among others the Cosmos service must be installed on the receiver, and this service must be correctly configured.

Use this command to configure the Cosmos service on the receiver.

The *Enable* argument determines whether or not the Cosmos service is executed on the receiver. The *CustomerID* argument is used to identify the customer in whose Cosmos dashboard the receiver must be included. This value is unique per customer and must be obtained from Septentrio.

Besides the configuration in this command, Cosmos certificate and key files must be uploaded to the receiver. These files must also be obtained from Septentrio and can be uploaded using the web interface (using the "Admin > About > Cosmos" page).

Please refer to the Cosmos documentation and/or to Septentrio sales/support for more information on deploying Cosmos.

Example

```
COM1> scoc, on, customerx<CR>
$R: scoc, on, customerx
    CosmosConfig, on, customerx
COM1>
```

Chapter 4

SBF Reference

4.1 SBF Outline

SBF is the binary output format of Septentrio receivers. In this format, the data are arranged in binary blocks referred to as SBF blocks.

Each SBF block consists of a sequence of numeric or alphanumeric fields of different types and sizes. The total block size is always a multiple of 4 bytes.

The fields of an SBF block may have one of the following types:

| Type | Description |
|-------|---|
| u1 | Unsigned integer on 1 byte (8 bits) |
| u2 | Unsigned integer on 2 bytes (16 bits) |
| u4 | Unsigned integer on 4 bytes (32 bits) |
| i1 | Signed integer on 1 byte (8 bits) |
| i2 | Signed integer on 2 bytes (16 bits) |
| i4 | Signed integer on 4 bytes (32 bits) |
| f4 | IEEE float on 4 bytes (32 bits) |
| f8 | IEEE float on 8 bytes (64 bits) |
| c1[X] | String of X ASCII characters, right padded with bytes set to 0 if needed. |

Each multi-byte binary type is transmitted as little-endian, meaning that the least significant byte is the first one to be transmitted by the receiver. Signed integers are coded as two's complement.

Every SBF block begins with an 8-byte block header, which is followed by the block body.

4.1.1 SBF Block Header Format

Every SBF block starts with an 8-byte header having the following contents:

| Parameter | Type | Description |
|-----------|-------|---|
| Sync | c1[2] | The Sync field is a 2-byte array always set to 0x24, 0x40. The first byte of every SBF block has hexadecimal value 24 (decimal 36, ASCII '\$'). The second byte of every SBF block has hexadecimal value 40 (decimal 64, ASCII '@'). These two bytes identify the beginning of any SBF block and can be used for synchronization. |
| CRC | u2 | The CRC field is the 16-bit CRC of all the bytes in an SBF block from and including the ID field to the last byte of the block. The generator polynomial for this CRC is the so-called CRC-CCITT polynomial: $x^{16} + x^{12} + x^5 + x^0$. The CRC is computed in the forward direction using a seed of 0, no reverse and no final XOR. |
| ID | u2 | The ID field is a 2-byte block ID, which uniquely identifies the block type and its contents. It is a bit field with the following definition: bits 0-12: block number; bits 13-15: block revision number, starting from 0 at the initial block definition, and incrementing each time backwards-compatible changes are performed to the block (see section 4.1.6). |
| Length | u2 | The Length field is a 2-byte unsigned integer containing the size of the SBF block. It is the total number of bytes in the SBF block including the header. It is always a multiple of 4. |

4.1.2 SBF Block Names and Numbers

The structure and contents of an SBF block are unambiguously identified by the block ID. For easier readability, a block name is also defined for each block. When invoking the **setSBFOutput** command to enable a given block, the block name should be specified.

The list of SBF blocks available on your receiver can be found in Appendix B.

4.1.3 SBF Block Time Stamp (TOW and WNc)

Each SBF header is directly followed by a time stamp, which consists of two fields: `TOW` and `WNc`:

| Parameter | Type | Units & Scale | | Do-Not-Use | Description |
|------------------|-----------------|---------------|------------|------------|--|
| | | Factor | Value | | |
| <code>TOW</code> | <code>u4</code> | 0.001 s | 4294967295 | | Time-Of-Week : Time-tag, expressed in whole milliseconds from the beginning of the current GPS week. |
| <code>WNc</code> | <code>u2</code> | 1 week | 65535 | | The GPS week number associated with the <code>TOW</code> . <code>WNc</code> is a continuous week count (hence the "c"). It is not affected by GPS week rollovers, which occur every 1024 weeks. By definition of the Galileo system time, <code>WNc</code> is also the Galileo week number plus 1024. |

In the SBF time stamps, the definition of the week always follows the GPS convention even if the block contains data for another constellation. This means that `WNc 0`, `TOW 0` corresponds to Jan 06,1980 at 00:00:00 UTC.

If the time-of-week or the week number is unknown, which is typically the case for a few seconds after start-up, the corresponding field is set to its Do-Not-Use value (see section 4.1.7). It does not mean that the SBF block is unusable, but simply that the receiver could not time-tag it. It is typical that the `TOW` field becomes valid before the `WNc` field.

The interpretation to give to the time stamp is block-dependent. Three types of time stamps are possible:

- *Receiver time stamp*: this type of time stamp is used for the SBF blocks containing synchronous data, i.e. data generated at a given epoch in the receiver time scale. Examples of such blocks are the measurement and PVT blocks (`MeasEpoch` and `PVTCartesian`). The time stamp is always a multiple of the output interval as specified by the `setSBFOutput` command (see also section 4.1.8). As soon as the receiver time is aligned with the GNSS time, the receiver time stamp is guaranteed to never decrease in successive SBF blocks.
- *SIS time stamp*: it is used for asynchronous blocks containing navigation message data from the signal-in-space. The time stamp corresponds to the time of transmission of the end of the last navigation bit used to build the SBF block. It always follows the GPS convention, as explained above.
- *External time stamp*: this type of time stamp is used for SBF blocks triggered by external asynchronous events, such as the `ExtEvent` block.

For the blocks with a SIS or an external time stamp, there is no strict relation between the time stamp of the SBF blocks and their order of transmission. For example, the SBF stream may contain a `GPSNav` block with ephemeris parameters received one hour in the past (i.e. the time stamp is one hour in the past) followed by another block with a current receiver time stamp.

4.1.4 Sub-blocks

Some blocks contain sub-blocks. For example, the `SatVisibility` block contains `N SatInfo` sub-blocks, each sub-block containing data for one particular satellite. Unless the size of the sub-blocks is mentioned explicitly in the block description, SBF blocks that contain sub-blocks also contain a `SBLength` field, which indicates the size of the sub-blocks in bytes.

4.1.5 Padding Bytes

Padding bytes are foreseen at the end of most SBF blocks and sub-blocks, so that their total size is equal to `Length` or `SBLength` respectively. The padding bytes are just placeholders and should not be looked at by the decoding software. Their value is not defined.

4.1.6 SBF Revision Number

Each SBF block has an associated revision number. The revision number is incremented each time a backwards-compatible change is implemented.

As described in section 4.1.1, the block number is to be found in bits 0 to 12 of the `ID` field, and the revision is in bits 13 to 15 of that field.

A backwards-compatible change consists of adding one or more fields in the padding bytes, or in the fields marked as "reserved" in the block description. Such change should be unnoticed by properly written decoding software that ignore the contents of padding and reserved fields (see also section 4.1.12). Each time such change happens, the revision number is incremented. The revision at which a given field has been introduced is documented in the block description in chapter 4.2, unless that revision is 0 (see the `ReceiverSetup` block as an example). It is guaranteed that if a given field exists in revision `N`, it will also exist in all revisions after `N`: no fields are withdrawn from SBF.

4.1.7 Do-Not-Use Value

It might happen that one or more pieces of data in an SBF block are not known at block creation time. For example, when there are insufficient satellite measurements to compute a position solution, the position components found in the `X`, `Y` and `Z` fields of the `PVTCartesian` block will not be available. To indicate that a given data item is not available or is currently not provided by the receiver, the corresponding field is set to a 'Do-Not-Use' value that is never reached in normal operation.

When applicable, the Do-Not-Use value is mentioned in the block description. The Do-Not-Use value refers to the raw contents of the field, without applying the scale factor. A field set to its Do-Not-Use value should always be discarded by the decoding software.

4.1.8 Output Rate

In general, the default output rate for each SBF block is the renewal rate of the information. For instance, the `GPSTNav` block is output each time a new ephemeris data set is received

from a given GPS satellite. The default output rates of GNSS measurement blocks, PVT blocks and integrated INS/GNSS blocks depend on your permission set. These three rates can be checked by the command **getReceiverCapabilities**.

The default output rate is specified for each block in chapter 4.2. To instruct the receiver to output a given block at its default rate, the "OnChange" rate has to be specified in the **setSBFOutput** command.

Some blocks can only be output at their default rate (e.g. the `GPSNav` block). Others can be decimated to a user-selectable rate. A subset of blocks can also be output "once" using the **exeSBFOnce** command. This can be handy to get a one-shot overview of a particular receiver state. Whether a given block supports a user-selectable rate ("Flex Rate") and whether it belongs to the "output once" set is indicated in the SBF block list in Appendix B.

Attempting to force another rate than the default one for those blocks that do not support "Flex Rate" has no effect: those blocks are always output at their default rate.

4.1.9 Satellite ID and GLONASS Frequency Number

Satellites are identified by the `SVID` (or `PRN`) and `FreqNr` fields, defined as in the table below.



This table is only valid for the currently-supported constellations and signal types (see 4.1.10). To ensure compatibility with future SBF upgrades, decoding software must ignore SBF blocks and sub-blocks of which the satellite ID field or the signal number field is undefined in this document.

| Field | Type | Do-Not-Use | Description | RINEX satellite code |
|-------------|------|------------|---|---|
| | | Value | | |
| SVID or PRN | u1 | 0 | <p>Satellite ID: The following ranges are defined:</p> <p>1-37: PRN number of a GPS satellite</p> <p>38-61: Slot number of a GLONASS satellite with an offset of 37 (R01 to R24)</p> <p>62: GLONASS satellite of which the slot number is not known</p> <p>63-68: Slot number of a GLONASS satellite with an offset of 38 (R25 to R30)</p> <p>71-106: PRN number of a GALILEO satellite with an offset of 70</p> <p>107-119: L-Band (MSS) satellite. Corresponding satellite name can be found in the <code>LBandBeams</code> block.</p> <p>120-140: PRN number of an SBAS satellite (S120 to S140)</p> <p>141-180: PRN number of a BeiDou satellite with an offset of 140</p> <p>181-187: PRN number of a QZSS satellite with an offset of 180</p> <p>191-197: PRN number of a NavIC/IRNSS satellite with an offset of 190 (I01 to I07)</p> <p>198-215: PRN number of an SBAS satellite with an offset of 57 (S141 to S158)</p> <p>216-222: PRN number of a NavIC/IRNSS satellite with an offset of 208 (I08 to I14)</p> <p>223-245: PRN number of a BeiDou satellite with an offset of 182 (C41 to C63)</p> | <p><i>Gnn</i> (<i>nn</i> = SVID)</p> <p><i>Rnn</i> (<i>nn</i> = SVID-37)</p> <p>NA</p> <p><i>Rnn</i> (<i>nn</i> = SVID-38)</p> <p><i>Enn</i> (<i>nn</i> = SVID-70)</p> <p>NA</p> <p><i>Snn</i> (<i>nn</i> = SVID-100)</p> <p><i>Cnn</i> (<i>nn</i> = SVID-140)</p> <p><i>Jnn</i> (<i>nn</i> = SVID-180)</p> <p><i>Inn</i> (<i>nn</i> = SVID-190)</p> <p><i>Snn</i> (<i>nn</i> = SVID-157)</p> <p><i>Inn</i> (<i>nn</i> = SVID-208)</p> <p><i>Cnn</i> (<i>nn</i> = SVID-182)</p> |
| FreqNr | u1 | 0 | <p>GLONASS frequency number, with an offset of 8. It ranges from 1 (corresponding to an actual frequency number of -7) to 21 (corresponding to an actual frequency number of 13).</p> <p>For non-GLONASS satellites, <code>FreqNr</code> is reserved and must be ignored by the decoding software.</p> | |

4.1.10 Signal Type

Some sub-blocks contain a signal type field, which identifies the type of signal and modulation the sub-blocks applies to. The signal numbering is defined as follows:

| Signal number | Signal Type | Constellation | Carrier frequency (MHz) | RINEX v3.04 obs code |
|------------------|-------------|---------------|--|-------------------------|
| 0 | L1CA | GPS | 1575.42 | 1C |
| 1 | L1P | GPS | 1575.42 | 1W |
| 2 | L2P | GPS | 1227.60 | 2W |
| 3 | L2C | GPS | 1227.60 | 2L |
| 4 | L5 | GPS | 1176.45 | 5Q |
| 5 | L1C | GPS | 1575.42 | 1L |
| 6 | L1CA | QZSS | 1575.42 | 1C |
| 7 | L2C | QZSS | 1227.60 | 2L |
| 8 | L1CA | GLONASS | $1602.00 + (\text{FreqNr} - 8) * 9/16$, with FreqNr as defined in section 4.1.9. | 1C |
| 9 | L1P | GLONASS | $1602.00 + (\text{FreqNr} - 8) * 9/16$ | 1P |
| 10 | L2P | GLONASS | $1246.00 + (\text{FreqNr} - 8) * 7/16$ | 2P |
| 11 | L2CA | GLONASS | $1246.00 + (\text{FreqNr} - 8) * 7/16$ | 2C |
| 12 | L3 | GLONASS | 1202.025 | 3Q |
| 13 | B1C | BeiDou | 1575.42 | 1P |
| 14 | B2a | BeiDou | 1176.45 | 5P |
| 15 | L5 | NavIC/IRNSS | 1176.45 | 5A |
| 16 | Reserved | | | |
| 17 | E1 (L1BC) | Galileo | 1575.42 | 1C |
| 18 | Reserved | | | |
| 19 | E6 (E6BC) | Galileo | 1278.75 | 6C |
| 20 | E5a | Galileo | 1176.45 | 5Q |
| 21 | E5b | Galileo | 1207.14 | 7Q |
| 22 | E5 AltBoc | Galileo | 1191.795 | 8Q |
| 23 | LBand | MSS | L-band beam specific | NA |
| 24 | L1CA | SBAS | 1575.42 | 1C |
| 25 | L5 | SBAS | 1176.45 | 5I |
| 26 | L5 | QZSS | 1176.45 | 5Q |
| 27 | L6 | QZSS | 1278.75 | |
| 28 | B1I | BeiDou | 1561.098 | 2I |
| 29 | B2I | BeiDou | 1207.14 | 7I |
| 30 | B3I | BeiDou | 1268.52 | 6I |
| 31 | Reserved | | | |
| 32 | L1C | QZSS | 1575.42 | 1L |
| 33 | L1S | QZSS | 1575.42 | 1Z |
| 34 | B2b | BeiDou | 1207.14 | 7D |
| 35 | Reserved | | | |

4.1.11 Channel Numbering

Some blocks contain a reference to the receiver channel number. Channel numbering starts at one. The maximum value for the channel number depends on the receiver type.

4.1.12 Decoding of SBF Blocks

In order to decode an SBF block, one has to identify the block boundaries in the data stream coming from the receiver. This involves searching for the initial "\$@" characters that mark the beginning of each SBF block. Since the "\$@" sequence can occur in the middle of an SBF block as well, additional checking is needed to make sure that a given "\$@" is indeed the beginning of a block. The following procedure is recommended to decode SBF data stream.

1. Wait until the "\$@" character sequence appears in the data stream from the receiver. When it is found, go to point 2.
2. Read the next two bytes. It should be the block CRC. Store this value for future reference.
3. Read the next two bytes and store them in a buffer. It should be the block ID.
4. Read the next two bytes and append them to the buffer. It should be the `Length` field of the SBF block. It should be a multiple of 4. If not, go back to point 1.
5. Read the next $(\text{Length}-8)$ bytes and append them to the buffer. Compute the CRC of the buffer. The computed CRC should be equal to the CRC stored at point 2. If not, go back to point 1, else a valid SBF block has been detected and can be interpreted by the reading software.
6. If the block number (bits 0 to 12 of the `ID` field decoded at point 3) is of interest to your application, decode the SBF block.
7. Go back to point 1 and search for the new occurrence of the "\$@" sequence after the end of the last byte of the block that was just identified.

To ensure compatibility with future upgrades of SBF, it is recommended that the decoding software observes the following rules:

- Only bits 0 to 12 of the `ID` field must be used to identify a block. Bits 13 to 15 represent the revision number.
- The lengths of SBF blocks and sub-blocks should not be considered constant and hard-coded in the decoding software. Instead, the decoding software must use the `Length` and `SBlockLength` fields encoded in the SBF block.
- Padding bytes should be ignored.
- Reserved fields and reserved bits in bit-fields should be ignored.
- SBF blocks or sub-blocks of which the satellite ID field or the signal number field is undefined in this document should be ignored (see section 4.1.9).

4.2 SBF Block Definitions

4.2.1 Measurement Blocks

GNSS observables are available in the following SBF blocks:

- the legacy `MeasEpoch` block, possibly complemented by `MeasExtra`.
- the `Meas3Ranges` block, possibly complemented by `Meas3Doppler` and `Meas3CN0HiRes`.

The `MeasEpoch` block contains pseudorange, carrier phase, C/N0 and Doppler observables. The `Meas3Ranges` block contains pseudoranges, carrier phases and C/N0, while Doppler is available in the companion `Meas3Doppler` block. The observable resolution is shown in the table below.

| | <code>MeasEpoch</code> | <code>Meas3Ranges</code> |
|---------------|---|--|
| Pseudorange | 1mm | 1mm |
| Carrier phase | 0.001cycles | 0.001cycles |
| C/N0 | 0.25dB-Hz 0.03125dB-Hz with <code>MeasExtra</code> | 1dB-Hz 0.0625dB-Hz with <code>Meas3CN0HiRes</code> |
| Doppler | 0.0001Hz | No Doppler in <code>Meas3Ranges</code> 1mm/s with <code>Meas3Doppler</code> |

The main advantage of the `Meas3` blocks is their reduced size compared to the `MeasEpoch` blocks. As an illustration, the following table shows the disk space required to log the different measurement-related blocks over one day at a 1-s interval. In this example, measurements from all GPS L1/L2/L5, GLONASS L1/L2, Galileo E1/E6/E5a/E5b and BeiDou B1/B2/B3 signals have been logged (constellation status as of beginning of 2017).

| SBF Block | Disk space (1 day, 1 Hz) |
|----------------------------|--------------------------|
| <code>MeasEpoch</code> | 104MB |
| <code>MeasExtra</code> | 110MB |
| <code>Meas3Ranges</code> | 28MB |
| <code>Meas3Doppler</code> | 10MB |
| <code>Meas3CN0HiRes</code> | 5MB |

| | |
|-----------|--|
| MeasEpoch | Number: 4027 |
| | "OnChange" interval: internal measurement rate (receiver-type dependent) |

This block contains all the GNSS measurements (observables) taken at the time given by the `TOW` and `WNc` fields.

For each tracked signal, the following measurement set is available:

- the pseudorange
- the carrier phase
- the Doppler
- the C/N0
- the lock-time.

To decrease the block size, all the measurements from a given satellite are referenced to one master measurement set. For instance, the L2 pseudorange (C2) is not much different from the L1 pseudorange (C1), such that the difference between C2 and C1 is encoded, instead of the absolute value of C2.

This is done by using a two-level sub-block structure. All the measurements from a given satellite are stored in a `MeasEpochChannelType1` sub-block. The first part of this sub-block contains the master measurements, encoded as absolute values. The second part contains slave measurements, for which only the delta values are encoded in smaller `MeasEpochChannelType2` sub-blocks.

Every `MeasEpochChannelType1` sub-block contains a field "N2", which gives the number of nested `MeasEpochChannelType2` sub-blocks. If there is only one signal tracked for a given satellite, there are no slave measurements and N2 is set to 0.

Decoding is done as follows:

1. Decode the master measurements and the N2 value from the `MeasEpochChannelType1` sub-block.
2. If N2 is not 0, decode the N2 nested `MeasEpochChannelType2` sub-blocks.
3. Go back to 1 till the N1 `MeasEpochChannelType1` sub-blocks have been decoded.



Note that measurements in this block are scrambled if the "Measurement Availability" permission is not granted on your receiver. See also bit 7 of the `CommonFlags` field.

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N1 | u1 | | | Number of <code>MeasEpochChannelType1</code> sub-blocks in this <code>MeasEpoch</code> block. |
| SB1Length | u1 | 1 byte | | Length of a <code>MeasEpochChannelType1</code> sub-block, excluding the nested <code>MeasEpochChannelType2</code> sub-blocks |
| SB2Length | u1 | 1 byte | | Length of a <code>MeasEpochChannelType2</code> sub-block |
| CommonFlags | u1 | | | <p>Bit field containing flags common to all measurements.</p> <p>Bit 0: Multipath mitigation: if this bit is set, multipath mitigation is enabled. (see the <code>setMultipathMitigation</code> command).</p> <p>Bit 1: Smoothing of code: if this bit is set, at least one of the code measurements are smoothed values (see <code>setSmoothingInterval</code> command).</p> <p>Bit 2: Carrier phase align: if this bit is set, the fractional part of the carrier phase measurements from different modulations on the same carrier frequency (e.g. GPS L2C and L2P) are aligned, i.e. multiplexing biases (0.25 or 0.5 cycles) are corrected. Aligned carrier phase measurements can be directly included in RINEX files. If this bit is unset, this block contains raw carrier phase measurements. This bit is always set in the current firmware version.</p> <p>Bit 3: Clock steering: this bit is set if clock steering is active (see <code>setClockSyncThreshold</code> command).</p> <p>Bit 4: Not applicable.</p> <p>Bit 5: High dynamics: this bit is set when the receiver is in high-dynamics mode (see the <code>setReceiverDynamics</code> command).</p> <p>Bit 6: Reserved</p> <p>Bit 7: Scrambling: bit set when the measurements are scrambled. Scrambling is applied when the "Measurement Availability" permission is not granted (see the <code>lif,Permissions</code> command).</p> |
| CumClkJumps | u1 | 0.001 s | | Cumulative millisecond clock jumps since start-up, with an ambiguity of $k \cdot 256$ ms. For example, if two clock jumps of -1 ms have occurred since startup, this field contains the value 254. |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| Type1 | ... | ... | | A succession of <i>N1</i> <code>MeasEpochChannelType1</code> sub-blocks, see definition below |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

Rev 1

`MeasEpochChannelType1` sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|-------|------------|---|
| RxChannel | u1 | | | Receiver channel on which this satellite is currently tracked (see 4.1.11). |
| Type | u1 | | | <p>Bit field indicating the signal type and antenna ID:</p> <p>Bits 0-4: <code>SigIdxLo</code>: if not 31, this is the signal number (see 4.1.10), otherwise the signal number can be found in the <code>ObsInfo</code> field below.</p> <p>Bits 5-7: Antenna ID: 0 for main, 1 for <i>Aux1</i> and 2 for <i>Aux2</i></p> |

| | | | | |
|------------|----|---------------|---------------------|--|
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| Misc | u1 | 4294967.296 m | 0 ⁽¹⁾ | <p>Bit field containing the MSB of the pseudorange.</p> <p>Bits 0-3: CodeMSB: MSB of the pseudorange (this is an unsigned value).</p> <p>Bits 4-7: Reserved</p> |
| CodeLSB | u4 | 0.001 m | 0 ⁽¹⁾ | <p>LSB of the pseudorange. The pseudorange expressed in meters is computed as follows:</p> $PR_{type1}[m] = (CodeMSB * 4294967296 + CodeLSB) * 0.001$ <p>where CodeMSB is part of the Misc field.</p> |
| Doppler | i4 | 0.0001 Hz | -2147483648 | <p>Carrier Doppler (positive for approaching satellites). To compute the Doppler in Hz, use:</p> $D_{type1}[Hz] = Doppler * 0.0001$ |
| CarrierLSB | u2 | 0.001 cycles | 0 ⁽²⁾ | LSB of the carrier phase relative to the pseudorange |
| CarrierMSB | i1 | 65.536 cycles | -128 ⁽²⁾ | <p>MSB of the carrier phase relative to the pseudorange. The full carrier phase can be computed by:</p> $L[cycles] = PR_{type1}[m] / \lambda + (CarrierMSB * 65536 + CarrierLSB) * 0.001$ <p>where λ is the carrier wavelength corresponding to the frequency of the signal type in the Type field above: $\lambda = 299792458 / f_L$ m, with f_L the carrier frequency as listed in section 4.1.10.</p> |
| CN0 | u1 | 0.25 dB-Hz | 255 | <p>The C/N0 in dB-Hz is computed as follows, depending on the signal type in the Type field:</p> $C/N_0[dB-Hz] = CN_0 * 0.25 \text{ if the signal number is 1 or 2}$ $C/N_0[dB-Hz] = CN_0 * 0.25 + 10 \text{ otherwise}$ <p>Users requiring a higher C/N0 resolution can use the MeasExtra SBF block. The Misc field of that block allows to extend the resolution to 0.03125dB-Hz.</p> |
| LockTime | u2 | 1 s | 65535 | <p>Duration of continuous carrier phase. The lock-time is reset at the initial lock of the phase-locked-loop, and whenever a loss of lock condition occurs.</p> <p>If the lock-time is longer than 65534s, it is clipped to 65534s.</p> <p>If the carrier phase measurement is not available, this field is set to its Do-Not-Use value.</p> |
| ObsInfo | u1 | | | <p>Bit field:</p> <p>Bit 0: if set, the pseudorange measurement is smoothed</p> <p>Bit 1: Reserved</p> <p>Bit 2: this bit is set when the carrier phase (L) has a half-cycle ambiguity</p> <p>Bits 3-7: The interpretation of these bits depends on the value of SigIdxLo from the Type field.</p> <p>If SigIdxLo equals 31, these bits contain the signal number with an offset of 32 (see 4.1.10). For example, a value of 1 corresponds to signal number 33 (QZSS L1S).</p> <p>If SigIdxLo is 8, 9, 10 or 11, these bits contain the GLONASS frequency number with an offset of 8. For example, a value of 1 corresponds to frequency number -7.</p> <p>Otherwise, these bits are reserved.</p> |
| N2 | u1 | | | Number of MeasEpochChannelType2 sub-blocks contained in this MeasEpochChannelType1 sub-block. |

⁽¹⁾ The pseudorange is invalid if both CodeMSB is 0 and CodeLSB is 0.

⁽²⁾ The carrier phase is invalid if both CarrierMSB is -128 and CarrierLSB is 0.

| | | | | |
|---------|-------|-----|--|---|
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |
| Type2 | ... | ... | | A succession of N2 MeasEpochChannelType2 sub-blocks, see definition below |

MeasEpochChannelType2 sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|------|-----------------------|---|--|
| Type | u1 | | | Bit field indicating the signal type and antenna ID: Bits 0-4: SigIdxLo: if not 31, this is the signal number (see 4.1.10), otherwise the signal number can be found in the ObsInfo field below. Bits 5-7: Antenna ID: 0 for main, 1 for Aux1 and 2 for Aux2 |
| LockTime | u1 | 1 s | 255 | See corresponding field in the MeasEpochChannelType1 sub-block above, except that the value is clipped to 254 instead of 65534. |
| CN0 | u1 | 0.25 dB-Hz | 255 | See corresponding field in the MeasEpochChannelType1 sub-block above. |
| OffsetsMSB | u1 | 65.536 m 6.5536 Hz | -4 ⁽³⁾ -16 ⁽⁴⁾ | Bit field containing the MSB of the code and of the Doppler offsets with respect to the MeasEpochChannelType1 sub-block. Bits 0-2: CodeOffsetMSB: MSB of the code offset. Bits 3-7: DopplerOffsetMSB: MSB of the Doppler offset. CodeOffsetMSB and DopplerOffsetMSB are coded as two's complement. Refer to the CodeOffsetLSB and DopplerOffsetLSB fields to see how to use this field. |
| CarrierMSB | i1 | 65.536 cycles | -128 ⁽⁵⁾ | MSB of the carrier phase relative to the pseudorange. |
| ObsInfo | u1 | | | Bit field: Bit 0: if set, the pseudorange measurement is smoothed Bit 1: Reserved Bit 2: this bit is set when the carrier phase (L) has a half-cycle ambiguity Bits 3-7: If SigIdxLo from the Type field of this sub-block equals 31, these bits contain the signal number with an offset of 32 (see 4.1.10), e.g. 1 corresponds to signal number 33 (QZSS L1S). Otherwise they are reserved and must be ignored by the decoding software. |
| CodeOffsetLSB | u2 | 0.001 m | 0 ⁽³⁾ | LSB of the code offset with respect to pseudorange in the MeasEpochChannelType1 sub-block. To compute the pseudorange, use: $PR_{type2}[m] = PR_{type1}[m] + (CodeOffsetMSB * 65536 + CodeOffsetLSB) * 0.001$ |
| CarrierLSB | u2 | 0.001 cycles | 0 ⁽⁵⁾ | LSB of the carrier phase relative to the pseudorange. The full carrier phase can be computed by: $L[cycles] = PR_{type2}[m] / \lambda + (CarrierMSB * 65536 + CarrierLSB) * 0.001$ where λ is the carrier wavelength corresponding to the signal type in the Type field. |

⁽³⁾ The pseudorange is invalid if both CodeOffsetMSB is -4 and CodeOffsetLSB is 0.

⁽⁴⁾ The Doppler is invalid if both DopplerOffsetMSB is -16 and DopplerOffsetLSB is 0.

⁽⁵⁾ The carrier phase is invalid if both CarrierMSB is -128 and CarrierLSB is 0.

| | | | | |
|------------------|--------|-----------|------------------|--|
| DopplerOffsetLSB | u2 | 0.0001 Hz | 0 ⁽⁴⁾ | <p>LSB of the Doppler offset relative to the Doppler in the MeasEpochChannelType1 sub-block. To compute the Doppler, use:</p> $D_{type2}[Hz] = D_{type1}[Hz] * \alpha + (DopplerOffsetMSB * 65536 + DopplerOffsetLSB) * 1e-4,$ <p>where α is the ratio of the carrier frequency corresponding to the observable type in this MeasEpochChannelType2 sub-block, and that of the master observable type in the parent MeasEpochChannelType1 sub-block (see section 4.1.10 for a list of all carrier frequencies).</p> |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|--|
| MeasExtra | Number: 4000 "OnChange" interval: internal measurement rate (receiver-type dependent) |
|-----------|--|

This block contains extra information associated with the measurements contained in the `MeasEpoch` block, such as the internal corrections parameters applied during the measurement pre-processing, and the noise variances.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------------|--------|--|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of sub-blocks in this <code>MeasExtra</code> block. |
| SBLength | u1 | 1 byte | | Length of a sub-block |
| DopplerVarFactor | f4 | 1 Hz ² / cycle ² | | Factor to be used to compute the Doppler variance from the carrier phase variance. More specifically, the Doppler variance in mHz ² can be computed by: $\sigma_{\text{Doppler}}^2 [\text{mHz}^2] = \text{CarrierVariance} * \text{DopplerVarFactor},$ Where <code>CarrierVariance</code> can be found for each measurement type in the <code>MeasExtraChannelSub</code> sub-blocks. |
| ChannelSub | ... | ... | | A succession of <i>N</i> <code>MeasExtraChannelSub</code> sub-blocks, see definition below |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

MeasExtraChannelSub sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|------|-----------------------|------------|---|
| RxChannel | u1 | | | Receiver channel on which this satellite is currently tracked (see 4.1.11). |
| Type | u1 | | | Bit field indicating the signal type and antenna ID: Bits 0-4: SigIdxLo: if not 31, this is the signal number (see 4.1.10), otherwise the signal number can be found in the Misc field below. A value of 31 can only happen on block revision 3 or above. Bits 5-7: Antenna ID: 0 for main, 1 for Aux1 and 2 for Aux2 |
| MPCorrection | i2 | 0.001 m | | Multipath correction applied to the pseudorange. This number has to be added to the pseudorange to recover the raw pseudorange as it would be if multipath mitigation was not used. |
| SmoothingCorr | i2 | 0.001 m | | Smoothing correction applied to the pseudorange. This number has to be added to the pseudorange to recover the raw pseudorange as it would be if smoothing was disabled. |
| CodeVar | u2 | 0.0001 m ² | 65535 | Estimated code tracking noise variance. If the variance is larger than 65534 cm ² , it is clipped to 65534 cm ² . |
| CarrierVar | u2 | 1 mcycle ² | 65535 | Estimated carrier tracking noise variance. This value can be multiplied by DopplerVarFactor to compute the Doppler measurement variance. If the variance is larger than 65534 mcycles ² , it is clipped to 65534 mcycles ² . |
| LockTime | u2 | 1 s | 65535 | Duration of continuous carrier phase. The lock-time is reset at the initial lock after a signal (re)acquisition. If the lock-time is longer than 65534s, it is clipped to 65534s. If the carrier phase measurement is not available, this field is set to its Do-Not-Use value. |
| CumLossCont | u1 | | | Carrier phase cumulative loss-of-continuity counter (modulo 256) for the signal type, antenna and satellite this sub-block refers to. This counter starts at zero at receiver start-up, and is incremented at each initial lock after signal (re)acquisition, or when a cycle slip is detected. |
| CarMPCorr | i1 | 1.953125 mcycle | | Multipath correction applied to the carrier phase, in units of 1/512 cycles. This number has to be added to the carrier phase to recover the raw phase as it would be if multipath mitigation was not used. |
| Info | u1 | | | Bit field: Bits 0-3: Reserved. Bits 4-7: Reserved. |
| Misc | u1 | 0.03125 dB-Hz | | Bit field: Bits 0-2: CN0HighRes: high-resolution extension of the C/N0 (unsigned value from 0 to 7). The C/N0 value in the MeasEpoch SBF block has a resolution of 0.25dB-Hz. CN0HighRes can be used to extend the resolution to 0.03125dB-Hz. The high-resolution C/N0, in dB-Hz, is computed as follows: $C/N_{0,HighRes} = C/N_{0,MeasEpoch} + CN0HighRes * 0.03125.$ where $C/N_{0,MeasEpoch}$ is the C/N0 value coming from the MeasEpoch SBF block. Bits 3-7: If SigIdxLo from the Type field equals 31, these bits contain the signal number with an offset of 32 (see 4.1.10). Otherwise they are reserved. |

| | | | |
|---------|-------|--|--------------------------|
| Padding | u1[.] | | Padding bytes, see 4.1.5 |
|---------|-------|--|--------------------------|

| | |
|-------------|--|
| Meas3Ranges | Number: 4109 |
| | "OnChange" interval: internal measurement rate (receiver-type dependent) |

This block contains all the code, carrier phase and C/N0 observables at a given measurement epoch. The resolution is 0.001m, 0.001cycles and 1dB-Hz for the code, carrier and C/N0 measurements respectively.

Applications requiring Doppler measurements can log the `Meas3Doppler` SBF block in addition to the `Meas3Ranges` block. Applications requiring extended C/N0 resolution (1/16dB-Hz) can log the `Meas3CN0HiRes` SBF block in addition to the `Meas3Ranges` block.

The advantage of this block compared to the `MeasEpoch` SBF block is its reduced size while offering the full resolution for the code and carrier measurements. One of the techniques used to reduce the size is to only encode full measurements (reference epochs) every N epochs. Between these reference epochs, `Meas3Ranges` contains delta epochs where the difference between the current measurements and the ones at the applicable reference epoch is encoded. The decoder must have received and stored the applicable reference epoch to be able to decode delta epochs. When streaming SBF over an unreliable communication link, if the reference epoch is lost, subsequent `Meas3Ranges` blocks cannot be decoded until the next reference epoch is received. The interval at which reference epochs are encoded can be controlled with the `setMeas3MaxRefInterval` command. A longer interval generally reduces the average block size, at the expense of a longer data gap in case a reference epoch is lost.

See also page 238 for additional information.



The format of this block and of the other `Meas3` blocks is complex and is not provided here. Details can be obtained from Septentrio Support. The RxTools installation contains the complete source code of a decoder in C language, together with `sb2asc`, a small application showing how to use it. All C files can be found under the `sb2asc` folder in the RxTools installation. The main measurement decoding function is `sb2asc_ReadMeasCollectAndDecode()` in the `sb2asc_read_meas.c` file. Users interested in decoding the `Meas3` blocks are strongly advised to use the provided source code instead of writing their own decoder.

The detailed definition of this block is not available in this document.

| | |
|---------------|--|
| Meas3CN0HiRes | Number: 4110 "OnChange" interval: internal measurement rate (receiver-type dependent) |
|---------------|--|

The `Meas3CN0HiRes` block is an extension of the `Meas3Ranges` block containing the fractional part of the C/N0 values. The resolution of the C/N0 value in the `Meas3Ranges` SBF block is 1dB-Hz. Applications requiring a finer C/N0 resolution (0.0625dB-Hz) must log the `Meas3CN0HiRes` block together with the `Meas3Ranges` block.

The detailed definition of this block is not available in this document.

| | |
|--------------|--|
| Meas3Doppler | Number: 4111 "OnChange" interval: internal measurement rate (receiver-type dependent) |
|--------------|--|

The `Meas3Doppler` block is an extension of the `Meas3Ranges` block containing the range-rate (Doppler) values. Applications requiring range-rate or Doppler observables must log the `Meas3Doppler` block together with the `Meas3Ranges` block.

The detailed definition of this block is not available in this document.

| | |
|---------|--|
| Meas3PP | Number: 4112 |
| | "OnChange" interval: internal measurement rate (receiver-type dependent) |

The `Meas3PP` block is an extension of the `Meas3Ranges` block containing various Septentrio-proprietary flags and values needed for accurate post-processing or re-processing of the PVT from the measurements in the `Meas3Ranges` SBF block. This block must be logged together with `Meas3Ranges`.

The detailed definition of this block is not available in this document.

| | |
|---------|--|
| Meas3MP | Number: 4113 |
| | "OnChange" interval: internal measurement rate (receiver-type dependent) |

The `Meas3MP` block is an extension of the `Meas3Ranges` block containing the multipath correction applied by the receiver. It can be used for research purposes to undo the receiver multipath mitigation and revert to unmitigated data. This block must be logged together with `Meas3Ranges`.

The detailed definition of this block is not available in this document.

| | |
|-----------|--|
| EndOfMeas | Number: 5922 "OnChange" interval: internal measurement rate (receiver-type dependent) |
|-----------|--|

This block marks the end of the transmission of all measurement-related blocks belonging to a given epoch.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|------------|--------------------------------|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |

4.2.2 Navigation Page Blocks

| | |
|-----------|-------------------------|
| GPSTRawCA | Number: 4017 |
| | "OnChange" interval: 6s |

This block contains the 300 bits of a GPS C/A subframe. It is generated each time a new subframe is received, i.e. every 6 seconds.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Not applicable |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 bits of a GPS C/A subframe. Encoding: For easier parsing, the bits are stored as a succession of 10 32-bit words. Since the actual words in the subframe are 30-bit long, two unused bits are inserted in each 32-bit word. More specifically, each 32-bit word has the following format: Bits 0-5: 6 parity bits (referred to as D_{25} to D_{30} in the GPS ICD), XOR-ed with the last transmitted bit of the previous word (D_{30}^*). Bits 6-29: source data bits (referred to as d_n in the GPS ICD). The first received bit is the MSB. Bits 30-31: Reserved |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|------------|--|
| GPSTRawL2C | Number: 4018 "OnChange" interval: 12s |
|------------|--|

This block contains the 300 bits of a GPS L2C CNAV subframe (the so-called $D_c(t)$ data stream).

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the subframe |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 bits of a GPS CNAV subframe. Encoding: NAVBits contains all the bits of the frame, including the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[9] must be ignored by the decoding software. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|-------------------------|
| GPSTRawL5 | Number: 4019 |
| | "OnChange" interval: 6s |

This block contains the 300 bits of a GPS L5 CNAV subframe (the so-called $D_c(t)$ data stream).

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the subframe |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 bits of a GPS CNAV subframe. Encoding: NAVBits contains all the bits of the frame, including the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[9] must be ignored by the decoding software. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|----------|-------------------------|
| GLORawCA | Number: 4026 |
| | "OnChange" interval: 2s |

This block contains the 85 bits of a GLONASS L1CA or L2CA navigation string.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Not applicable |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| FreqNr | u1 | | | Frequency number, with an offset of 8. See 4.1.9 |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[3] | | | NAVBits contains the first 85 bits of a GLONASS C/A string (i.e. all bits of the string with the exception of the time mark). Encoding: The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[2] must be ignored by the decoding software. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------|--|
| GALRawFNAV | Number: 4022 "OnChange" interval: 10s |
|------------|--|

This block contains the 244 bits of a Galileo F/NAV navigation page, after deinterleaving and Viterbi decoding.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the page |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-6: Reserved Bit 7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[8] | | | NavBits contains the 244 bits of a Galileo F/NAV page. Encoding: NAVBits contains all the bits of the frame, with the exception of the synchronization field. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[7] must be ignored by the decoding software. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------|-------------------------|
| GALRawINAV | Number: 4023 |
| | "OnChange" interval: 2s |

This block contains the 234 bits of a Galileo I/NAV navigation page, after deinterleaving and Viterbi decoding.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the page |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bit 5: Set when the nav page is the concatenation of a sub-page received from E5b, and a sub-page received from L1BC. In that case, bits 0-4 are set to L1BC. Bit 6: Reserved Bit 7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[8] | | | NAVBits contains the 234 bits of an I/NAV navigation page (in nominal or alert mode). Note that the I/NAV page is transmitted as two sub-pages (the so-called even and odd pages) of duration 1 second each (120 bits each). In this block, the even and odd pages are concatenated, even page first and odd page last. The 6 tails bits at the end of the even page are removed (hence a total of 234 bits). If the even and odd pages have been received from two different carriers (E5b and L1), bit 5 of the Source field is set. Encoding: NAVBits contains all the bits of the frame, with the exception of the synchronization field. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[7] must be ignored by the decoding software. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------|---|
| GEORawL1 | Number: 4020 "OnChange" interval: 1s |
|----------|---|

This block contains the 250 bits of a SBAS L1 navigation frame, after Viterbi decoding.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the navigation frame |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[8] | | | NAVBits contains the 250 bits of a SBAS navigation frame. Encoding: NAVBits contains all the bits of the frame, including the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[7] must be ignored by the decoding software. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------|---|
| GEORawL5 | Number: 4021 "OnChange" interval: 1s |
|----------|---|

This block contains the 250 bits of a SBAS L5 navigation frame, after Viterbi decoding.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the navigation frame |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| FreqNr | u1 | | | Not applicable |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[8] | | | NAVBits contains the 250 bits of a SBAS navigation frame. Encoding: NAVBits contains all the bits of the frame, including the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[7] must be ignored by the decoding software. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|--------|---|
| BDSRaw | Number: 4047 |
| | "OnChange" interval: 6 seconds (non GEOs), 0.6 s (GEOs) |

This block contains the 300 bits of a BeiDou navigation page, as received from the B1I, B2I or B3I signal.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Not applicable |
| Source | u1 | | | Signal type from which the bits have been received, as defined in 4.1.10 |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 deinterleaved bits of a BeiDou navigation subframe. Encoding: NAVBits contains all the bits of the subframe, including the preamble and the parity bits. The first received bit is stored as the MSB of NAVBits[0]. The 20 unused bits in NAVBits[9] must be ignored by the decoding software. The bits are deinterleaved. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|--------------------------|
| BDSRawB1C | Number: 4218 |
| | "OnChange" interval: 18s |

This block contains the 1800 symbols of a BeiDou B-CNAV1 navigation frame (itself containing three subframes), as received from the B1C signal.

The symbols are deinterleaved. The receiver attempts to correct bit errors using the LDPC parity bits, but unrecoverable errors are still possible at low C/N0. It is therefore always needed to check the CRC status before using the navigation bits. A separate CRC check is provided for subframe 2 and 3.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCSF2 | u1 | | | Status of the CRC check of subframe 2: 0: failed 1: passed |
| CRCSF3 | u1 | | | Status of the CRC check of subframe 3: 0: failed 1: passed |
| Source | u1 | | | Signal type from which the bits have been received, as defined in 4.1.10 |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[57] | | | NAVBits contains the 1800 deinterleaved symbols of a BeiDou B1C (B-CNAV1) navigation frame. Encoding: NAVBits contains all the symbols of the frame. The first received symbol (i.e. the first symbol of subframe 1) is stored as the MSB of NAVBits[0]. The 24 unused bits in NAVBits[56] must be ignored by the decoding software. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|---|
| BDSRawB2a | Number: 4219 "OnChange" interval: 3s |
|-----------|---|

This block contains the 576 symbols of a BeiDou B-CNAV2 navigation frame, as received from the B2a signal.

The receiver attempts to correct bit errors using the LDPC parity bits, but unrecoverable errors are still possible at low C/N0. It is therefore always needed to check the CRC status before using the navigation bits.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Not applicable |
| Source | u1 | | | Signal type from which the bits have been received, as defined in 4.1.10 |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[18] | | | NAVBits contains the 576 symbols of a BeiDou B2a (B-CNAV2) navigation frame. Encoding: NAVBits contains all the symbols of the frame, excluding the preamble. The first received symbol (i.e. the MSB of the PRN field) is stored as the MSB of NAVBits[0]. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|------------|----------------------|------|
| QZSRawL1CA | Number: | 4066 |
| | "OnChange" interval: | 6s |

This block contains the 300 bits of a QZSS C/A subframe.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|---------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| Reserved | u1 | | | Reserved |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| Reserved2 | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 bits of a QZSS C/A subframe. Encoding: Same as GPSRawCA block. |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|--------------------------|
| QZSRawL2C | Number: 4067 |
| | "OnChange" interval: 12s |

This block contains the 300 bits of a QZSS L2C CNAV subframe.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the subframe |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 bits of a QZSS CNAV subframe. Encoding: NAVBits contains all the bits of the frame, including the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[9] must be ignored by the decoding software. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|----------|-------------------------|
| QZSRawL5 | Number: 4068 |
| | "OnChange" interval: 6s |

This block contains the 300 bits of a QZSS L5 CNAV subframe.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the subframe |
| Source | u1 | | | Bit field: Bits 0-4: Signal type from which the bits have been received, as defined in 4.1.10 Bits 5-7: Reserved |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NAVBits contains the 300 bits of a QZSS CNAV subframe. Encoding: NAVBits contains all the bits of the frame, including the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[9] must be ignored by the decoding software. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|----------|--------------------------|
| NAVICRaw | Number: 4093 |
| | "OnChange" interval: 12s |

This block contains the 292 bits of a NavIC/IRNSS subframe.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| CRCPassed | u1 | | | Status of the CRC or parity check: 0: CRC or parity check failed 1: CRC or parity check passed |
| ViterbiCnt | u1 | | | Viterbi decoder error count over the subframe |
| Source | u1 | | | Signal type from which the bits have been received, as defined in 4.1.10 |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| RxChannel | u1 | | | Receiver channel (see 4.1.11). |
| NAVBits | u4[10] | | | NavBits contains the 292 bits of a NavIC/IRNSS subframe. Encoding: NAVBits contains all the bits of the frame, with the exception of the preamble. The first received bit is stored as the MSB of NAVBits[0]. The unused bits in NAVBits[9] must be ignored by the decoding software. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

4.2.3 GPS Decoded Message Blocks

| | |
|---------|---|
| GPSTNav | Number: 5891 |
| | "OnChange" interval: block generated each time a new navigation data set is received from a GPS satellite |

The GPSTNav block contains the decoded navigation data for one GPS satellite. These data are conveyed in subframes 1 to 3 of the satellite navigation message. Refer to GPS ICD for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|----------------------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the GPS satellite of which the ephemeris is given in this block (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| WN | u2 | 1 week | 65535 | Week number (10 bits from subframe 1, word 3) |
| CAorPonL2 | u1 | | | Code(s) on L2 channel (2 bits from subframe 1, word 3) |
| URA | u1 | | | User Range accuracy index (4 bits from subframe 1 word 3) |
| health | u1 | | | 6-bit health from subframe 1, word 3 (6 bits from subframe 1, word 3) |
| L2DataFlag | u1 | | | Data flag for L2 P-code (1 bit from subframe 1, word 4) |
| IODC | u2 | | | Issue of data, clock (10 bits from subframe 1) |
| IODE2 | u1 | | | Issue of data, ephemeris (8 bits from subframe 2) |
| IODE3 | u1 | | | Issue of data, ephemeris (8 bits from subframe 3) |
| FitIntFlg | u1 | | | Curve Fit Interval, (1 bit from subframe 2, word 10) |
| Reserved2 | u1 | | | unused, to be ignored by decoding software |
| T_gd | f4 | 1 s | | Estimated group delay differential |
| t_oc | u4 | 1 s | | clock data reference time |
| a_f2 | f4 | 1 s / s ² | | SV clock aging |
| a_f1 | f4 | 1 s / s | | SV clock drift |
| a_f0 | f4 | 1 s | | SV clock bias |
| C_rs | f4 | 1 m | | Amplitude of the sine harmonic correction term to the orbit radius |
| DEL_N | f4 | 1 semi-circle / s | | Mean motion difference from computed value |
| M_0 | f8 | 1 semi-circle | | Mean anomaly at reference time |
| C_uc | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the argument of latitude |
| e | f8 | | | Eccentricity |
| C_us | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the argument of latitude |
| SQRT_A | f8 | 1 m ^{1/2} | | Square root of the semi-major axis |
| t_oe | u4 | 1 s | | Reference time ephemeris |

| | | | | |
|----------|-------|-------------------|--|--|
| C_ic | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the angle of inclination |
| OMEGA_0 | f8 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |
| C_is | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the angle of inclination |
| i_0 | f8 | 1 semi-circle | | Inclination angle at reference time |
| C_rc | f4 | 1 m | | Amplitude of the cosine harmonic correction term to the orbit radius |
| omega | f8 | 1 semi-circle | | Argument of perigee |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| IDOT | f4 | 1 semi-circle / s | | Rate of inclination angle |
| WNt_oc | u2 | 1 week | | WN associated with t_oc, modulo 1024 |
| WNt_oe | u2 | 1 week | | WN associated with t_oe, modulo 1024 |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|---------|--|
| GPSSAlm | Number: 5892 |
| | "OnChange" interval: block generated each time a new almanac data set is received from a GPS satellite |

The GPSSAlm block contains the decoded almanac data for one GPS satellite. These data are conveyed in subframes 4 and 5 of the satellite navigation message. Refer to GPS ICD for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|--------------------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the GPS satellite of which the almanac is given in this block (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| e | f4 | | | Eccentricity |
| t_oa | u4 | 1 s | | almanac reference time of week |
| delta_i | f4 | 1 semi-circle | | Inclination angle at reference time, relative to $i_0 = 0.3$ semi-circles |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| SQRT_A | f4 | 1 m ^{1/2} | | Square root of the semi-major axis |
| OMEGA_0 | f4 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |
| omega | f4 | 1 semi-circle | | Argument of perigee |
| M_0 | f4 | 1 semi-circle | | Mean anomaly at reference time |
| a_f1 | f4 | 1 s / s | | SV clock drift |
| a_f0 | f4 | 1 s | | SV clock bias |
| WN_a | u1 | 1 week | | Almanac reference week, to which t_oa is referenced |
| config | u1 | | | Anti-spoofing and satellite configuration (4 bits from subframe 4, page 25) |
| health8 | u1 | | | health on 8 bits from the almanac page |
| health6 | u1 | | | health summary on 6 bits (from subframe 4, page 25 and subframe 5 page 25) |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|---------|--|
| GPSTime | Number: 5893 |
| | "OnChange" interval: block generated each time subframe 4, page 18, is received from a GPS satellite |

The GPSTime block contains the decoded ionosphere data (the Klobuchar coefficients). These data are conveyed in subframes 4, page 18 of the satellite navigation message. Refer to GPS ICD for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|--------------------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the GPS satellite from which the coefficients have been received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| alpha_0 | f4 | 1 s | | vertical delay coefficient 0 |
| alpha_1 | f4 | 1 s / semi-circle | | vertical delay coefficient 1 |
| alpha_2 | f4 | 1 s / semi-circle ² | | vertical delay coefficient 2 |
| alpha_3 | f4 | 1 s / semi-circle ³ | | vertical delay coefficient 3 |
| beta_0 | f4 | 1 s | | model period coefficient 0 |
| beta_1 | f4 | 1 s / semi-circle | | model period coefficient 1 |
| beta_2 | f4 | 1 s / semi-circle ² | | model period coefficient 2 |
| beta_3 | f4 | 1 s / semi-circle ³ | | model period coefficient 3 |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|--------|--|
| GPSUTC | Number: 5894 |
| | "OnChange" interval: block generated each time subframe 4, page 18, is received from a GPS satellite |

The GPSUTC block contains the decoded UTC data. These data are conveyed in subframes 4, page 18 of the satellite navigation message. Refer to GPS ICD for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the GPS satellite from which these UTC parameters have been received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| A_1 | f4 | 1 s / s | | first order term of polynomial |
| A_0 | f8 | 1 s | | constant term of polynomial |
| t_ot | u4 | 1 s | | reference time for UTC data |
| WN_t | u1 | 1 week | | UTC reference week number, to which t_ot is referenced |
| DEL_t_LS | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is not in the past |
| WN_LSF | u1 | 1 week | | Effectivity time of leap second (week) |
| DN | u1 | 1 day | | Effectivity time of leap second (day, from 1 to 7) |
| DEL_t_LSF | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is in the past |

4.2.4 GLONASS Decoded Message Blocks

| | |
|--------|---|
| GLONav | Number: 4004 |
| | "OnChange" interval: block generated each time a new navigation data set is received from a GLONASS satellite |

The GLONav block contains the decoded ephemeris data for one GLONASS satellite.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|-------------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | ID of the GLONASS satellite for which ephemeris is provided in this block (see 4.1.9). |
| FreqNr | u1 | | | Frequency number of the GLONASS satellite for which ephemeris is provided in this block (see 4.1.9). |
| X | f8 | 1000 m | | x-component of satellite position in PZ-90.02 |
| Y | f8 | 1000 m | | y-component of satellite position in PZ-90.02 |
| Z | f8 | 1000 m | | z-component of satellite position in PZ-90.02 |
| Dx | f4 | 1000 m / s | | x-component of satellite velocity in PZ-90.02 |
| Dy | f4 | 1000 m / s | | y-component of satellite velocity in PZ-90.02 |
| Dz | f4 | 1000 m / s | | z-component of satellite velocity in PZ-90.02 |
| Ddx | f4 | 1000 m / s ² | | x-component of satellite acceleration in PZ-90.02 |
| Ddy | f4 | 1000 m / s ² | | y-component of satellite acceleration in PZ-90.02 |
| Ddz | f4 | 1000 m / s ² | | z-component of satellite acceleration in PZ-90.02 |
| gamma | f4 | 1 Hz / Hz | | $\gamma_n(t_b)$: relative deviation of predicted carrier frequency |
| tau | f4 | 1 s | | $\tau_n(t_b)$: time correction to GLONASS time |
| dtau | f4 | 1 s | | $\Delta\tau_n$: time difference between L2 and L1 sub-band |
| t_oe | u4 | 1 s | | reference time-of-week in GPS time frame |
| WN_toe | u2 | 1 week | | reference week number in GPS time frame (modulo 1024) |
| P1 | u1 | 1 minute | | time interval between adjacent values of t_b |
| P2 | u1 | | | 1-bit odd/even flag of t_b |
| E | u1 | 1 day | | age of data |
| B | u1 | | | 3-bit health flag, satellite unhealthy if MSB set |
| t_b | u2 | 1 minute | | time of day (center of validity interval) |
| M | u1 | | | 2-bit GLONASS-M satellite identifier (01, otherwise 00) |
| P | u1 | | | 2-bit mode of computation of time parameters |
| l | u1 | | | 1-bit health flag, 0=healthy, 1=unhealthy |
| P4 | u1 | | | 1-bit 'updated' flag of ephemeris data |
| N_T | u2 | 1 day | | current day number within 4-year interval |
| F_T | u2 | 0.01 m | | predicted user range accuracy at time t_b |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|--------|----------------------|---|
| GLOAlm | Number: | 4005 |
| | "OnChange" interval: | block generated each time a new almanac data set is received from a GLONASS satellite |

The GLOAlm block contains the decoded navigation data for one GLONASS satellite.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------------------------------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | ID of the GLONASS satellite for which almanac is provided in this block (see 4.1.9). |
| FreqNr | u1 | | | Frequency number of the GLONASS satellite for which almanac is provided in this block (see 4.1.9). This number corresponds to the H_n^A parameter in the GLONASS ICD. |
| epsilon | f4 | | | e_n^A : orbit eccentricity |
| t_oa | u4 | 1 s | | Reference time-of-week in GPS time frame |
| Delta_i | f4 | 1 semi-circle | | Δi_n^A : correction to inclination |
| lambda | f4 | 1 semi-circle | | λ_n^A : Longitude of first ascending node |
| t_ln | f4 | 1 s | | $t_{\lambda_n}^A$: time of first ascending node passage |
| omega | f4 | 1 semi-circle | | ω_n^A : argument of perigee |
| Delta_T | f4 | 1 s / orbit-period | | ΔT_n^A : correction to mean Draconian period |
| dDelta_T | f4 | 1 s / orbit-period ² | | $d\Delta T_n^A$: rate of change correction to mean Draconian period |
| tau | f4 | 1 s | | τ_n^A : coarse correction to satellite time |
| WN_a | u1 | 1 week | | Reference week in GPS time frame (modulo 256) |
| C | u1 | | | C_n^A : 1-bit general health flag (1 indicates healthy) |
| N | u2 | 1 day | | N^A : calendar day number within 4 year period |
| M | u1 | | | M_n^A : 2-bit GLONASS-M satellite identifier |
| N_4 | u1 | | | N_4 : 4 year interval number, starting from 1996 |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|---------|----------------------|---|
| GLOTime | Number: | 4036 |
| | "OnChange" interval: | block generated at the end of each GLONASS super-frame, i.e. every 2.5 minutes. |

The GLOTime block contains the decoded non-immediate data related to the difference between GLONASS and GPS, UTC and UT1 time scales.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|-------------------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | ID of the GLONASS satellite from which the data in this block has been decoded (see 4.1.9). |
| FreqNr | u1 | | | Frequency number of the GLONASS satellite from which the data in this block has been decoded (see 4.1.9). |
| N_4 | u1 | | | 4 year interval number, starting from 1996 |
| KP | u1 | | | notification of leap second |
| N | u2 | 1 day | | calendar day number within 4 year period |
| tau_GPS | f4 | $1 \cdot 10^9$ ns | | difference with respect to GPS time |
| tau_c | f8 | $1 \cdot 10^9$ ns | | GLONASS time scale correction to UTC(SU) |
| B1 | f4 | 1 s | | difference between UT1 and UTC(SU) |
| B2 | f4 | 1 s / msd | | daily change of B1 |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.5 Galileo Decoded Message Blocks

| | |
|--------|---|
| GALNav | Number: 4002 "OnChange" interval: output each time a new navigation data batch is decoded. |
|--------|---|

The GalNav block contains the following decoded navigation data for one Galileo satellite:

- orbital elements and clock corrections
- health, Signal-In-Space Accuracy (SISA) indexes and Broadcast Group Delays (BGDs) for each carrier or carrier combinations.

The interpretation of the clock correction parameters (t_{oc} , a_{f0} , a_{f1} , a_{f2}) depends on the value of the Source field:

| Source | Message type | Applicable Clock Model |
|--------|--------------|------------------------|
| 2 | I/NAV | (L1,E5b) |
| 16 | F/NAV | (L1,E5a) |

If the receiver is decoding both the I/NAV and the F/NAV data stream, it will output a GalNav block for the I/NAV stream, containing the (L1, E5b) clock model, and a different GalNav block for the F/NAV stream, containing the (L1, E5a) clock model.

Depending on the message type being decoded, some health, SISA or BGD values may not be available (in that case they are set to their respective Do-Not-Use values). The following health, SISA and BGD values are guaranteed to be available for a given value of the Source field:

| Source | Health, SISA and BGD availability |
|------------|---|
| 2 (I/NAV) | At least L1-B _{DVS} , L1-B _{HS} , E5b _{DVS} , E5b _{HS} , SISA_L1E5b and BGD_L1E5b are available |
| 16 (F/NAV) | At least E5a _{DVS} , E5a _{HS} , SISA_L1E5a and BGD_L1E5a are available |

The IODNav field identifies the issue of data. All orbital elements, clock parameters and SISA values in the block are guaranteed to refer to the same data batch identified by IODNav. The fields Health_OSSOL, BGD_L1E5a, BGD_L1E5b and CNAVenc are not covered by the issue of data, and the block simply contains the latest received value.

Please refer to the Galileo Signal-In-Space ICD for the interpretation and usage of the parameters contained in this SBF block.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | SVID of the Galileo satellite (see 4.1.9) |

| | | | | |
|--------------|----|----------------------|--|---|
| Source | u1 | | | See table above: this field indicates how to interpret the clock correction parameters. |
| SQRT_A | f8 | 1 m ^{1/2} | | Square root of the semi-major axis |
| M_0 | f8 | 1 semi-circle | | Mean anomaly at reference time |
| e | f8 | | | Eccentricity |
| i_0 | f8 | 1 semi-circle | | Inclination angle at reference time |
| omega | f8 | 1 semi-circle | | Argument of perigee |
| OMEGA_0 | f8 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| IDOT | f4 | 1 semi-circle / s | | Rate of inclination angle |
| DEL_N | f4 | 1 semi-circle / s | | Mean motion difference from computed value |
| C_uc | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the argument of latitude |
| C_us | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the argument of latitude |
| C_rc | f4 | 1 m | | Amplitude of the cosine harmonic correction term to the orbit radius |
| C_rs | f4 | 1 m | | Amplitude of the sine harmonic correction term to the orbit radius |
| C_ic | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the angle of inclination |
| C_is | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the angle of inclination |
| t_oe | u4 | 1 s | | Reference time, ephemeris |
| t_oc | u4 | 1 s | | Reference time, clock. The <i>Source</i> field indicates which clock model <i>t_oc</i> refers to. |
| a_f2 | f4 | 1 s / s ² | | SV clock aging. The <i>Source</i> field indicates which clock model <i>a_f2</i> refers to. |
| a_f1 | f4 | 1 s / s | | SV clock drift. The <i>Source</i> field indicates which clock model <i>a_f1</i> refers to. |
| a_f0 | f8 | 1 s | | SV clock bias. The <i>Source</i> field indicates which clock model <i>a_f0</i> refers to. |
| WNt_oe | u2 | 1 week | | WN associated with <i>t_oe</i> , in GPS time frame, modulo 4096 |
| WNt_oc | u2 | 1 week | | WN associated with <i>t_oc</i> , in GPS time frame, modulo 4096 |
| IODnav | u2 | | | Issue of data, navigation (10 bits) |
| Health_OSSOL | u2 | | | <p>Bit field indicating the last received Health Status (HS) and Data Validity Status (DVS) of the E5a, E5b and L1-B signals:</p> <p>Bit 0: If set, bits 1 to 3 are valid, otherwise they must be ignored.</p> <p>Bit 1: 1-bit L1-B_{DVS}</p> <p>Bits 2-3: 2-bit L1-B_{HS}</p> <p>Bit 4: If set, bits 5 to 7 are valid, otherwise they must be ignored.</p> <p>Bit 5: 1-bit E5b_{DVS}</p> <p>Bits 6-7: 2-bit E5b_{HS}</p> <p>Bit 8: If set, bits 9 to 11 are valid, otherwise they must be ignored.</p> <p>Bit 9: 1-bit E5a_{DVS}</p> <p>Bits 10-11: 2-bit E5a_{HS}</p> <p>Bits 12-15: Reserved</p> |
| Health_PRS | u1 | | | Reserved |

| | | | | |
|-------------|----|-----|--------------------|---|
| SISA_L1E5a | u1 | | 255 | Signal-In-Space Accuracy Index (L1, E5a) |
| SISA_L1E5b | u1 | | 255 | Signal-In-Space Accuracy Index (L1, E5b) |
| SISA_L1AE6A | u1 | | 255 | Reserved |
| BGD_L1E5a | f4 | 1 s | $-2 \cdot 10^{10}$ | Last received broadcast group delay (L1, E5a) |
| BGD_L1E5b | f4 | 1 s | $-2 \cdot 10^{10}$ | Last received broadcast group delay (L1, E5b) |
| BGD_L1AE6A | f4 | 1 s | $-2 \cdot 10^{10}$ | Reserved |
| CNAVenc | u1 | | 255 | 2-bit C/NAV encryption status. |

| | | |
|--------|----------------------|---|
| GALAlm | Number: | 4003 |
| | "OnChange" interval: | output each time a new almanac set is received for a satellite. |

The GalAlm block contains the decoded almanac data for one Galileo satellite.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|--------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | SVID of the Galileo satellite from which these almanac parameters have been received (see 4.1.9) |
| Source | u1 | | | See corresponding field in the GalNav block. Source can take the value 18 to indicate that the almanac data contained in this block has been merged from INAV and FNAV pages. |
| e | f4 | | | Eccentricity |
| t_oa | u4 | 1 s | | almanac reference time of week |
| delta_i | f4 | 1 semi-circle | | Inclination angle at reference time, relative to nominal |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| SQRT_A | f4 | 1 m ^{1/2} | | Square root of the semi-major axis, relative to nominal |
| OMEGA_0 | f4 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |
| omega | f4 | 1 semi-circle | | Argument of perigee |
| M_0 | f4 | 1 semi-circle | | Mean anomaly at reference time |
| a_f1 | f4 | 1 s / s | | SV clock drift |
| a_f0 | f4 | 1 s | | SV clock bias |
| WN_a | u1 | 1 week | | 2-bit almanac reference week |
| SVID_A | u1 | | | SVID of the Galileo satellite of which the almanac parameters are provided in this block (see 4.1.9 for the SVID numbering convention). |
| health | u2 | | | Bit field indicating the health status (HS) of the E5a, E5b, L1-B, L1-A and E6-A signals: Bit 0: If set, bits 1 and 2 are valid, otherwise they must be ignored. Bits 1-2: 2-bit L1-B _{HS} Bit 3: If set, bits 4 and 5 are valid, otherwise they must be ignored. Bits 4-5: 2-bit E5b _{HS} Bit 6: If set, bits 7 and 8 are valid, otherwise they must be ignored. Bits 7-8: 2-bit E5a _{HS} Bit 9: Not applicable Bits 10-11: Not applicable Bit 12: Not applicable Bits 13-14: Not applicable Bit 15: Reserved |

| | | | | |
|------|----|--|--|--------------------------------------|
| IODa | u1 | | | 4-bit Issue of Data for the almanac. |
|------|----|--|--|--------------------------------------|

| | |
|--------|---|
| GALIon | Number: 4030 |
| | "OnChange" interval: output each time the ionospheric parameters are received from a Galileo satellite. |

The GalIon block contains the decoded ionosphere model parameters of the Galileo system.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|---|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | SVID of the Galileo satellite from which these parameters have been received (see 4.1.9) |
| Source | u1 | | | Message type from which the data has been decoded: 2: I/NAV 16: F/NAV |
| a_i0 | f4 | $1 \cdot 10^{-22} \text{ W / (m}^2 \text{ Hz)}$ | | Effective ionization level, a_{i0} |
| a_i1 | f4 | $1 \cdot 10^{-22} \text{ W / (m}^2 \text{ Hz) / deg}$ | | Effective ionization level, a_{i1} |
| a_i2 | f4 | $1 \cdot 10^{-22} \text{ W / (m}^2 \text{ Hz) / deg}^2$ | | Effective ionization level, a_{i2} |
| StormFlags | u1 | | | Bit field containing the five ionospheric storm flags: Bit 0: SF5 Bit 1: SF4 Bit 2: SF3 Bit 3: SF2 Bit 4: SF1 Bits 5-7: Reserved |

| | |
|--------|--|
| GALUTC | Number: 4031 |
| | "OnChange" interval: output each time the UTC offset parameters are received from a Galileo satellite. |

The GalUTC block contains the decoded UTC parameter information.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | SVID of the Galileo satellite from which these parameters have been received (see 4.1.9) |
| Source | u1 | | | Message type from which the data has been decoded: 2: I/NAV 16: F/NAV |
| A_1 | f4 | 1 s / s | $-2 \cdot 10^{10}$ | first order term of polynomial |
| A_0 | f8 | 1 s | $-2 \cdot 10^{10}$ | constant term of polynomial |
| t_ot | u4 | 1 s | | reference time of week for UTC data |
| WN_ot | u1 | 1 week | | UTC reference week number, to which t_ot is referenced |
| DEL_t_LS | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is not in the past |
| WN_LSF | u1 | 1 week | | Effectivity time of leap second (week) |
| DN | u1 | 1 day | | Effectivity time of leap second (day, from 1 to 7) |
| DEL_t_LSF | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is in the past |

| | | |
|-----------|----------------------|---|
| GALGstGps | Number: | 4032 |
| | "OnChange" interval: | output each time valid GST-GPS offset parameters are received from a Galileo satellite. |

This block contains the decoded GPS to Galileo System Time offset parameters. This block is only output if these parameters are valid in the navigation page (i.e. if they are not set to "all ones").

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|-----------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | SVID of the Galileo satellite from which these parameters have been received (see 4.1.9) |
| Source | u1 | | | Message type from which the data has been decoded: 2: I/NAV 16: F/NAV |
| A_1G | f4 | $1 \cdot 10^9$ ns / s | | Rate of change of the offset |
| A_0G | f4 | $1 \cdot 10^9$ ns | | Constant term of the offset |
| t_oG | u4 | 1 s | | Reference time of week |
| WN_oG | u1 | 1 week | | 6-bit reference week number. |

| | | |
|-----------|----------------------|---|
| GALSARRLM | Number: | 4034 |
| | "OnChange" interval: | generated each time a SAR RLM message is decoded. |

This block contains a decoded Galileo search-and-rescue (SAR) return link message (RLM).

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SVID | u1 | | | SVID of the Galileo satellite from which this RLM has been received. |
| Source | u1 | | | Message type from which the data has been decoded: 2: I/NAV 16: F/NAV |
| RLMLength | u1 | | | Length of the RLM message in bits. <code>RLMLength</code> can be either 80 for a short message or 160 for a long message. |
| Reserved | u1[3] | | | Reserved for future use, to be ignored by decoding software |
| RLMbits | u4[N] | | | Bits in the RLM message, with the first bit being the MSB of <code>RLMbits[0]</code> . <i>N</i> is 3 for a short message (i.e. if <code>RLMLength</code> is 80), and 5 for a long message (i.e. if <code>RLMLength</code> is 160). The 16 unused bits of a short message are set to 0. These bits correspond to the 16 LSBs of <code>RLMbits[2]</code> . |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.6 BeiDou Decoded Message Blocks

| | |
|--------|--|
| BDSNav | Number: 4081 |
| | "OnChange" interval: block generated each time a new navigation data set is received from a BeiDou satellite |

The BDSNav block contains the decoded navigation data for one BeiDou satellite, as received from the D1 or D2 nav message.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|----------------------------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the BeiDou satellite of which the ephemeris is given in this block (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| WN | u2 | 1 week | | BeiDou week number as received from the navigation message (from 0 to 8191) |
| URA | u1 | | | User range accuracy index (4-bit value) |
| SatH1 | u1 | | | 1-bit autonomous health |
| IODC | u1 | | | Age of data, clock (5 bits) |
| IODE | u1 | | | Age of data, ephemeris (5 bits) |
| Reserved2 | u2 | | | unused, to be ignored by decoding software |
| T_GD1 | f4 | 1 s | | B1I equipment group delay differential |
| T_GD2 | f4 | 1 s | $-2 \cdot 10^{10}$ | B2I equipment group delay differential (set to the Do-Not-Use value when unknown) |
| t_oc | u4 | 1 s | | clock data reference time, in BeiDou system time (lagging GPS time by 14 seconds). |
| a_f2 | f4 | $1 \text{ s} / \text{s}^2$ | | SV clock aging |
| a_f1 | f4 | $1 \text{ s} / \text{s}$ | | SV clock drift |
| a_f0 | f4 | 1 s | | SV clock bias |
| C_rs | f4 | 1 m | | Amplitude of the sine harmonic correction term to the orbit radius |
| DEL_N | f4 | 1 semi-circle / s | | Mean motion difference from computed value |
| M_0 | f8 | 1 semi-circle | | Mean anomaly at reference time |
| C_uc | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the argument of latitude |
| e | f8 | | | Eccentricity |
| C_us | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the argument of latitude |
| SQRT_A | f8 | $1 \text{ m}^{1/2}$ | | Square root of the semi-major axis |
| t_oe | u4 | 1 s | | Reference time ephemeris, in BeiDou system time (lagging GPS time by 14 seconds). |
| C_ic | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the angle of inclination |
| OMEGA_0 | f8 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |

| | | | | |
|----------|-------|-------------------|--|--|
| C_is | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the angle of inclination |
| i_0 | f8 | 1 semi-circle | | Inclination angle at reference time |
| C_rc | f4 | 1 m | | Amplitude of the cosine harmonic correction term to the orbit radius |
| omega | f8 | 1 semi-circle | | Argument of perigee |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| IDOT | f4 | 1 semi-circle / s | | Rate of inclination angle |
| WNt_oc | u2 | 1 week | | BeiDou week number associated with t_oc, modulo 8192. Note that this value relates to the BeiDou system time. |
| WNt_oe | u2 | 1 week | | BeiDou week number associated with t_oe, modulo 8192. Note that this values relates to the BeiDou system time. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|--------|----------------------|--|
| BDSAlm | Number: | 4119 |
| | "OnChange" interval: | block generated each time a new almanac data set is received from a BeiDou satellite |

The BDSAlm block contains the decoded almanac data for one BeiDou satellite.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|--------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the BeiDou satellite of which the almanac is given in this block (see 4.1.9) |
| WN_a | u1 | 1 week | | Almanac week number |
| t_oa | u4 | 1 s | | Almanac reference time |
| SQRT_A | f4 | 1 m ^{1/2} | | Square root of the semi-major axis |
| e | f4 | | | Eccentricity |
| omega | f4 | 1 semi-circle | | Argument of perigee |
| M_0 | f4 | 1 semi-circle | | Mean anomaly at reference time |
| OMEGA_0 | f4 | 1 semi-circle | | Longitude of ascending node of orbital plane computed according to reference time |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| delta_i | f4 | 1 semi-circle | | Correction of orbit reference inclination at reference time |
| a_f0 | f4 | 1 s | | Satellite clock bias |
| a_f1 | f4 | 1 s / s | | Satellite clock drift |
| Health | u2 | | | Satellite health information (9 bits) |
| Reserved | u1[2] | | | Reserved for future use, to be ignored by decoding software |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|--------|---|
| BDSIon | Number: 4120 |
| | "OnChange" interval: output each time the ionospheric parameters are received from a BeiDou satellite |

The BDSIon block contains the BeiDou ionosphere data (the Klobuchar coefficients), as received from the D1 or D2 nav message.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|--------------------------------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the BeiDou satellite from which the coefficients have been received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| alpha_0 | f4 | 1 s | | vertical delay coefficient 0 |
| alpha_1 | f4 | 1 s / semi-circle | | vertical delay coefficient 1 |
| alpha_2 | f4 | 1 s / semi-circle ² | | vertical delay coefficient 2 |
| alpha_3 | f4 | 1 s / semi-circle ³ | | vertical delay coefficient 3 |
| beta_0 | f4 | 1 s | | model period coefficient 0 |
| beta_1 | f4 | 1 s / semi-circle | | model period coefficient 1 |
| beta_2 | f4 | 1 s / semi-circle ² | | model period coefficient 2 |
| beta_3 | f4 | 1 s / semi-circle ³ | | model period coefficient 3 |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|--------|--|
| BDSUTC | Number: 4121 |
| | "OnChange" interval: output each time the UTC offset parameters are received from a BeiDou satellite |

The BDSUTC block contains the BeiDou UTC data, as received from the D1 or D2 nav message.

Note that BDT (BeiDou time) started on January 1st, 2006 (GPS week 1356). Therefore the delta time between BDT and UTC due to leap seconds is 14 less than the value in GPSUTC.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the BeiDou satellite from which the coefficients have been received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| A_1 | f4 | 1 s / s | | first order term of polynomial |
| A_0 | f8 | 1 s | | constant term of polynomial |
| DEL_t_LS | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is not in the past |
| WN_LSF | u1 | 1 week | | Effectivity time of leap second (week) |
| DN | u1 | 1 day | | Effectivity time of leap second (day, from 0 to 6) |
| DEL_t_LSF | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is in the past |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.7 QZSS Decoded Message Blocks

| | |
|--------|--|
| QZSNav | Number: 4095 |
| | "OnChange" interval: block generated each time a new navigation data set is received from a QZSS satellite |

The QZSNav block contains the decoded navigation data for one QZSS satellite. The data is decoded from the navigation message transmitted in the L1 C/A signal. Refer to the QZSS ICD for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------------|------|----------------------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the QZSS satellite of which the ephemeris is given in this block (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| WN | u2 | 1 week | 65535 | Week number (10 bits from subframe 1, word 3) |
| CAorPonL2 | u1 | | | Code(s) on L2 channel (2 bits from subframe 1, word 3). Always 2 for QZSS satellites. |
| URA | u1 | | | User Range accuracy index (4 bits from subframe 1 word 3) |
| health | u1 | | | 6-bit health from subframe 1, word 3 (6 bits from subframe 1, word 3) |
| L2DataFlag | u1 | | | Data flag for L2 P-code (1 bit from subframe 1, word 4). Always 1 for QZSS satellites. |
| IODC | u2 | | | Issue of data, clock (10 bits from subframe 1) |
| IODE2 | u1 | | | Issue of data, ephemeris (8 bits from subframe 2) |
| IODE3 | u1 | | | Issue of data, ephemeris (8 bits from subframe 3) |
| FitIntFlg | u1 | | | Curve Fit Interval, (1 bit from subframe 2, word 10) |
| Reserved2 | u1 | | | unused, to be ignored by decoding software |
| T _{gd} | f4 | 1 s | $-2 \cdot 10^{10}$ | Estimated group delay differential |
| t _{oc} | u4 | 1 s | | clock data reference time |
| a _{f2} | f4 | 1 s / s ² | | SV clock aging |
| a _{f1} | f4 | 1 s / s | | SV clock drift |
| a _{f0} | f4 | 1 s | | SV clock bias |
| C _{rs} | f4 | 1 m | | Amplitude of the sine harmonic correction term to the orbit radius |
| DEL _N | f4 | 1 semi-circle / s | | Mean motion difference from computed value |
| M ₀ | f8 | 1 semi-circle | | Mean anomaly at reference time |
| C _{uc} | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the argument of latitude |
| e | f8 | | | Eccentricity |
| C _{us} | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the argument of latitude |
| SQRT _A | f8 | 1 m ^{1/2} | | Square root of the semi-major axis |

| | | | | |
|----------|-------|-------------------|--|--|
| t_oe | u4 | 1 s | | Reference time ephemeris |
| C_ic | f4 | 1 rad | | Amplitude of the cosine harmonic correction term to the angle of inclination |
| OMEGA_0 | f8 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |
| C_is | f4 | 1 rad | | Amplitude of the sine harmonic correction term to the angle of inclination |
| i_0 | f8 | 1 semi-circle | | Inclination angle at reference time |
| C_rc | f4 | 1 m | | Amplitude of the cosine harmonic correction term to the orbit radius |
| omega | f8 | 1 semi-circle | | Argument of perigee |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| IDOT | f4 | 1 semi-circle / s | | Rate of inclination angle |
| WNt_oc | u2 | 1 week | | WN associated with t_oc, modulo 1024 |
| WNt_oe | u2 | 1 week | | WN associated with t_oe, modulo 1024 |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|--------|----------------------|--|
| QZSA1m | Number: | 4116 |
| | "OnChange" interval: | block generated each time a new almanac data set is received from a QZSS satellite |

The QZSA1m block contains the decoded almanac data for one QZSS satellite. These data are conveyed in subframes 4 and 5 of the satellite navigation message. Refer to QZSS ICD for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|--------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the QZSS satellite of which the almanac is given in this block (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| e | f4 | | | Difference from reference eccentricity |
| t_oa | u4 | 1 s | | almanac reference time of week |
| delta_i | f4 | 1 semi-circle | | Difference from reference angle of inclination |
| OMEGADOT | f4 | 1 semi-circle / s | | Rate of right ascension |
| SQRT_A | f4 | 1 m ^{1/2} | | Square root of the semi-major axis |
| OMEGA_0 | f4 | 1 semi-circle | | Longitude of ascending node of orbit plane at weekly epoch |
| omega | f4 | 1 semi-circle | | Argument of perigee |
| M_0 | f4 | 1 semi-circle | | Mean anomaly at reference time |
| a_f1 | f4 | 1 s / s | | SV clock drift |
| a_f0 | f4 | 1 s | | SV clock bias |
| WN_a | u1 | 1 week | | Almanac reference week, to which t_oa is referenced |
| Reserved2 | u1 | | | Reserved for future use, to be ignored by decoding software |
| health8 | u1 | | | health on 8 bits from the almanac page |
| health6 | u1 | | | health summary on 6 bits (from subframe 4, page 25 and subframe 5 page 25) |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.8 SBAS L1 Decoded Message Blocks

| | | |
|---------|----------------------|---|
| GEOMT00 | Number: | 5925 |
| | "OnChange" interval: | block generated each time an empty MT00 is received from an SBAS satellite on the L1 signal |

This block is sent to indicate that an empty SBAS message type 0 has been received.

Depending on the SBAS operational mode, message type 0 can contain the contents of message type 2. Upon reception of a message type 0, the receiver checks whether the message is empty (it contains only 0's) or whether it contains the message type 2 contents. In the former case, a `GEOMT00` block will be generated. In the latter case, a `GEOFastCorr` block will be generated. Refer to section A.4.4.1 of the DO 229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |

| | | |
|------------|----------------------|---|
| GEOPRNMAsk | Number: | 5926 |
| | "OnChange" interval: | block generated each time MT01 is received from an SBAS satellite |

This block contains the decoded PRN mask transmitted in SBAS message type 1. Refer to section A.4.4.2 of the DO 229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| IODP | u1 | | | Issue of data - PRN. |
| NbrPRNs | u1 | | | Number of PRNs designated in the mask. |
| PRNMask | u1[NbrPRNs] | | | List of the PRNs in the PRN mask. PRNMask[0] is the first PRN designated in the PRN mask (from 1 to 210), PRNMask[1] is the 2 nd PRN designated in the PRN mask, etc... |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|-------------|--|
| GEOFastCorr | Number: 5927 "OnChange" interval: block generated each time MT02, MT03, MT04, MT05, MT24 and possibly MT00 is received from an SBAS satellite |
|-------------|--|

This block contains the decoded fast corrections transmitted in the SBAS message types 2, 3, 4, 5, 24 and possibly 0 if the type 0 message contains the type 2 contents. Refer to section A.4.4.3 and A.4.4.8 of the DO 229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description | | | | | | | | |
|------------------------|---------|---------|------------|--|--------------|---|------------------------|----|------|----|------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 | | | | | | | | |
| Sync2 | c1 | | | | | | | | | | | |
| CRC | u2 | | | | | | | | | | | |
| ID | u2 | | | | | | | | | | | |
| Length | u2 | 1 byte | | | | | | | | | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 | | | | | | | | |
| WNc | u2 | 1 week | 65535 | | | | | | | | | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) | | | | | | | | |
| MT | u1 | | | Message type from which these fast corrections come, either 0, 2, 3, 4, 5 or 24. | | | | | | | | |
| IODP | u1 | | | Issue of data - PRN. | | | | | | | | |
| IODF | u1 | | | Issue of data - fast corrections. | | | | | | | | |
| N | u1 | | | Number of fast correction sets in this message. This is the number of <i>FastCorr</i> sub-blocks. N depends on the message type as follows. <div><table><tr><th>Message type</th><th>N</th></tr><tr><td>MT00, MT02, MT03, MT04</td><td>13</td></tr><tr><td>MT05</td><td>12</td></tr><tr><td>MT24</td><td>6</td></tr></table></div> | Message type | N | MT00, MT02, MT03, MT04 | 13 | MT05 | 12 | MT24 | 6 |
| Message type | N | | | | | | | | | | | |
| MT00, MT02, MT03, MT04 | 13 | | | | | | | | | | | |
| MT05 | 12 | | | | | | | | | | | |
| MT24 | 6 | | | | | | | | | | | |
| SBLength | u1 | | | Length of the <i>FastCorr</i> sub-blocks in bytes | | | | | | | | |
| <i>FastCorr</i> | ... | ... | | <i>A succession of N FastCorr sub-blocks, see definition below</i> | | | | | | | | |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 | | | | | | | | |

FastCorr sub-block definition:

| Parameter | Type | Units | Description |
|-----------|-------|-------|---|
| PRNMaskNo | u1 | | Sequence number in the PRN mask. This field may be set to zero. In that case, all following fields in this sub-block must be discarded. |
| UDREI | u1 | | User Differential Range Error Indicator for the PRN at index <i>PRNMaskNo</i> . |
| Reserved | u1[2] | | Reserved for future use, to be ignored by decoding software |
| PRC | f4 | 1 m | Pseudorange correction for the PRN at index <i>PRNMaskNo</i> . |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|--------------|--|
| GEOIntegrity | Number: 5928 |
| | "OnChange" interval: block generated each time MT06 is received from an SBAS satellite |

This block contains the decoded integrity information transmitted in SBAS message type 6. Refer to section A.4.4.4 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| IODF | u1[4] | | | Issue of data - fast corrections for MT02, MT03, MT04 and MT05. |
| UDREI | u1[51] | | | User Differential Range Error Indicator for each of the 51 slots in the PRN mask. |

| | | |
|-----------------|----------------------|---|
| GEOFastCorrDegr | Number: | 5929 |
| | "OnChange" interval: | block generated each time MT07 is received from an SBAS satellite |

This block contains the decoded fast correction degradation factors transmitted in SBAS message type 7. Refer to section A.4.4.5 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| IODP | u1 | | | Issue of data - PRN. |
| t_lat | u1 | 1 s | | System latency. |
| ai | u1[51] | | | Degradation factor indicator (from 0 to 15) for each of the 51 slots in the PRN mask. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|--------|--|
| GEONav | Number: 5896 |
| | "OnChange" interval: block generated each time MT09 is received from an SBAS satellite |

This block contains the decoded navigation data transmitted in SBAS message type 9. Refer to section A.4.4.11 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|----------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite of which the navigation data is provided here (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| IODN | u2 | | | Issue of data - navigation (DO 229-B) Spare (DO 229-C) |
| URA | u2 | | | Accuracy exponent |
| t0 | u4 | 1 s | | Time of applicability (time-of-day) |
| Xg | f8 | 1 m | | X position at time-of-day t0 |
| Yg | f8 | 1 m | | Y position at time-of-day t0 |
| Zg | f8 | 1 m | | Z position at time-of-day t0 |
| Xgd | f8 | 1 m / s | | X velocity at time-of-day t0 |
| Ygd | f8 | 1 m / s | | Y velocity at time-of-day t0 |
| Zgd | f8 | 1 m / s | | Z velocity at time-of-day t0 |
| Xgdd | f8 | 1 m / s ² | | X acceleration at time-of-day t0 |
| Ygdd | f8 | 1 m / s ² | | Y acceleration at time-of-day t0 |
| Zgdd | f8 | 1 m / s ² | | Z acceleration at time-of-day t0 |
| aGf0 | f4 | 1 s | | Time offset with respect to SBAS network time |
| aGf1 | f4 | 1 s / s | | Time drift with respect to SBAS network time |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------|--|
| GEODegrFactors | Number: 5930 |
| | "OnChange" interval: block generated each time MT10 is received from an SBAS satellite |

This block contains the decoded degradation factors transmitted in SBAS message type 10. Refer to section A.4.5 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| Brrc | f8 | 1 m | | A parameter associated with the relative estimation noise and round-off error. |
| Cltc_lsb | f8 | 1 m | | Maximum round-off error due to the LSB resolution of the orbit and clock information. |
| Cltc_v1 | f8 | 1 m / s | | Velocity error bound on the maximum range rate difference of missed messages due to clock and orbit rate differences. |
| Iltc_v1 | u4 | 1 s | | Update interval for long term corrections when the velocity code is 1. |
| Cltc_v0 | f8 | 1 m | | Bound on the update delta between successive long term corrections. |
| Iltc_v0 | u4 | 1 s | | Minimum update interval for long term messages when the velocity code is 0. |
| Cgeo_lsb | f8 | 1 m | | Maximum round-off error due to the LSB resolution of the orbit and clock information. |
| Cgeo_v | f8 | 1 m / s | | Velocity error bound on the maximum range rate difference of missed messages due to clock and orbit rate differences. |
| Igeo | u4 | 1 s | | Update interval for GEO navigation messages. |
| Cer | f4 | 1 m | | A degradation parameter. |
| Ciono_step | f8 | 1 m | | Bound on the difference between successive ionospheric grid delay values. |
| Iiono | u4 | 1 s | | Minimum update interval for ionospheric correction messages. |
| Ciono_ramp | f8 | 1 m / s | | Rate of change of the ionospheric corrections. |
| RSSudre | u1 | | | Root-sum-square flag (UDRE) |
| RSSiono | u1 | | | Root-sum-square flag (IONO) |
| Reserved2 | u1[2] | | | Reserved for future use, to be ignored by decoding software |
| Ccovariance | f8 | | | A parameter used to compensate for the errors introduced by quantization (introduced in DO 229-C). To be multiplied by the SF parameter from the GEOClockEphCovMatrix block. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------|--|
| GEONetworkTime | Number: 5918 |
| | "OnChange" interval: block generated each time MT12 is received from an SBAS satellite |

This block contains the decoded network time offset parameters transmitted in SBAS message type 12. Refer to section A.4.4.15 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which this Network Time data was received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| A_1 | f4 | 1 s / s | | first order term of polynomial |
| A_0 | f8 | 1 s | | constant term of polynomial |
| t_ot | u4 | 1 s | | reference time for UTC data (time of week) |
| WN_t | u1 | 1 week | | UTC reference week number, to which t_ot is referenced |
| DEL_t_LS | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is not in the past |
| WN_LSF | u1 | 1 week | | Effectivity time of leap second (week) |
| DN | u1 | 1 day | | Effectivity time of leap second (day) |
| DEL_t_LSF | i1 | 1 s | | Delta time due to leap seconds whenever the effectivity time is in the past |
| UTC_std | u1 | | | UTC Standard Identifier |
| GPS_WN | u2 | 1 week | | GPS week number (modulo 1024) |
| GPS_TOW | u4 | 1 s | | GPS time-of-week |
| GlonassID | u1 | | | Glonass Indicator |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|--------|----------------------|---|
| GEOAlm | Number: | 5897 |
| | "OnChange" interval: | block generated each time MT17 is received from an SBAS satellite |

This block contains the decoded almanac data for one SBAS satellite, as transmitted in SBAS message type 17. A different GEOAlm block is generated for each of the up to three almanac data sets in MT17. Refer to section A.4.4.12 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite of which the almanac is provided here (see 4.1.9) |
| Reserved0 | u1 | | | Reserved for future use, to be ignored by decoding software |
| DataID | u1 | | | Data ID |
| Reserved1 | u1 | | | Reserved for future use, to be ignored by decoding software |
| Health | u2 | | | Health bits |
| t_oa | u4 | 1 s | | Time of applicability with the day ambiguity resolved. This is the time in GPS seconds from Jan 6th, 1980. |
| Xg | f8 | 1 m | | X position at t_oa |
| Yg | f8 | 1 m | | Y position at t_oa |
| Zg | f8 | 1 m | | Z position at t_oa |
| Xgd | f8 | 1 m / s | | X velocity at t_oa |
| Ygd | f8 | 1 m / s | | Y velocity at t_oa |
| Zgd | f8 | 1 m / s | | Z velocity at t_oa |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------|--|
| GEOIGPMask | Number: 5931 "OnChange" interval: block generated each time MT18 is received from an SBAS satellite |
|------------|--|

This block contains the decoded ionospheric grid point mask transmitted in SBAS message type 18. Refer to section A.4.4.9 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| NbrBands | u1 | | | Number of bands being broadcast. |
| BandNbr | u1 | | | Band number. |
| IODI | u1 | | | Issue of data - ionosphere. |
| NbrIGPs | u1 | | | Number of ionospheric grid points (IGP) designated in the mask. |
| IGPMask | u1[NbrIGPs] | | | List of the IGPs in the IGP mask. IGPMask [0] is the first IGP designated in the IGP mask (from 1 to 201), IGPMask [1] is the 2 nd IGP designated in the IGP mask, etc... |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 |

| | | |
|-----------------|----------------------|---|
| GEOLongTermCorr | Number: | 5932 |
| | "OnChange" interval: | block generated each time MT24 or MT25 is received from an SBAS satellite |

This block contains the decoded long term corrections transmitted in SBAS message types 24 and 25. Refer to section A.4.4.7 and A.4.4.8 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| N | u1 | | | Number of long-term corrections in this message. This is the number of <code>LTCorr</code> sub-blocks. <code>N</code> can be 0, 1, 2, 3 or 4. |
| SBLength | u1 | 1 byte | | Length of the <code>LTCorr</code> sub-blocks in bytes |
| Reserved | u1[3] | | | Reserved for future use, to be ignored by decoding software |
| <i>LTCorr</i> | ... | ... | | <i>A succession of <code>N</code> <code>LTCorr</code> sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

`LTCorr` sub-block definition:

| Parameter | Type | Units | Description |
|--------------|-------|---------|--|
| VelocityCode | u1 | | Velocity code (0 or 1) |
| PRNMaskNo | u1 | | Sequence in the PRN mask, from 1 to 51. Note that if the PRN mask No. from the original message is 0, the corresponding long term corrections are ignored, and hence not included in the <code>GEOLongTermCorr</code> block. |
| IODP | u1 | | Issue of data - PRN. |
| IODE | u1 | | Issue of data - ephemeris. |
| dx | f4 | 1 m | Satellite position offset (x). |
| dy | f4 | 1 m | Satellite position offset (y). |
| dz | f4 | 1 m | Satellite position offset (z). |
| dxRate | f4 | 1 m / s | Satellite velocity offset (x), or 0.0 if <code>VelocityCode</code> is 0. |
| dyRate | f4 | 1 m / s | Satellite velocity offset (y), or 0.0 if <code>VelocityCode</code> is 0. |
| dzRate | f4 | 1 m / s | Satellite velocity offset (z), or 0.0 if <code>VelocityCode</code> is 0. |
| da_f0 | f4 | 1 s | Satellite clock offset. |
| da_f1 | f4 | 1 s / s | Satellite drift correction, or 0.0 if <code>VelocityCode</code> is 0. |
| t_oe | u4 | 1 s | Time-of-day of applicability, or 0 if <code>VelocityCode</code> is 0. |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|--------------|--|
| GEOIonoDelay | Number: 5933 |
| | "OnChange" interval: block generated each time MT26 is received from an SBAS satellite |

This block contains the decoded ionospheric delays transmitted in SBAS message type 26. Refer to section A.4.4.10 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which the message has been received (see 4.1.9) |
| BandNbr | u1 | | | Band number |
| IODI | u1 | | | Issue of data - ionosphere. |
| N | u1 | | | Number of ionospheric delay corrections in this message. This is the number of IDC sub-blocks. N is always 15. |
| SBLength | u1 | 1 byte | | Length of the IDC sub-blocks in bytes. |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| IDC | ... | ... | | A succession of N IDC sub-blocks, see definition below |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

IDC sub-block definition:

| Parameter | Type | Units | Description |
|---------------|-------|-------|--|
| IGPMaskNo | u1 | | Sequence number in the IGP mask (see GEOIGPMask block), from 1 to 201. |
| GIVEI | u1 | | Grid Ionospheric Vertical Error Indicator, from 0 to 15 |
| Reserved | u1[2] | | Reserved for future use, to be ignored by decoding software |
| VerticalDelay | f4 | 1 m | IGP vertical delay estimate. |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|-----------------|--|
| GEOServiceLevel | Number: 5917 |
| | "OnChange" interval: block generated each time MT27 is received from an SBAS satellite |

This block contains a decoded service level message for a geostationary SBAS satellite as sent in message type 27. Refer to section A.4.4.13 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|--------------|---------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | ID of the SBAS satellite from which this service level message was received (see 4.1.9) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| IODS | u1 | | | Issue of Data Service level, ranging from 0 to 7 |
| nrMessages | u1 | | | Number of service messages (MT27), from 1 to 8 |
| MessageNR | u1 | | | Service message number, from 1 to 8 |
| PriorityCode | u1 | | | Priority Code, from 0 to 3 |
| dUDREI_In | u1 | | | δ UDRE Indicator for users inside the service region, from 0 to 15 |
| dUDREI_Out | u1 | | | δ UDRE Indicator for users outside the service region, from 0 to 15 |
| N | u1 | | | Number of Regions in this message. This is the number of ServiceRegion sub-blocks. Ranging from 0 to 7 |
| SBLength | u1 | 1 byte | | Length of the ServiceRegion sub-blocks in bytes |
| Regions | ... | ... | | A succession of N ServiceRegion sub-blocks, see definition below |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 |

ServiceRegion sub-block definition:

| Parameter | Type | Units | Description |
|-------------|---------|----------|---|
| Latitude1 | i1 | 1 degree | Coordinate 1 latitude, from -90 to +90 |
| Latitude2 | i1 | 1 degree | Coordinate 2 latitude, from -90 to +90 |
| Longitude1 | i2 | 1 degree | Coordinate 1 longitude, from -180 to +180 |
| Longitude2 | i2 | 1 degree | Coordinate 2 longitude, from -180 to +180 |
| RegionShape | u1 | | Region Shape: 0=triangular, 1=square |
| Padding | u1[...] | | Padding bytes, see 4.1.5 |

| | |
|----------------------|--|
| GEOClockEphCovMatrix | Number: 5934 |
| | "OnChange" interval: block generated each time MT28 is received from an SBAS satellite |

This block contains the decoded clock-ephemeris covariance Cholesky factor matrix transmitted in SBAS message type 28. Refer to section A.4.4.16 of the DO-229 standard for further details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | SIS time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| PRN | u1 | | | Satellite ID, see 4.1.9 |
| IODP | u1 | | | Issue of data - PRN. |
| N | u1 | | | Number of covariance matrices in this message. This is the number of CovMatrix sub-blocks. N can be 1 or 2. |
| SBLength | u1 | 1 byte | | Length of the CovMatrix sub-blocks in bytes |
| Reserved | u1[2] | | | Reserved for future use, to be ignored by decoding software |
| CovMatrix | ... | ... | | A succession of N CovMatrix sub-blocks, see definition below |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

CovMatrix sub-block definition:

| Parameter | Type | Units | Description |
|-----------|-------|-------|---|
| PRNMaskNo | u1 | | Sequence number in the PRN mask, from 1 to 51. Note that if the PRN mask No. from the original message is 0, the corresponding matrix is ignored, and hence not included in the GEOClockEphCovMatrix block. |
| Reserved | u1[2] | | Reserved for future use, to be ignored by decoding software |
| ScaleExp | u1 | | Scale exponent; scale factor ($= 2^{(\text{scale exponent} - 5)}$) |
| E11 | u2 | | $E_{1,1}$ |
| E22 | u2 | | $E_{2,2}$ |
| E33 | u2 | | $E_{3,3}$ |
| E44 | u2 | | $E_{4,4}$ |
| E12 | i2 | | $E_{1,2}$ |
| E13 | i2 | | $E_{1,3}$ |
| E14 | i2 | | $E_{1,4}$ |
| E23 | i2 | | $E_{2,3}$ |
| E24 | i2 | | $E_{2,4}$ |
| E34 | i2 | | $E_{3,4}$ |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

4.2.9 GNSS Position, Velocity and Time Blocks

| | |
|--------------|--|
| PVTCartesian | Number: 4006 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the GNSS-based position, velocity and time (PVT) solution at the time specified in the `TOW` and `WNc` fields. The time of applicability is specified in the receiver time frame.

The computed position (x, y, z) and velocity (v_x, v_y, v_z) are reported in a Cartesian coordinate system using the datum indicated in the `Datum` field. The position is that of the marker. The ARP-to-marker offset is set through the command **setAntennaOffset**.

The PVT solution is also available in ellipsoidal form in the `PVTGeodetic` block.

The variance-covariance information associated with the reported PVT solution can be found in the `PosCovCartesian` and `VelCovCartesian` blocks.

If no PVT solution is available, the `Error` field indicates the cause of the unavailability and all fields after the `Error` field are set to their respective Do-Not-Use values.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|---------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode, Static, auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| X | f8 | 1 m | $-2 \cdot 10^{10}$ | X coordinate in coordinate frame specified by <code>Datum</code> |
| Y | f8 | 1 m | $-2 \cdot 10^{10}$ | Y coordinate in coordinate frame specified by <code>Datum</code> |
| Z | f8 | 1 m | $-2 \cdot 10^{10}$ | Z coordinate in coordinate frame specified by <code>Datum</code> |
| Undulation | f4 | 1 m | $-2 \cdot 10^{10}$ | Geoid undulation. See the <code>setGeoidUndulation</code> command. |
| Vx | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in the X direction |
| Vy | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in the Y direction |
| Vz | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in the Z direction |

| | | | | |
|-------------|----|----------|--------------------|--|
| COG | f4 | 1 degree | $-2 \cdot 10^{10}$ | Course over ground: this is defined as the angle of the vehicle with respect to the local level North, ranging from 0 to 360, and increasing towards east. Set to the Do-Not-Use value when the speed is lower than 0.1m/s. |
| RxClkBias | f8 | 1 ms | $-2 \cdot 10^{10}$ | Receiver clock bias relative to the GNSS system time reported in the <code>TimeSystem</code> field. Positive when the receiver time is ahead of the system time. To transfer the receiver time to the system time, use: $t_{GPS/GST} = t_{rx} - RxClkBias$ |
| RxClkDrift | f4 | 1 ppm | $-2 \cdot 10^{10}$ | Receiver clock drift relative to the GNSS system time (relative frequency error). Positive when the receiver clock runs faster than the system time. |
| TimeSystem | u1 | | 255 | Time system of which the offset is provided in this sub-block: 0: GPS time 1: Galileo time 3: GLONASS time 4: BeiDou time 5: QZSS time |
| Datum | u1 | | 255 | This field defines in which datum the coordinates are expressed: 0: WGS84/ITRS 19: Datum equal to that used by the DGNSS/RTK base station 30: ETRS89 (ETRF2000 realization) 31: NAD83(2011), North American Datum (2011) 32: NAD83(PA11), North American Datum, Pacific plate (2011) 33: NAD83(MA11), North American Datum, Marianas plate (2011) 34: GDA94(2010), Geocentric Datum of Australia (2010) 35: GDA2020, Geocentric Datum of Australia 2020 250: First user-defined datum 251: Second user-defined datum |
| NrSV | u1 | | 255 | Total number of satellites used in the PVT computation. |
| WACorrInfo | u1 | | 0 | Bit field providing information about which wide area corrections have been applied: Bit 0: set if orbit and satellite clock correction information is used Bit 1: set if range correction information is used Bit 2: set if ionospheric information is used Bit 3: set if orbit accuracy information is used (UERE/SISA) Bit 4: set if DO229 Precision Approach mode is active Bits 5-7: Reserved |
| ReferenceID | u2 | | 65535 | This field indicates the reference ID of the differential information used. In case of DGPS or RTK operation, this field is to be interpreted as the base station identifier. In SBAS operation, this field is to be interpreted as the PRN of the geostationary satellite used (from 120 to 158). If multiple base stations or multiple geostationary satellites are used the value is set to 65534. |
| MeanCorrAge | u2 | 0.01 s | 65535 | In case of DGPS or RTK, this field is the mean age of the differential corrections. In case of SBAS operation, this field is the mean age of the 'fast corrections' provided by the SBAS satellites. |
| SignalInfo | u4 | | 0 | Bit field indicating the type of GNSS signals having been used in the PVT computations. If a bit i is set, the signal type having index i has been used. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |

Rev 1

| | | | | |
|-----------|-------|----------|-------|--|
| AlertFlag | u1 | | 0 | <p>Bit field indicating integrity related information:</p> <p>Bits 0-1: RAIM integrity flag: 0: RAIM not active (integrity not monitored) 1: RAIM integrity test successful 2: RAIM integrity test failed 3: Reserved</p> <p>Bit 2: set if integrity has failed as per Galileo HPCA (HMI Probability Computation Algorithm)</p> <p>Bit 3: set if Galileo ionospheric storm flag is active</p> <p>Bit 4: Reserved</p> <p>Bits 5-7: Reserved</p> |
| NrBases | u1 | | 0 | Number of base stations used in the PVT computation. |
| PPPInfo | u2 | 1 s | 0 | <p>Bit field containing PPP-related information:</p> <p>Bits 0-11: Age of the last seed, in seconds. The age is clipped to 4091s. This field must be ignored when the seed type is 0 (see bits 13-15 below).</p> <p>Bit 12: Reserved</p> <p>Bits 13-15: Type of last seed: 0: Not seeded or not in PPP positioning mode 1: Manual seed 2: Seeded from DGPS 3: Seeded from RTKFixed</p> |
| Latency | u2 | 0.0001 s | 65535 | Time elapsed between the time of applicability of the position fix and the generation of this SBF block by the receiver. This time includes the receiver processing time, but not the communication latency. |
| HAccuracy | u2 | 0.01 m | 65535 | 2DRMS horizontal accuracy: twice the root-mean-square of the horizontal distance error. The horizontal distance between the true position and the computed position is expected to be lower than <code>HAccuracy</code> with a probability of at least 95%. The value is clipped to 65534 = 655.34m |
| VAccuracy | u2 | 0.01 m | 65535 | 2-sigma vertical accuracy. The vertical distance between the true position and the computed position is expected to be lower than <code>VAccuracy</code> with a probability of at least 95%. The value is clipped to 65534 = 655.34m. |
| Misc | u1 | | | <p>Bit field containing miscellaneous flags:</p> <p>Bit 0: In DGNSS or RTK mode, set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown.</p> <p>Bit 1: Set if the phase center offset is compensated for at the rover, unset if not or unknown.</p> <p>Bit 2: Proprietary.</p> <p>Bit 3: Proprietary.</p> <p>Bits 4-5: Proprietary.</p> <p>Bits 6-7: Flag indicating whether the marker position reported in this block is also the ARP position (i.e. whether the ARP-to-marker offset provided with the <code>setAntennaOffset</code> command is zero or not) 0: Unknown 1: The ARP-to-marker offset is zero 2: The ARP-to-marker offset is not zero</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

Rev 2

| | |
|-------------|--|
| PVTGeodetic | Number: 4007 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the GNSS-based position, velocity and time (PVT) solution at the time specified in the `TOW` and `WNc` fields. The time of applicability is specified in the receiver time frame.

The computed position (ϕ, λ, h) and velocity (v_n, v_e, v_u) are reported in an ellipsoidal coordinate system using the datum indicated in the `Datum` field. The velocity vector is expressed relative to the local-level Cartesian coordinate frame with north-, east-, up-unit vectors. The position is that of the marker. The ARP-to-marker offset is set through the command **setAntennaOffset**.

The PVT solution is also available in Cartesian form in the `PVTCartesian` block.

The variance-covariance information associated with the reported PVT solution can be found in the `PosCovGeodetic` and `VelCovGeodetic` blocks.

If no PVT solution is available, the `Error` field indicates the cause of the unavailability and all fields after the `Error` field are set to their respective Do-Not-Use values.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|---------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode, Static, auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Latitude | f8 | 1 rad | $-2 \cdot 10^{10}$ | Latitude, from $-\pi/2$ to $+\pi/2$, positive North of Equator |
| Longitude | f8 | 1 rad | $-2 \cdot 10^{10}$ | Longitude, from $-\pi$ to $+\pi$, positive East of Greenwich |
| Height | f8 | 1 m | $-2 \cdot 10^{10}$ | Ellipsoidal height (with respect to the ellipsoid specified by <code>Datum</code>) |
| Undulation | f4 | 1 m | $-2 \cdot 10^{10}$ | Geoid undulation. See the <code>setGeoidUndulation</code> command. |
| Vn | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in the North direction |
| Ve | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in the East direction |
| Vu | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in the 'Up' direction |

| | | | | |
|-------------|----|----------|--------------------|--|
| COG | f4 | 1 degree | $-2 \cdot 10^{10}$ | Course over ground: this is defined as the angle of the vehicle with respect to the local level North, ranging from 0 to 360, and increasing towards east. Set to the Do-Not-Use value when the speed is lower than 0.1m/s. |
| RxClkBias | f8 | 1 ms | $-2 \cdot 10^{10}$ | Receiver clock bias relative to the GNSS system time reported in the <code>TimeSystem</code> field. Positive when the receiver time is ahead of the system time. To transfer the receiver time to the system time, use: $t_{GPS/GST} = t_{rx} - RxClkBias$ |
| RxClkDrift | f4 | 1 ppm | $-2 \cdot 10^{10}$ | Receiver clock drift relative to the GNSS system time (relative frequency error). Positive when the receiver clock runs faster than the system time. |
| TimeSystem | u1 | | 255 | Time system of which the offset is provided in this sub-block: 0: GPS time 1: Galileo time 3: GLONASS time 4: BeiDou time 5: QZSS time |
| Datum | u1 | | 255 | This field defines in which datum the coordinates are expressed: 0: WGS84/ITRS 19: Datum equal to that used by the DGNSS/RTK base station 30: ETRS89 (ETRF2000 realization) 31: NAD83(2011), North American Datum (2011) 32: NAD83(PA11), North American Datum, Pacific plate (2011) 33: NAD83(MA11), North American Datum, Marianas plate (2011) 34: GDA94(2010), Geocentric Datum of Australia (2010) 35: GDA2020, Geocentric Datum of Australia 2020 250: First user-defined datum 251: Second user-defined datum |
| NrSV | u1 | | 255 | Total number of satellites used in the PVT computation. |
| WACorrInfo | u1 | | 0 | Bit field providing information about which wide area corrections have been applied: Bit 0: set if orbit and satellite clock correction information is used Bit 1: set if range correction information is used Bit 2: set if ionospheric information is used Bit 3: set if orbit accuracy information is used (UERE/SISA) Bit 4: set if DO229 Precision Approach mode is active Bits 5-7: Reserved |
| ReferenceID | u2 | | 65535 | This field indicates the reference ID of the differential information used. In case of DGPS or RTK operation, this field is to be interpreted as the base station identifier. In SBAS operation, this field is to be interpreted as the PRN of the geostationary satellite used (from 120 to 158). If multiple base stations or multiple geostationary satellites are used the value is set to 65534. |
| MeanCorrAge | u2 | 0.01 s | 65535 | In case of DGPS or RTK, this field is the mean age of the differential corrections. In case of SBAS operation, this field is the mean age of the 'fast corrections' provided by the SBAS satellites. |
| SignalInfo | u4 | | 0 | Bit field indicating the type of GNSS signals having been used in the PVT computations. If a bit i is set, the signal type having index i has been used. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |

Rev 1

| | | | | |
|-----------|-------|----------|-------|---|
| AlertFlag | u1 | | 0 | <p>Bit field indicating integrity related information:</p> <p>Bits 0-1: RAIM integrity flag:</p> <ul style="list-style-type: none"> 0: RAIM not active (integrity not monitored) 1: RAIM integrity test successful 2: RAIM integrity test failed 3: Reserved <p>Bit 2: set if integrity has failed as per Galileo HPCA (HMI Probability Computation Algorithm)</p> <p>Bit 3: set if Galileo ionospheric storm flag is active</p> <p>Bit 4: Reserved</p> <p>Bits 5-7: Reserved</p> |
| NrBases | u1 | | 0 | Number of base stations used in the PVT computation. |
| PPPInfo | u2 | 1 s | 0 | <p>Bit field containing PPP-related information:</p> <p>Bits 0-11: Age of the last seed, in seconds. The age is clipped to 4091s. This field must be ignored when the seed type is 0 (see bits 13-15 below).</p> <p>Bit 12: Reserved</p> <p>Bits 13-15: Type of last seed:</p> <ul style="list-style-type: none"> 0: Not seeded or not in PPP positioning mode 1: Manual seed 2: Seeded from DGPS 3: Seeded from RTKFixed |
| Latency | u2 | 0.0001 s | 65535 | Time elapsed between the time of applicability of the position fix and the generation of this SBF block by the receiver. This time includes the receiver processing time, but not the communication latency. |
| HAccuracy | u2 | 0.01 m | 65535 | 2DRMS horizontal accuracy: twice the root-mean-square of the horizontal distance error. The horizontal distance between the true position and the computed position is expected to be lower than $H_{Accuracy}$ with a probability of at least 95%. The value is clipped to $65534 \approx 655.34\text{m}$ |
| VAccuracy | u2 | 0.01 m | 65535 | 2-sigma vertical accuracy. The vertical distance between the true position and the computed position is expected to be lower than $V_{Accuracy}$ with a probability of at least 95%. The value is clipped to $65534 \approx 655.34\text{m}$. |
| Misc | u1 | | | <p>Bit field containing miscellaneous flags:</p> <p>Bit 0: In DGNSS or RTK mode, set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown.</p> <p>Bit 1: Set if the phase center offset is compensated for at the rover, unset if not or unknown.</p> <p>Bit 2: Proprietary.</p> <p>Bit 3: Proprietary.</p> <p>Bits 4-5: Proprietary.</p> <p>Bits 6-7: Flag indicating whether the marker position reported in this block is also the ARP position (i.e. whether the ARP-to-marker offset provided with the setAntennaOffset command is zero or not)</p> <ul style="list-style-type: none"> 0: Unknown 1: The ARP-to-marker offset is zero 2: The ARP-to-marker offset is not zero |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

Rev 2

| | |
|-----------------|--|
| PosCovCartesian | Number: 5905 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the elements of the symmetric variance-covariance matrix of the position expressed relative to the Cartesian axes of the coordinate system datum requested by the user:

$$\begin{pmatrix} \sigma_x^2 & \sigma_{xy} & \sigma_{xz} & \sigma_{xb} \\ \sigma_{yx} & \sigma_y^2 & \sigma_{yz} & \sigma_{yb} \\ \sigma_{zx} & \sigma_{zy} & \sigma_z^2 & \sigma_{zb} \\ \sigma_{bx} & \sigma_{by} & \sigma_{bz} & \sigma_b^2 \end{pmatrix}$$

This variance-covariance matrix contains an indication of the accuracy of the estimated parameters (see diagonal elements) and the correlation between these estimates (see off-diagonal elements). Note that the variances and covariances are estimated: they are not necessarily indicative of the actual scatter of the position estimates at a given site.

The position variance results from the propagation of all pseudorange variances using the observation geometry. The receiver implements a stochastic error model for individual measurements, based on parameters such as the C/N_0 , the satellite elevation, the pseudorange type, the URA of the broadcast ephemeris and the ionospheric model.

If the ellipsoidal height is not estimated (2D-mode), all components of the variance-covariance matrix are undefined and set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|------------------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Cov_xx | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the x estimate |
| Cov_yy | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the y estimate |
| Cov_zz | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the z estimate |
| Cov_bb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the clock bias estimate |
| Cov_xy | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the x and y estimates |
| Cov_xz | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the x and z estimates |
| Cov_xb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the x and clock bias estimates |
| Cov_yz | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the y and z estimates |
| Cov_yb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the y and clock bias estimates |

| | | | | |
|---------|-------|------------------|--------------------|---|
| Cov_zb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the z and clock bias estimates |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------|--|
| PosCovGeodetic | Number: 5906 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the elements of the symmetric variance-covariance matrix of the position expressed in the geodetic coordinates in the datum requested by the user:

$$\begin{pmatrix} \sigma_{\phi}^2 & \sigma_{\phi\lambda} & \sigma_{\phi h} & \sigma_{\phi b} \\ \sigma_{\lambda\phi} & \sigma_{\lambda}^2 & \sigma_{\lambda h} & \sigma_{\lambda b} \\ \sigma_{h\phi} & \sigma_{h\lambda} & \sigma_h^2 & \sigma_{hb} \\ \sigma_{b\phi} & \sigma_{b\lambda} & \sigma_{bh} & \sigma_b^2 \end{pmatrix}$$

Please refer to the PosCovCartesian block description for a general explanation of the contents.

Note that the units of measure for all the variances and covariances, for height as well as for latitude and longitude, are m² for ease of interpretation.

If the ellipsoidal height is not estimated (2D-mode), all height related components of the variance-covariance matrix are undefined and set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|------------------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Cov_latlat | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the latitude estimate |
| Cov_lonlon | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the longitude estimate |
| Cov_hgthgt | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the height estimate |
| Cov_bb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the clock-bias estimate |
| Cov_latlon | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the latitude and longitude estimates |
| Cov_lathgt | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the latitude and height estimates |
| Cov_latb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the latitude and clock-bias estimates |
| Cov_lonhgt | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the longitude and height estimates |

| | | | | |
|----------|-------|------------------|--------------------|---|
| Cov_lonb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the longitude and clock-bias estimates |
| Cov_hb | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the height and clock-bias estimates |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-----------------|--|
| VelCovCartesian | Number: 5907 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the elements of the symmetric variance-covariance matrix of the velocity expressed in the Cartesian coordinates of the coordinate system datum requested by the user:

$$\begin{pmatrix} \sigma_{v_x}^2 & \sigma_{v_x v_y} & \sigma_{v_x v_z} & \sigma_{v_x d} \\ \sigma_{v_y v_x} & \sigma_{v_y}^2 & \sigma_{v_y v_z} & \sigma_{v_y d} \\ \sigma_{v_z v_x} & \sigma_{v_z v_y} & \sigma_{v_z}^2 & \sigma_{v_z d} \\ \sigma_{dv_x} & \sigma_{dv_y} & \sigma_{dv_z} & \sigma_d^2 \end{pmatrix}$$

Please refer to the `PosCovCartesian` block description for a general explanation of the contents.

If the up-velocity is not estimated (2D-mode), all components of the variance-covariance matrix are undefined and set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|------------------------------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Cov_VxVx | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the x-velocity estimate |
| Cov_VyVy | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the y-velocity estimate |
| Cov_VzVz | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the z-velocity estimate |
| Cov_DtDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the clock drift estimate |
| Cov_VxVy | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the x- and y-velocity estimates |
| Cov_VxVz | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the x- and z-velocity estimates |
| Cov_VxDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the x-velocity and the clock drift estimates |
| Cov_VyVz | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the y- and z-velocity estimates |

| | | | | |
|----------|-------|------------------------------|--------------------|---|
| Cov_VyDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the y-velocity and the clock drift estimates |
| Cov_VzDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the z-velocity and the clock drift estimates |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------|--|
| VelCovGeodetic | Number: 5908 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the elements of the symmetric variance-covariance matrix of the velocity expressed in the geodetic coordinates in the datum requested by the user:

$$\begin{pmatrix} \sigma_{v_N}^2 & \sigma_{v_N v_E} & \sigma_{v_N v_U} & \sigma_{v_N d} \\ \sigma_{v_E v_N} & \sigma_{v_E}^2 & \sigma_{v_E v_U} & \sigma_{v_E d} \\ \sigma_{v_U v_N} & \sigma_{v_U v_E} & \sigma_{v_U}^2 & \sigma_{v_U d} \\ \sigma_{d v_N} & \sigma_{d v_E} & \sigma_{d v_U} & \sigma_d^2 \end{pmatrix}$$

Please refer to the PosCovCartesian block description for a general explanation of the contents.

If the up-velocity is not estimated (2D-mode), all up-velocity related components of the variance-covariance matrix are undefined and set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|------------------------------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Cov_VnVn | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the north-velocity estimate |
| Cov_VeVe | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the east-velocity estimate |
| Cov_VuVu | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the up-velocity estimate |
| Cov_DtDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Variance of the clock drift estimate |
| Cov_VnVe | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the north- and east-velocity estimates |
| Cov_VnVu | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the north- and up-velocity estimates |
| Cov_VnDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the north-velocity and clock drift estimates |
| Cov_VeVu | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the east- and up-velocity estimates |

| | | | | |
|----------|-------|------------------------------|--------------------|--|
| Cov_VeDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the east-velocity and clock drift estimates |
| Cov_VuDt | f4 | $1 \text{ m}^2 / \text{s}^2$ | $-2 \cdot 10^{10}$ | Covariance between the up-velocity and clock drift estimates |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-----|--|
| DOP | Number: 4001 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains both Dilution of Precision (DOP) values and SBAS protection levels. The DOP values result from a trace of the unit position variance-covariance matrices:

$$\text{Position Dilution of Precision: } PDOP = \sqrt{\mathbf{Q}_{xx} + \mathbf{Q}_{yy} + \mathbf{Q}_{zz}}$$

$$\text{Time Dilution of Precision: } TDOP = \sqrt{\mathbf{Q}_{bb}}$$

$$\text{Horizontal Dilution of Precision: } HDOP = \sqrt{\mathbf{Q}_{\lambda\lambda} + \mathbf{Q}_{\phi\phi}}$$

$$\text{Vertical Dilution of Precision: } VDOP = \sqrt{\mathbf{Q}_{hh}}$$

In these equations, the matrix \mathbf{Q} is the inverse of the unweighted normal matrix used for the computation of the position. The normal matrix equals the product of the geometry matrix \mathbf{A} with its transpose ($\mathbf{A}^t\mathbf{A}$). The term "unweighted" implies that the DOP factor only addresses the effect of the geometric factors on the quality of the position.

The DOP values can be used to interpret the current constellation geometry. This is an important parameter for the quality of the position fix: the DOP parameter is the propagation factor of the pseudorange variance. For example, if an error of 5 m is present in the pseudorange, it will propagate into the horizontal plane with a factor expressed by the HDOP. Hence a low DOP value indicates that the satellites used for the position fix result in a low multiplication of the systematic ranging errors. A value of six (6) for the PDOP is generally considered as the maximum value allowed for an acceptable position computation.

The horizontal and vertical protection levels (HPL and VPL) indicate the integrity of the computed horizontal and vertical position components as per the DO 229 specification. In SBAS-aided PVT mode (see the `Mode` field of the `PVTCartesian` SBF block), HPL and VPL are based upon the error estimates provided by SBAS. Otherwise they are based upon internal position-mode dependent error estimates.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| NrSV | u1 | | 0 | Total number of satellites used in the DOP computation, or 0 if the DOP information is not available (in that case, the <code>xDOP</code> fields are all set to 0) |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| PDOP | u2 | 0.01 | 0 | If 0, PDOP not available, otherwise divide by 100 to obtain PDOP. |
| TDOP | u2 | 0.01 | 0 | If 0, TDOP not available, otherwise divide by 100 to obtain TDOP. |
| HDOP | u2 | 0.01 | 0 | If 0, HDOP not available, otherwise divide by 100 to obtain HDOP. |
| VDOP | u2 | 0.01 | 0 | If 0, VDOP not available, otherwise divide by 100 to obtain VDOP. |
| HPL | f4 | 1 m | $-2 \cdot 10^{10}$ | Horizontal Protection Level (see the DO 229 standard). |
| VPL | f4 | 1 m | $-2 \cdot 10^{10}$ | Vertical Protection Level (see the DO 229 standard). |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|---------|--|
| PosCart | Number: 4044 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the absolute and relative (relative to the nearest base station) position at the time specified in the `TOW` and `WNc` fields. The time of applicability is specified in the receiver time frame.

The absolute position (X , Y , Z) is reported in a Cartesian coordinate system using the datum indicated in the `Datum` field. The position is that of the marker. The ARP-to-marker offset is set through the command **setAntennaOffset**.

For highest accuracy, the receiver tries to compute the baseline (`Base2RoverX`, `Base2RoverY`, `Base2RoverZ`) from rover ARP to base ARP. See the description of the `BaseVectorCart` block for details.

Accurate ARP-to-ARP baseline is guaranteed only if both bits 0 and 1 of the `Misc` field are set. Otherwise, centimeter-level offsets may arise because the receiver cannot make the distinction between phase center and ARP positions. See section 2.5 for a discussion on the phase center and ARP positions.

This block also contains the variance-covariance information and DOP factors associated with the position.

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------|------|------------------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| X | f8 | 1 m | $-2 \cdot 10^{10}$ | X coordinate in coordinate frame specified by <code>Datum</code> |
| Y | f8 | 1 m | $-2 \cdot 10^{10}$ | Y coordinate in coordinate frame specified by <code>Datum</code> |
| Z | f8 | 1 m | $-2 \cdot 10^{10}$ | Z coordinate in coordinate frame specified by <code>Datum</code> |
| Base2RoverX | f8 | 1 m | $-2 \cdot 10^{10}$ | X baseline component (from base to rover) |
| Base2RoverY | f8 | 1 m | $-2 \cdot 10^{10}$ | Y baseline component (from base to rover) |
| Base2RoverZ | f8 | 1 m | $-2 \cdot 10^{10}$ | Z baseline component (from base to rover) |
| Cov_xx | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the x estimate |
| Cov_yy | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the y estimate |

| | | | | |
|-----------|----|------------------|--------------------|--|
| Cov_zz | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Variance of the z estimate |
| Cov_xy | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the x and y estimates |
| Cov_xz | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the x and z estimates |
| Cov_yz | f4 | 1 m ² | $-2 \cdot 10^{10}$ | Covariance between the y and z estimates |
| PDOP | u2 | 0.01 | 0 | If 0, PDOP not available, otherwise divide by 100 to obtain PDOP. |
| HDOP | u2 | 0.01 | 0 | If 0, HDOP not available, otherwise divide by 100 to obtain HDOP. |
| VDOP | u2 | 0.01 | 0 | If 0, VDOP not available, otherwise divide by 100 to obtain VDOP. |
| Misc | u1 | | | <p>Bit field containing miscellaneous flags:</p> <p>Bit 0: In DGNSS or RTK mode, set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown.</p> <p>Bit 1: Set if the phase center offset is compensated for at the rover, unset if not or unknown.</p> <p>Bit 2: Proprietary.</p> <p>Bit 3: Proprietary.</p> <p>Bits 4-5: Proprietary.</p> <p>Bits 6-7: Flag indicating whether the marker position reported in this block is also the ARP position (i.e. whether the ARP-to-marker offset provided with the setAntennaOffset command is zero or not)</p> <p>0: Unknown</p> <p>1: The ARP-to-marker offset is zero</p> <p>2: The ARP-to-marker offset is not zero</p> |
| Reserved | u1 | | | Reserved for future use. |
| AlertFlag | u1 | | 0 | <p>Bit field indicating integrity related information:</p> <p>Bits 0-1: RAIM integrity flag:</p> <p>0: RAIM not active (integrity not monitored)</p> <p>1: RAIM integrity test successful</p> <p>2: RAIM integrity test failed</p> <p>3: Reserved</p> <p>Bit 2: set if integrity has failed as per Galileo HPCA (HMI Probability Computation Algorithm)</p> <p>Bit 3: set if Galileo ionospheric storm flag is active</p> <p>Bit 4: Reserved</p> <p>Bits 5-7: Reserved</p> |
| Datum | u1 | | 255 | <p>This field defines in which datum the coordinates are expressed:</p> <p>0: WGS84/ITRS</p> <p>19: Datum equal to that used by the DGNSS/RTK base station</p> <p>30: ETRS89 (ETRF2000 realization)</p> <p>31: NAD83(2011), North American Datum (2011)</p> <p>32: NAD83(PA11), North American Datum, Pacific plate (2011)</p> <p>33: NAD83(MA11), North American Datum, Marianas plate (2011)</p> <p>34: GDA94(2010), Geocentric Datum of Australia (2010)</p> <p>35: GDA2020, Geocentric Datum of Australia 2020</p> <p>250: First user-defined datum</p> <p>251: Second user-defined datum</p> |
| NrSV | u1 | | 255 | Total number of satellites used in the PVT computation. |

| | | | | |
|-------------|-------|--------|-------|---|
| WACorrInfo | u1 | | 0 | <p>Bit field providing information about which wide area corrections have been applied:</p> <p>Bit 0: set if orbit and satellite clock correction information is used</p> <p>Bit 1: set if range correction information is used</p> <p>Bit 2: set if ionospheric information is used</p> <p>Bit 3: set if orbit accuracy information is used (UERE/SISA)</p> <p>Bit 4: set if DO229 Precision Approach mode is active</p> <p>Bits 5-7: Reserved</p> |
| ReferenceId | u2 | | 65535 | <p>This field indicates the reference ID of the differential information used. In case of DGPS or RTK operation, this field is to be interpreted as the base station identifier. In SBAS operation, this field is to be interpreted as the PRN of the geostationary satellite used (from 120 to 158). If multiple base stations or multiple geostationary satellites are used the value is set to 65534.</p> |
| MeanCorrAge | u2 | 0.01 s | 65535 | <p>In case of DGPS or RTK, this field is the mean age of the differential corrections.</p> <p>In case of SBAS operation, this field is the mean age of the 'fast corrections' provided by the SBAS satellites.</p> |
| SignalInfo | u4 | | 0 | <p>Bit field indicating the type of GNSS signals having been used in the PVT computations. If a bit i is set, the signal type having index i has been used. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code>.</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------|--|
| PosLocal | Number: 4052 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the position at the time specified in the `TOW` and `WNc` fields. The time of applicability is specified in the receiver time frame.

The position (Lat, Lon, Alt) relates to the local datum identified with the `Datum` field. The coordinate transformation to the local datum is done using parameters transmitted by the RTK service provider in RTCM message types MT1021 to MT1023.

The position is that of the marker. The ARP-to-marker offset is set through the command **setAntennaOffset**.

If no position is available, the `Error` field indicates the cause of the unavailability and all fields after the `Error` field are set to their respective Do-Not-Use values.

To be able to output a position in the `PosLocal` block, the receiver needs to have received the relevant RTCM transformation messages (at least either MT1021 or MT1022 is required). If they have not been received yet, the local position is not available and the `Error` field is set to value 17. See also section 2.4.6.

The corresponding `RTCMDatum` block provides information on the local datum name and transformation quality indicators. The corresponding `RTCMDatum` block is the one of which the `Datum` field matches the `Datum` field in the `PosLocal` block.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | Bit field indicating the GNSS PVT mode, as follows: Bits 0-3: type of PVT solution: 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved Bits 4-5: Reserved Bit 6: Set if the user has entered the command setPVTMode,Static,auto and the receiver is still in the process of determining its fixed position. Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed). |

| | | | | |
|---------|-------|-------|--------------------|---|
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions 17: Datum transformation parameters unknown |
| Lat | f8 | 1 rad | $-2 \cdot 10^{10}$ | Latitude, from $-\pi/2$ to $+\pi/2$, positive North of Equator |
| Lon | f8 | 1 rad | $-2 \cdot 10^{10}$ | Longitude, from $-\pi$ to $+\pi$, positive East of Greenwich |
| Alt | f8 | 1 m | $-2 \cdot 10^{10}$ | Height. See the <code>HeightType</code> field of the corresponding <code>RTCMDatum</code> block for the interpretation of the height. |
| Datum | u1 | | | <p>Reference frame to which the position relate. If the value is in the 20 to 24 range, the corresponding datum parameters can be found in the <code>RTCMDatum</code> block having a matching <code>Datum</code> field.</p> <p>Value 25 corresponds to the local coordinate reference system selected with the <code>setLocalCoordOperation</code> command.</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|--------------|--|
| PosProjected | Number: 4094 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the projected coordinates at the time specified in the `TOW` and `WNc` fields. The time of applicability is specified in the receiver time frame.

The coordinates (Northing, Easting, Alt) relate to the local datum identified with the `Datum` field. The coordinate transformation and projection is done using parameters transmitted by the RTK service provider in RTCM message types MT1021 to MT1027.

The position is that of the marker. The ARP-to-marker offset is set through the command **setAntennaOffset**.

If no position is available, the `Error` field indicates the cause of the unavailability and all fields after the `Error` field are set to their respective Do-Not-Use values.

To be able to output a position in the `PosProjected` block, the receiver needs to have received at least one RTCM message in the MT1025 to MT1027 range. If none of these messages is sent out by the service provider, or if they have not been received yet, the projected position is not available and the `Error` field is set to value 17. See also section 2.4.6.

The corresponding `RTCMDatum` block provides information on the local datum name and transformation/projection quality indicators. The corresponding `RTCMDatum` block is the one of which the `Datum` field matches the `Datum` field in the `PosProjected` block.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions 17: Datum transformation parameters unknown |
| Northing | f8 | 1 m | $-2 \cdot 10^{10}$ | Northing coordinate in the plane grid representation. |
| Easting | f8 | 1 m | $-2 \cdot 10^{10}$ | Easting coordinate in the plane grid representation. |
| Alt | f8 | 1 m | $-2 \cdot 10^{10}$ | Height. If the <code>Datum</code> field is in the 20 to 24 range, see the <code>HeightType</code> field of the corresponding <code>RTCDatum</code> block for the interpretation of the height. |
| Datum | u1 | | | <p>Reference frame to which the position relate. If the value is in the 20 to 24 range, the corresponding datum parameters can be found in the <code>RTCDatum</code> block having a matching <code>Datum</code> field.</p> <p>Value 25 corresponds to the local coordinate reference system selected with the <code>setLocalCoordOperation</code> command.</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------|--|
| BaseVectorCart | Number: 4043 "OnChange" interval: default PVT output rate (see 4.1.8) |
|----------------|--|

The `BaseVectorCart` block contains the relative position and orientation of one or more base stations, as seen from the rover (i.e. this receiver). The relative position is expressed in the Cartesian X, Y, Z directions.

For highest accuracy, the receiver tries to compute the baseline from rover antenna reference point (ARP) to base ARP. This requires to compensate for the phase center offset at both the base and the rover antennas. This is possible if two conditions are met:

- the base station must transmit its antenna parameters in RTCM2 message types 23 and 24 or in RTCM3 message types 1005/1006 and 1007/1008. Older RTCM2 messages and CMR do not allow phase center offset compensation.
- the base and rover antenna types must belong to the list returned by the command **1stAntennaInfo, overview**. (see the description of the commands **setAntennaOffset** and **1stAntennaInfo** for details).

Accurate ARP-to-ARP baseline is guaranteed only if both bits 0 and 1 of the `Misc` field are set. Otherwise, centimeter-level offsets may arise because the receiver cannot make the distinction between phase center and ARP positions. See section 2.5 for a discussion on the phase center and ARP positions.

The block supports multi-base operation. It contains as many sub-blocks as available base stations, each sub-block containing the baseline relative to a single base station identified by the `ReferenceID` field.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of baselines for which relative position, velocity and direction are provided in this SBF block, i.e. number of <code>VectorInfoCart</code> sub-blocks. If <code>N</code> is 0, there are no baseline available for this epoch. |
| SBLength | u1 | 1 byte | | Length of one sub-block |
| <i>VectorInfoCart</i> | ... | ... | | <i>A succession of N VectorInfoCart sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

VectorInfoCart sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|-------|--------------------|---|
| nrSV | u1 | | | Number of satellites for which corrections are available from the base station identified by the <code>ReferenceID</code> field. |
| Error | u1 | | | PVT error code. The following values are defined: 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Mode | u1 | | | Bit field indicating the GNSS PVT mode, as follows: Bits 0-3: type of PVT solution: 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved Bits 4-5: Reserved Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position. Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed). |
| Misc | u1 | | | Bit field containing miscellaneous flags: Bit 0: Set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown. Bit 1: Set if the phase center offset is compensated for at the rover (i.e. the baseline starts from the antenna ARP), unset if not or unknown. Bit 2: Proprietary. Bit 3: Proprietary. Bits 4-5: Proprietary. Bits 6-7: Reserved |
| DeltaX | f8 | 1 m | $-2 \cdot 10^{10}$ | X baseline component (from rover to base) |
| DeltaY | f8 | 1 m | $-2 \cdot 10^{10}$ | Y baseline component (from rover to base) |
| DeltaZ | f8 | 1 m | $-2 \cdot 10^{10}$ | Z baseline component (from rover to base) |

| | | | | |
|-------------|-------|--------------|--------------------|---|
| DeltaVx | f4 | 1 m / s | $-2 \cdot 10^{10}$ | X velocity of base with respect to rover |
| DeltaVy | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Y velocity of base with respect to rover |
| DeltaVz | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Z velocity of base with respect to rover |
| Azimuth | u2 | 0.01 degrees | 65535 | Azimuth of the base station (from 0 to 360°, increasing towards east) |
| Elevation | i2 | 0.01 degrees | -32768 | Elevation of the base station (from -90° to 90°) |
| ReferenceID | u2 | | | Base station ID |
| CorrAge | u2 | 0.01 s | 65535 | Age of the oldest differential correction used for this baseline computation. |
| SignalInfo | u4 | | 0 | Bit field indicating the GNSS signals for which differential corrections are available from the base station identified by <code>ReferenceID</code> . If bit <i>i</i> is set, corrections for the signal type having index <i>i</i> are available. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|----------------|----------------------|-------------------------------------|
| BaseVectorGeod | Number: | 4028 |
| | "OnChange" interval: | default PVT output rate (see 4.1.8) |

The `BaseVectorGeod` block contains the relative position and orientation of one or more base stations, as seen from the rover (i.e. this receiver). The relative position is expressed in the East-North-Up directions.

For highest accuracy, the receiver tries to compute the baseline from rover antenna reference point (ARP) to base ARP. See the description of the `BaseVectorCart` block for details.

Accurate ARP-to-ARP baseline is guaranteed only if both bits 0 and 1 of the `Misc` field are set. Otherwise, centimeter-level offsets may arise because the receiver cannot make the distinction between phase center and ARP positions. See section 2.5 for a discussion on the phase center and ARP positions.

The block supports multi-base operation. It contains as many sub-blocks as available base stations, each sub-block containing the baseline coordinates relative to a single base station identified by the `ReferenceID` field.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of baselines for which relative position, velocity and direction are provided in this SBF block, i.e. number of <code>VectorInfoGeod</code> sub-blocks. If <code>N</code> is 0, there are no baseline available for this epoch. |
| SBLength | u1 | 1 byte | | Length of one sub-block |
| <i>VectorInfoGeod</i> | ... | ... | | <i>A succession of <code>N</code> <code>VectorInfoGeod</code> sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

VectorInfoGeod sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|-------|--------------------|---|
| NrSV | u1 | | | Number of satellites for which corrections are available from the base station identified by the <code>ReferenceID</code> field. |
| Error | u1 | | | PVT error code. The following values are defined: 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Mode | u1 | | | Bit field indicating the GNSS PVT mode, as follows: Bits 0-3: type of PVT solution: 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved Bits 4-5: Reserved Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position. Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed). |
| Misc | u1 | | | Bit field containing miscellaneous flags: Bit 0: Set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown. Bit 1: Set if the phase center offset is compensated for at the rover (i.e. the baseline starts from the antenna ARP), unset if not or unknown. Bit 2: Proprietary. Bit 3: Proprietary. Bits 4-5: Proprietary. Bits 6-7: Reserved |
| DeltaEast | f8 | 1 m | $-2 \cdot 10^{10}$ | East baseline component (from rover to base) |
| DeltaNorth | f8 | 1 m | $-2 \cdot 10^{10}$ | North baseline component (from rover to base) |
| DeltaUp | f8 | 1 m | $-2 \cdot 10^{10}$ | Up baseline component (from rover to base) |

| | | | | |
|-------------|-------|--------------|--------------------|---|
| DeltaVe | f4 | 1 m / s | $-2 \cdot 10^{10}$ | East velocity of base with respect to rover |
| DeltaVn | f4 | 1 m / s | $-2 \cdot 10^{10}$ | North velocity of base with respect to rover |
| DeltaVu | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Up velocity of base with respect to rover |
| Azimuth | u2 | 0.01 degrees | 65535 | Azimuth of the base station (from 0 to 360°, increasing towards east) |
| Elevation | i2 | 0.01 degrees | -32768 | Elevation of the base station (from -90° to 90°) |
| ReferenceID | u2 | | | Base station ID |
| CorrAge | u2 | 0.01 s | 65535 | Age of the oldest differential correction used for this baseline computation. |
| SignalInfo | u4 | | 0 | Bit field indicating the GNSS signals for which differential corrections are available from the base station identified by <code>ReferenceID</code> . If bit <i>i</i> is set, corrections for the signal type having index <i>i</i> are available. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------|--|
| PVTSupport | Number: 4076 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains various internal parameters that can be used for maintenance and support.

The detailed definition of this block is not available in this document.

| | |
|-------------|--|
| PVTSupportA | Number: 4079 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains various internal parameters that can be used for maintenance and support.

The detailed definition of this block is not available in this document.

| | |
|----------|--|
| EndOfPVT | Number: 5921 "OnChange" interval: default PVT output rate (see 4.1.8) |
|----------|--|

This block marks the end of transmission of all PVT related blocks belonging to the same epoch.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|--------------------------------|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.10 GNSS Attitude Blocks

| | |
|----------|--|
| AttEuler | Number: 5938 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

The `AttEuler` block contains the Euler angles (pitch, roll and heading) at the time specified in the `TOW` and `WNc` fields (in the receiver time frame).

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|--------------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| NrSV | u1 | | 255 | The average over all antennas of the number of satellites currently included in the attitude calculations. |
| Error | u1 | | | <p>Bit field providing error information. For each antenna baseline, two bits are used to provide error information:</p> <p>Bits 0-1: Error code for Main-Aux1 baseline: 0: No error 1: Not enough measurements 2: Reserved 3: Reserved</p> <p>Bits 2-3: Error code for Main-Aux2 baseline, same definition as bit 0-1. Bits 4-6: Reserved Bit 7: Set when GNSS-based attitude not requested by user. In that case, the other bits are all zero.</p> |
| Mode | u2 | | | <p>Attitude mode code:</p> <p>0: No attitude 1: Heading, pitch (roll = 0), aux antenna positions obtained with float ambiguities 2: Heading, pitch (roll = 0), aux antenna positions obtained with fixed ambiguities 3: Heading, pitch, roll, aux antenna positions obtained with float ambiguities 4: Heading, pitch, roll, aux antenna positions obtained with fixed ambiguities</p> |
| Reserved | u2 | | | Reserved for future use, to be ignored by decoding software |
| Heading | f4 | 1 degree | $-2 \cdot 10^{10}$ | Heading |
| Pitch | f4 | 1 degree | $-2 \cdot 10^{10}$ | Pitch |
| Roll | f4 | 1 degree | $-2 \cdot 10^{10}$ | Roll |
| PitchDot | f4 | 1 degree / s | $-2 \cdot 10^{10}$ | Rate of change of the pitch angle |
| RollDot | f4 | 1 degree / s | $-2 \cdot 10^{10}$ | Rate of change of the roll angle |
| HeadingDot | f4 | 1 degree / s | $-2 \cdot 10^{10}$ | Rate of change of the heading angle |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-------------|--|
| AttCovEuler | Number: 5939 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block contains the elements of the symmetric variance-covariance matrix of the attitude angles reported in the `AttEuler` block

$$\begin{pmatrix} \sigma_{\phi}^2 & \sigma_{\phi\theta} & \sigma_{\phi\psi} \\ \sigma_{\theta\phi} & \sigma_{\theta}^2 & \sigma_{\theta\psi} \\ \sigma_{\psi\phi} & \sigma_{\psi\theta} & \sigma_{\psi}^2 \end{pmatrix}$$

This variance-covariance matrix contains an indication of the accuracy of the estimated parameters (see diagonal elements) and the correlation between these estimates (see off-diagonal elements).

In case the receiver is in heading and pitch mode only, only the heading and pitch variance values will be valid. All other components of the variance-covariance matrix are set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|----------------|-------|-----------------------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| Error | u1 | | | <p>Bit field providing error information. For each antenna baseline, two bits are used to provide error information:</p> <p>Bits 0-1: Error code for Main-Aux1 baseline:</p> <ul style="list-style-type: none"> 0: No error 1: Not enough measurements 2: Reserved 3: Reserved <p>Bits 2-3: Error code for Main-Aux2 baseline, same definition as bit 0-1.</p> <p>Bits 4-6: Reserved</p> <p>Bit 7: Set when GNSS-based attitude not requested by user. In that case, the other bits are all zero.</p> |
| Cov_HeadHead | f4 | 1 degree ² | $-2 \cdot 10^{10}$ | Variance of the heading estimate |
| Cov_PitchPitch | f4 | 1 degree ² | $-2 \cdot 10^{10}$ | Variance of the pitch estimate |
| Cov_RollRoll | f4 | 1 degree ² | $-2 \cdot 10^{10}$ | Variance of the roll estimate |
| Cov_HeadPitch | f4 | 1 degree ² | $-2 \cdot 10^{10}$ | Covariance between Euler angle estimates. Future functionality. The values are currently set to their Do-Not-Use values. |
| Cov_HeadRoll | f4 | 1 degree ² | $-2 \cdot 10^{10}$ | Covariance between Euler angle estimates. Future functionality. The values are currently set to their Do-Not-Use values. |
| Cov_PitchRoll | f4 | 1 degree ² | $-2 \cdot 10^{10}$ | Covariance between Euler angle estimates. Future functionality. The values are currently set to their Do-Not-Use values. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|-----------------|----------------------|-------------------------------------|
| AuxAntPositions | Number: | 5942 |
| | "OnChange" interval: | default PVT output rate (see 4.1.8) |

The `AuxAntPositions` block contains the relative position and velocity of the different antennas in a multi-antenna receiver. The coordinates are expressed in the local-level ENU reference frame.

When the antenna positions cannot be estimated, the baseline vectors are set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of <code>AuxAntPositionSub</code> sub-blocks in this <code>AuxAntPositions</code> block |
| SBLength | u1 | 1 byte | | Length of one sub-block in bytes |
| <i>AuxAntPosition</i> | ... | ... | | <i>A succession of N AuxAntPositionSub sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

`AuxAntPositionSub` sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|-------|---------|--------------------|--|
| NrSV | u1 | | 255 | Total number of satellites tracked by the antenna identified by the <code>AuxAntID</code> field and used in the attitude computation. |
| Error | u1 | | | Aux antenna position error code: 0: No error 1: Not enough measurements 2: Reserved 3: Reserved If <code>error</code> is not 0, the coordinates reported later in this block are all set to their Do-Not-Use value. |
| AmbiguityType | u1 | | 255 | Aux antenna positions obtained with 0: Fixed ambiguities 1: Float ambiguities |
| AuxAntID | u1 | | | Auxiliary antenna ID: 1 for the first auxiliary antenna, 2 for the second, etc... |
| DeltaEast | f8 | 1 m | $-2 \cdot 10^{10}$ | Position in East direction (relative to main antenna) |
| DeltaNorth | f8 | 1 m | $-2 \cdot 10^{10}$ | Position in North direction (relative to main antenna) |
| DeltaUp | f8 | 1 m | $-2 \cdot 10^{10}$ | Position in Up direction (relative to main antenna) |
| EastVel | f8 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in East direction (relative to main antenna) |
| NorthVel | f8 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in North direction (relative to main antenna) |
| UpVel | f8 | 1 m / s | $-2 \cdot 10^{10}$ | Velocity in Up direction (relative to main antenna) |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------|--|
| EndOfAtt | Number: 5943 "OnChange" interval: default PVT output rate (see 4.1.8) |
|----------|--|

This block marks the end of transmission of all GNSS-attitude related blocks belonging to the same epoch.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|--------------------------------|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.11 Receiver Time Blocks

| | |
|--------------|-------------------------|
| ReceiverTime | Number: 5914 |
| | "OnChange" interval: 1s |

The `ReceiverTime` block provides the current time with a 1-second resolution in the receiver time scale and UTC.

The level of synchronization of the receiver time with the satellite system time is provided in the `SyncLevel` field.

UTC time is provided if the UTC parameters have been received from at least one GNSS satellite. If the UTC time is not available, the corresponding fields are set to their Do-Not-Use value.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|----------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| UTCYear | i1 | 1 year | –128 | Current year in the UTC time scale (2 digits). From 0 to 99, or -128 if not available |
| UTCMonth | i1 | 1 month | –128 | Current month in the UTC time scale. From 1 to 12, or -128 if not available |
| UTCDay | i1 | 1 day | –128 | Current day in the UTC time scale. From 1 to 31, or -128 if not available |
| UTCHour | i1 | 1 hour | –128 | Current hour in the UTC time scale. From 0 to 23, or -128 if not available |
| UTCMin | i1 | 1 minute | –128 | Current minute in the UTC time scale. From 0 to 59, or -128 if not available |
| UTCSec | i1 | 1 s | –128 | Current second in the UTC time scale. From 0 to 59, or -128 if not available |
| DeltaLS | i1 | 1 s | –128 | Integer second difference between UTC time and GPS system time. Positive if GPS time is ahead of UTC. Set to -128 if not available. |
| SyncLevel | u1 | | | Bit field indicating the synchronization level of the receiver time. If bits 0 to 2 are set, full synchronization is achieved: Bit 0: WNSSET: if this bit is set, the receiver week number is set. Bit 1: TOWSET: if this bit is set, the receiver time-of-week is set to within 20ms. Bit 2: FINETIME: if this bit is set, the receiver time-of-week is within the limit specified by the <code>setClockSyncThreshold</code> command. Bit 3: Reserved Bit 4: i Reserved Bits 5-7: Reserved |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------|---|
| xPPSOffset | Number: 5911 "OnChange" interval: PPS rate |
|------------|---|

The `xPPSOffset` block contains the offset between the true xPPS pulse and the actual pulse output by the receiver. It is output right after each xPPS pulse.

On receivers with more than one independent PPS outputs, this block always refers to the first PPS output.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------------------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SyncAge | u1 | 1 s | | Age of the last synchronization to system time. The xPPS pulse is regularly resynchronized with system time. This field indicates the number of seconds elapsed since the last resynchronization. SyncAge is constrained to the 0-255s range. If the age is higher than 255s, SyncAge is set to 255. If the PPS is synchronized with the internal receiver time (Timescale = 3), SyncAge is always set to 0. |
| TimeScale | u1 | | | Time scale to which the xPPS pulse is referenced, as set with the setPPSParameters command: 1: GPS time 2: UTC 3: Receiver time 4: GLONASS time 5: Galileo time 6: BeiDou time |
| Offset | f4 | $1 \cdot 10^{-9}$ s | | Offset of the xPPS output by the receiver with respect to its true position. Offset is negative when the xPPS pulse is in advance with respect to its true position. See also section 1.19 for an explanation of the xPPS generation principle, and for a description of the xPPS offset. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.12 External Event Blocks

These blocks report the state of the receiver applicable at the instant of a level transition on one of its “Event” pins. The receiver time is reported in the `ExtEvent` SBF block, and the receiver position is reported in the `ExtEventPVTCartesian` and the `ExtEventPVTGeodetic` blocks.

If enabled, upon detection of an event, these three blocks are output in the following order, with no other SBF blocks in between them:

1. `ExtEvent`;
2. `ExtEventPVTCartesian`;
3. `ExtEventPVTGeodetic`.

All blocks referring to the same event contain the same time stamp in the `TOW` and `WNC` fields.

| | |
|----------|---|
| ExtEvent | Number: 5924 |
| | "OnChange" interval: each time an event is detected |

The `ExtEvent` block contains the time tag of a voltage transition on one of the "Event" input pins.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | External time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Source | u1 | | | Input pin where this external event has been detected. The following values are defined: 1: EventA 2: EventB |
| Polarity | u1 | | | 0: rising edge event 1: falling edge event |
| Offset | f4 | 1 s | | Event time offset with respect to TOW, including the potential delay specified with the setEventParameters command. The time of week of the external event is given by: $t_{\text{ext,rx}} [\text{s}] = \text{TOW}/1000 + \text{Offset}$ $t_{\text{ext,rx}}$ refers to the receiver system time scale. Use the <code>RxClkBias</code> field to convert this time to the GNSS time scale. |
| RxClkBias | f8 | 1 s | $-2 \cdot 10^{10}$ | Receiver clock bias at the time of event. The clock bias is relative to the time system of the last PVT computation (see the <code>TimeSystem</code> field of the <code>PVTCartesian</code> or <code>PVTGeodetic</code> blocks). To get the time of week of the external event in GNSS time, use: $t_{\text{ext,GNSS}} [\text{s}] = \text{TOW}/1000 + \text{Offset} - \text{RxClkBias}$. The accuracy of the clock bias is dependent on the age of the last PVT solution. When the receiver has been unable to compute a PVT during the last 10 minutes, this field is set to its Do-Not-Use value. |
| PVTAge | u2 | 1 s | | Age of the last PVT solution. If the PVT age is larger than 10 minutes (600s), this value is clipped to 600. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------------|--|
| ExtEventPVTCartesian | Number: 4037 |
| | "OnChange" interval: each time an external event is detected |

This block contains the position, velocity and time (PVT) solution applicable at the time of an external event, in a Cartesian coordinate system.

This block has the same structure and description as the `PVTCartesian` block, except that the `TOW` and `WNc` fields refer to the time at which the electrical transition on the event pin has been detected (with a millisecond resolution), and that the position is computed at the event time, taking into account a possible user-defined delay set by the **setEventParameters** command.

A user needing the sub-millisecond part of the event time must refer to the `Offset` field of the corresponding `ExtEvent` block. The corresponding `ExtEvent` block is the last of the `ExtEvent` blocks having been output by the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|---------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | External time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode, Static, auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| X | f8 | 1 m | $-2 \cdot 10^{10}$ | X coordinate in coordinate frame specified by <code>Datum</code> |
| Y | f8 | 1 m | $-2 \cdot 10^{10}$ | Y coordinate in coordinate frame specified by <code>Datum</code> |
| Z | f8 | 1 m | $-2 \cdot 10^{10}$ | Z coordinate in coordinate frame specified by <code>Datum</code> |
| Undulation | f4 | 1 m | $-2 \cdot 10^{10}$ | Geoid undulation. See the <code>setGeoidUndulation</code> command. |
| Vx | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Not applicable |
| Vy | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Not applicable |
| Vz | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Not applicable |

| | | | | |
|-------------|----|----------|--------------------|--|
| COG | f4 | 1 degree | $-2 \cdot 10^{10}$ | Course over ground: this is defined as the angle of the vehicle with respect to the local level North, ranging from 0 to 360, and increasing towards east. Set to the Do-Not-Use value when the speed is lower than 0.1m/s. |
| RxClkBias | f8 | 1 ms | $-2 \cdot 10^{10}$ | Receiver clock bias relative to the GNSS system time reported in the <code>TimeSystem</code> field. Positive when the receiver time is ahead of the system time. To transfer the receiver time to the system time, use: $t_{GPS/GST} = t_{rx} - RxClkBias$ |
| RxClkDrift | f4 | 1 ppm | $-2 \cdot 10^{10}$ | Receiver clock drift relative to the GNSS system time (relative frequency error). Positive when the receiver clock runs faster than the system time. |
| TimeSystem | u1 | | 255 | Time system of which the offset is provided in this sub-block: 0: GPS time 1: Galileo time 3: GLONASS time 4: BeiDou time 5: QZSS time |
| Datum | u1 | | 255 | This field defines in which datum the coordinates are expressed: 0: WGS84/ITRS 19: Datum equal to that used by the DGNSS/RTK base station 30: ETRS89 (ETRF2000 realization) 31: NAD83(2011), North American Datum (2011) 32: NAD83(PA11), North American Datum, Pacific plate (2011) 33: NAD83(MA11), North American Datum, Marianas plate (2011) 34: GDA94(2010), Geocentric Datum of Australia (2010) 35: GDA2020, Geocentric Datum of Australia 2020 250: First user-defined datum 251: Second user-defined datum |
| NrSV | u1 | | 255 | Total number of satellites used in the PVT computation. |
| WACorrInfo | u1 | | 0 | Bit field providing information about which wide area corrections have been applied: Bit 0: set if orbit and satellite clock correction information is used Bit 1: set if range correction information is used Bit 2: set if ionospheric information is used Bit 3: set if orbit accuracy information is used (UERE/SISA) Bit 4: set if DO229 Precision Approach mode is active Bits 5-7: Reserved |
| ReferenceID | u2 | | 65535 | This field indicates the reference ID of the differential information used. In case of DGPS or RTK operation, this field is to be interpreted as the base station identifier. In SBAS operation, this field is to be interpreted as the PRN of the geostationary satellite used (from 120 to 158). If multiple base stations or multiple geostationary satellites are used the value is set to 65534. |
| MeanCorrAge | u2 | 0.01 s | 65535 | In case of DGPS or RTK, this field is the mean age of the differential corrections. In case of SBAS operation, this field is the mean age of the 'fast corrections' provided by the SBAS satellites. |
| SignalInfo | u4 | | 0 | Bit field indicating the type of GNSS signals having been used in the PVT computations. If a bit i is set, the signal type having index i has been used. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |

Rev 1

| | | | | |
|-----------|-------|----------|-------|--|
| AlertFlag | u1 | | 0 | <p>Bit field indicating integrity related information:</p> <p>Bits 0-1: RAIM integrity flag: 0: RAIM not active (integrity not monitored) 1: RAIM integrity test successful 2: RAIM integrity test failed 3: Reserved</p> <p>Bit 2: set if integrity has failed as per Galileo HPCA (HMI Probability Computation Algorithm)</p> <p>Bit 3: set if Galileo ionospheric storm flag is active</p> <p>Bit 4: Reserved</p> <p>Bits 5-7: Reserved</p> |
| NrBases | u1 | | 0 | Number of base stations used in the PVT computation. |
| PPPInfo | u2 | 1 s | 0 | <p>Bit field containing PPP-related information:</p> <p>Bits 0-11: Age of the last seed, in seconds. The age is clipped to 4091s. This field must be ignored when the seed type is 0 (see bits 13-15 below).</p> <p>Bit 12: Reserved</p> <p>Bits 13-15: Type of last seed: 0: Not seeded or not in PPP positioning mode 1: Manual seed 2: Seeded from DGPS 3: Seeded from RTKFixed</p> |
| Latency | u2 | 0.0001 s | 65535 | Time elapsed between the time of applicability of the position fix and the generation of this SBF block by the receiver. This time includes the receiver processing time, but not the communication latency. |
| HAccuracy | u2 | 0.01 m | 65535 | 2DRMS horizontal accuracy: twice the root-mean-square of the horizontal distance error. The horizontal distance between the true position and the computed position is expected to be lower than HAccuracy with a probability of at least 95%. The value is clipped to 65534 = 655.34m |
| VAccuracy | u2 | 0.01 m | 65535 | 2-sigma vertical accuracy. The vertical distance between the true position and the computed position is expected to be lower than VAccuracy with a probability of at least 95%. The value is clipped to 65534 = 655.34m. |
| Misc | u1 | | | <p>Bit field containing miscellaneous flags:</p> <p>Bit 0: In DGNSS or RTK mode, set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown.</p> <p>Bit 1: Set if the phase center offset is compensated for at the rover, unset if not or unknown.</p> <p>Bit 2: Proprietary.</p> <p>Bit 3: Proprietary.</p> <p>Bits 4-5: Proprietary.</p> <p>Bits 6-7: Flag indicating whether the marker position reported in this block is also the ARP position (i.e. whether the ARP-to-marker offset provided with the setAntennaOffset command is zero or not) 0: Unknown 1: The ARP-to-marker offset is zero 2: The ARP-to-marker offset is not zero</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

Rev 2

| | |
|---------------------|--|
| ExtEventPVTGeodetic | Number: 4038 "OnChange" interval: each time an external event is detected |
|---------------------|--|

This block contains the position, velocity and time (PVT) solution applicable at the time of an external event, in an ellipsoidal coordinate system.

This block has the same structure and description as the `PVTGeodetic` block, except that the `TOW` and `WNc` fields refer to the time at which the electrical transition on the event pin has been detected (with a millisecond resolution), and that the position is computed at the event time, taking into account a possible user-defined delay set by the **setEventParameters** command.

A user needing the sub-millisecond part of the event time must refer to the `Offset` field of the corresponding `ExtEvent` block. The corresponding `ExtEvent` block is the last of the `ExtEvent` blocks having been output by the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|---------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | External time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | <p>Bit field indicating the GNSS PVT mode, as follows:</p> <p>Bits 0-3: type of PVT solution:</p> <ul style="list-style-type: none"> 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved <p>Bits 4-5: Reserved</p> <p>Bit 6: Set if the user has entered the command <code>setPVTMode, Static, auto</code> and the receiver is still in the process of determining its fixed position.</p> <p>Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed).</p> |
| Error | u1 | | | <p>PVT error code. The following values are defined:</p> <ul style="list-style-type: none"> 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Latitude | f8 | 1 rad | $-2 \cdot 10^{10}$ | Latitude, from $-\pi/2$ to $+\pi/2$, positive North of Equator |
| Longitude | f8 | 1 rad | $-2 \cdot 10^{10}$ | Longitude, from $-\pi$ to $+\pi$, positive East of Greenwich |
| Height | f8 | 1 m | $-2 \cdot 10^{10}$ | Ellipsoidal height (with respect to the ellipsoid specified by <code>Datum</code>) |
| Undulation | f4 | 1 m | $-2 \cdot 10^{10}$ | Geoid undulation. See the <code>setGeoidUndulation</code> command. |
| Vn | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Not applicable |
| Ve | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Not applicable |
| Vu | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Not applicable |

| | | | | |
|-------------|----|----------|--------------------|--|
| COG | f4 | 1 degree | $-2 \cdot 10^{10}$ | Course over ground: this is defined as the angle of the vehicle with respect to the local level North, ranging from 0 to 360, and increasing towards east. Set to the Do-Not-Use value when the speed is lower than 0.1m/s. |
| RxClkBias | f8 | 1 ms | $-2 \cdot 10^{10}$ | Receiver clock bias relative to the GNSS system time reported in the <code>TimeSystem</code> field. Positive when the receiver time is ahead of the system time. To transfer the receiver time to the system time, use: $t_{GPS/GST} = t_{rx} - RxClkBias$ |
| RxClkDrift | f4 | 1 ppm | $-2 \cdot 10^{10}$ | Receiver clock drift relative to the GNSS system time (relative frequency error). Positive when the receiver clock runs faster than the system time. |
| TimeSystem | u1 | | 255 | Time system of which the offset is provided in this sub-block: 0: GPS time 1: Galileo time 3: GLONASS time 4: BeiDou time 5: QZSS time |
| Datum | u1 | | 255 | This field defines in which datum the coordinates are expressed: 0: WGS84/ITRS 19: Datum equal to that used by the DGNSS/RTK base station 30: ETRS89 (ETRF2000 realization) 31: NAD83(2011), North American Datum (2011) 32: NAD83(PA11), North American Datum, Pacific plate (2011) 33: NAD83(MA11), North American Datum, Marianas plate (2011) 34: GDA94(2010), Geocentric Datum of Australia (2010) 35: GDA2020, Geocentric Datum of Australia 2020 250: First user-defined datum 251: Second user-defined datum |
| NrSV | u1 | | 255 | Total number of satellites used in the PVT computation. |
| WACorrInfo | u1 | | 0 | Bit field providing information about which wide area corrections have been applied: Bit 0: set if orbit and satellite clock correction information is used Bit 1: set if range correction information is used Bit 2: set if ionospheric information is used Bit 3: set if orbit accuracy information is used (UERE/SISA) Bit 4: set if DO229 Precision Approach mode is active Bits 5-7: Reserved |
| ReferenceID | u2 | | 65535 | This field indicates the reference ID of the differential information used. In case of DGPS or RTK operation, this field is to be interpreted as the base station identifier. In SBAS operation, this field is to be interpreted as the PRN of the geostationary satellite used (from 120 to 158). If multiple base stations or multiple geostationary satellites are used the value is set to 65534. |
| MeanCorrAge | u2 | 0.01 s | 65535 | In case of DGPS or RTK, this field is the mean age of the differential corrections. In case of SBAS operation, this field is the mean age of the 'fast corrections' provided by the SBAS satellites. |
| SignalInfo | u4 | | 0 | Bit field indicating the type of GNSS signals having been used in the PVT computations. If a bit i is set, the signal type having index i has been used. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |

Rev 1

| | | | | |
|-----------|-------|----------|-------|--|
| AlertFlag | u1 | | 0 | <p>Bit field indicating integrity related information:</p> <p>Bits 0-1: RAIM integrity flag: 0: RAIM not active (integrity not monitored) 1: RAIM integrity test successful 2: RAIM integrity test failed 3: Reserved</p> <p>Bit 2: set if integrity has failed as per Galileo HPCA (HMI Probability Computation Algorithm)</p> <p>Bit 3: set if Galileo ionospheric storm flag is active</p> <p>Bit 4: Reserved</p> <p>Bits 5-7: Reserved</p> |
| NrBases | u1 | | 0 | Number of base stations used in the PVT computation. |
| PPPInfo | u2 | 1 s | 0 | <p>Bit field containing PPP-related information:</p> <p>Bits 0-11: Age of the last seed, in seconds. The age is clipped to 4091s. This field must be ignored when the seed type is 0 (see bits 13-15 below).</p> <p>Bit 12: Reserved</p> <p>Bits 13-15: Type of last seed: 0: Not seeded or not in PPP positioning mode 1: Manual seed 2: Seeded from DGPS 3: Seeded from RTKFixed</p> |
| Latency | u2 | 0.0001 s | 65535 | Time elapsed between the time of applicability of the position fix and the generation of this SBF block by the receiver. This time includes the receiver processing time, but not the communication latency. |
| HAccuracy | u2 | 0.01 m | 65535 | 2DRMS horizontal accuracy: twice the root-mean-square of the horizontal distance error. The horizontal distance between the true position and the computed position is expected to be lower than <code>HAccuracy</code> with a probability of at least 95%. The value is clipped to <code>65534 = 655.34m</code> |
| VAccuracy | u2 | 0.01 m | 65535 | 2-sigma vertical accuracy. The vertical distance between the true position and the computed position is expected to be lower than <code>VAccuracy</code> with a probability of at least 95%. The value is clipped to <code>65534 = 655.34m</code> . |
| Misc | u1 | | | <p>Bit field containing miscellaneous flags:</p> <p>Bit 0: In DGNSS or RTK mode, set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown.</p> <p>Bit 1: Set if the phase center offset is compensated for at the rover, unset if not or unknown.</p> <p>Bit 2: Proprietary.</p> <p>Bit 3: Proprietary.</p> <p>Bits 4-5: Proprietary.</p> <p>Bits 6-7: Flag indicating whether the marker position reported in this block is also the ARP position (i.e. whether the ARP-to-marker offset provided with the <code>setAntennaOffset</code> command is zero or not) 0: Unknown 1: The ARP-to-marker offset is zero 2: The ARP-to-marker offset is not zero</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

Rev 2

| | |
|----------------------|--|
| ExtEventBaseVectGeod | Number: 4217 "OnChange" interval: each time an external event is detected |
|----------------------|--|

...

| Parameter | Type | Units | Do-Not-Use | Description |
|------------------------|--------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | External time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of baselines for which relative position, velocity and direction are provided in this SBF block, i.e. number of ExtEventVectorInfoGeod sub-blocks. If N is 0, there are no baseline available for this epoch. |
| SBLength | u1 | 1 byte | | Length of one sub-block |
| ExtEventVectorInfoGeod | ... | ... | | A succession of N ExtEventVectorInfoGeod sub-blocks, see definition below |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

ExtEventVectorInfoGeod sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|------|-------|--------------------|---|
| NrSV | u1 | | | Number of satellites for which corrections are available from the base station identified by the <code>ReferenceID</code> field. |
| Error | u1 | | | PVT error code. The following values are defined: 0: No Error 1: Not enough measurements 2: Not enough ephemerides available 3: DOP too large (larger than 15) 4: Sum of squared residuals too large 5: No convergence 6: Not enough measurements after outlier rejection 7: Position output prohibited due to export laws 8: Not enough differential corrections available 9: Base station coordinates unavailable 10: Ambiguities not fixed and user requested to only output RTK-fixed positions |
| Mode | u1 | | | Bit field indicating the GNSS PVT mode, as follows: Bits 0-3: type of PVT solution: 0: No GNSS PVT available (the <code>Error</code> field indicates the cause of the absence of the PVT solution) 1: Stand-Alone PVT 2: Differential PVT 3: Fixed location 4: RTK with fixed ambiguities 5: RTK with float ambiguities 6: SBAS aided PVT 7: moving-base RTK with fixed ambiguities 8: moving-base RTK with float ambiguities 10: Precise Point Positioning (PPP) 12: Reserved Bits 4-5: Reserved Bit 6: Set if the user has entered the command <code>setPVTMode,Static,auto</code> and the receiver is still in the process of determining its fixed position. Bit 7: 2D/3D flag: set in 2D mode (height assumed constant and not computed). |
| Misc | u1 | | | Bit field containing miscellaneous flags: Bit 0: Set if the baseline points to the base station ARP. Unset if it points to the antenna phase center, or if unknown. Bit 1: Set if the phase center offset is compensated for at the rover (i.e. the baseline starts from the antenna ARP), unset if not or unknown. Bit 2: Proprietary. Bit 3: Proprietary. Bits 4-5: Proprietary. Bits 6-7: Reserved |
| DeltaEast | f8 | 1 m | $-2 \cdot 10^{10}$ | East baseline component (from rover to base) |
| DeltaNorth | f8 | 1 m | $-2 \cdot 10^{10}$ | North baseline component (from rover to base) |
| DeltaUp | f8 | 1 m | $-2 \cdot 10^{10}$ | Up baseline component (from rover to base) |

| | | | | |
|-------------|-------|--------------|--------------------|---|
| DeltaVe | f4 | 1 m / s | $-2 \cdot 10^{10}$ | East velocity of base with respect to rover |
| DeltaVn | f4 | 1 m / s | $-2 \cdot 10^{10}$ | North velocity of base with respect to rover |
| DeltaVu | f4 | 1 m / s | $-2 \cdot 10^{10}$ | Up velocity of base with respect to rover |
| Azimuth | u2 | 0.01 degrees | 65535 | Azimuth of the base station (from 0 to 360°, increasing towards east) |
| Elevation | i2 | 0.01 degrees | -32768 | Elevation of the base station (from -90° to 90°) |
| ReferenceID | u2 | | | Base station ID |
| CorrAge | u2 | 0.01 s | 65535 | Age of the oldest differential correction used for this baseline computation. |
| SignalInfo | u4 | | 0 | Bit field indicating the GNSS signals for which differential corrections are available from the base station identified by <code>ReferenceID</code> . If bit <i>i</i> is set, corrections for the signal type having index <i>i</i> are available. The signal numbers are listed in section 4.1.10. Bit 0 (GPS-C/A) is the LSB of <code>SignalInfo</code> . |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------------|--|
| ExtEventAttEuler | Number: 4237 "OnChange" interval: each time an external event is detected |
|------------------|--|

This block contains the Euler angles (pitch, roll and heading) applicable at the time of an external event.

This block has the same structure and description as the AttEuler block, except that the TOW and WNc fields refer to the time at which the electrical transition on the event pin has been detected (with a millisecond resolution), and that the position is computed at the event time, taking into account a possible user-defined delay set by the **setEventParameters** command.

A user needing the sub-millisecond part of the event time must refer to the Offset field of the corresponding ExtEvent block. The corresponding ExtEvent block is the last of the ExtEvent blocks having been output by the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|--------------|--------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | External time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| NrSV | u1 | | 255 | The average over all antennas of the number of satellites currently included in the attitude calculations. |
| Error | u1 | | | <p>Bit field providing error information. For each antenna baseline, two bits are used to provide error information:</p> <p>Bits 0-1: Error code for Main-Aux1 baseline: 0: No error 1: Not enough measurements 2: Reserved 3: Reserved</p> <p>Bits 2-3: Error code for Main-Aux2 baseline, same definition as bit 0-1. Bits 4-6: Reserved Bit 7: Set when GNSS-based attitude not requested by user. In that case, the other bits are all zero.</p> |
| Mode | u2 | | | <p>Attitude mode code:</p> 0: No attitude 1: Heading, pitch (roll = 0), aux antenna positions obtained with float ambiguities 2: Heading, pitch (roll = 0), aux antenna positions obtained with fixed ambiguities 3: Heading, pitch, roll, aux antenna positions obtained with float ambiguities 4: Heading, pitch, roll, aux antenna positions obtained with fixed ambiguities |
| Reserved | u2 | | | Reserved for future use, to be ignored by decoding software |
| Heading | f4 | 1 degree | $-2 \cdot 10^{10}$ | Heading |
| Pitch | f4 | 1 degree | $-2 \cdot 10^{10}$ | Pitch |
| Roll | f4 | 1 degree | $-2 \cdot 10^{10}$ | Roll |
| PitchDot | f4 | 1 degree / s | $-2 \cdot 10^{10}$ | Not applicable |

| | | | | |
|------------|-------|--------------|--------------------|--------------------------|
| RollDot | f4 | 1 degree / s | $-2 \cdot 10^{10}$ | Not applicable |
| HeadingDot | f4 | 1 degree / s | $-2 \cdot 10^{10}$ | Not applicable |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.13 Differential Correction Blocks

| | | |
|------------|----------------------|---|
| DiffCorrIn | Number: | 5919 |
| | "OnChange" interval: | each time a RTCM or CMR message is received |

The `DiffCorrIn` block contains incoming RTCM or CMR messages. The length of the block depends on the message type and contents.

| Parameter | Type | Units | Do-Not-Use | Description |
|--|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | 0: RTCMv2 1: CMRv2 2: RTCMv3 3: RTCMV (a proprietary variant of RTCM2) 4: SPARTN 5: Reserved |
| Source | u1 | | 255 | Indicates the receiver connection from which the message has been received: 0: COM1 1: COM2 2: COM3 3: COM4 4: USB1 5: USB2 6: IP connection 7: SBF file 8: L-Band (message decoded by the built-in L-band demodulator) 9: NTRIP 10: OTG1 11: OTG2 12: Bluetooth 15: UHF modem 16: IPR connection 17: Direct call port 18: IPS connection |
| If the Mode field is 0 then this field is available: | | | | |
| RTCM2Words | u4[M] | | | 30-bit words of the RTCM2 message. The Data Word Length (number of 32 bit words) is variable and depends on the RTCM2 message contents. It can be computed by the following piece of C code: $N = 2 + ((RTCM2Words[1] \gg 9) \& 0x1f);$ N can range from 2 to 33. The first two words are the RTCM2 message header and they are always present. Each of the words is organized as follows: Bits 0-5: 6 parity bits. They are provided for the sake of completeness. Parity doesn't need to be checked, since the DiffCorrIn block only contains valid words. Bits 6-29: 24 information-containing bits of the word. The first received bit is the MSB. Bits 30-31: bit 0 and 1 of the preceding word |
| If the Mode field is 1 then this field is available: | | | | |
| CMRMessage | u1[M] | | | N depends on the CMR message type. |
| If the Mode field is 2 then this field is available: | | | | |
| RTCM3Message | u1[M] | | | N depends on the RTCM 3 message type. |

| | | | |
|--|-------|--|--------------------------------------|
| If the Mode field is 3 then this field is available: | | | |
| RTCMVMessage | u1[N] | | N depends on the RTCMV message type. |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|-------------|--|
| BaseStation | Number: 5949 |
| | "OnChange" interval: block generated each time a differential correction message related to the base station coordinates is received |

The `BaseStation` block contains the ECEF coordinates of the base station the receiver is currently connected to. This block helps users accessing the base station coordinates via SBF instead of having to decode the specific differential correction message (see the `DiffCorrIn` SBF block above).

The interpretation to give to the X, Y, Z ECEF coordinates is dependent on the value of the `Source` field:

| Value of Source | Interpretation of X, Y, Z |
|-----------------|-----------------------------------|
| 0, 4 or 10 | Coordinate of the L1 phase center |
| 2 or 8 | Antenna reference point |
| 9 | Proprietary |

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| BaseStationID | u2 | | | The base station ID |
| BaseType | u1 | | | Base station type: 0: Fixed 1: Moving (reserved for future use) 255: Unknown |
| Source | u1 | | | Source of the base station coordinates: 0: RTCM 2.x (Msg 3) 2: RTCM 2.x (Msg 24) 4: CMR 2.x (Msg 1) 8: RTCM 3.x (Msg 1005 or 1006) 9: RTCMV (Msg 3) 10: CMR+ (Type 2) |
| Datum | u1 | | 255 | Not applicable |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software |
| X | f8 | 1 m | | Antenna X coordinate expressed in the datum specified by the <code>Datum</code> field |
| Y | f8 | 1 m | | Antenna Y coordinate |
| Z | f8 | 1 m | | Antenna Z coordinate |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|---|
| RTCMDatum | Number: 4049 |
| | "OnChange" interval: block generated each time a set of transformation parameters is received |

This block reports the source and target datum names as transmitted in RTCM 3.x message types 1021 or 1022. It also reports the corresponding height and quality indicators.

If a service provider only sends out message types 1021 or 1022, this block is transmitted immediately after reception of MT1021 or MT1022. If message types 1023 or 1024 are also sent out, this block is transmitted after the reception of these messages and the `QualityInd` field is set accordingly.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| SourceCRS | c1[32] | | | Name of the source Coordinate Reference System, right-padded with zeros. |
| TargetCRS | c1[32] | | | Name of the target Coordinate Reference System, right-padded with zeros. |
| Datum | u1 | | | See the <code>Datum</code> field in the <code>PosLocal</code> and <code>PosProjected</code> SBF blocks. Datum is set to 255 if this <code>SourceCRS/TargetCRS</code> pair is currently not used by the receiver. |
| HeightType | u1 | | | Height Indicator field from MT1021 and MT1022. This field indicates how to interpret the height reported in the <code>PosLocal</code> and the <code>PosProjected</code> SBF blocks: 0: Geometrical height 1: Physical height (height definition in target CRS) 2: Physical height (height definition in source CRS) |
| QualityInd | u1 | | | Bit field indicating the maximum approximation error after applying the transformation: Bits 0-3: horizontal quality indicator: 0: Unknown quality 1: Quality better than 21 mm (from MT1021/1022) 2: Quality 21 to 50 mm (from MT1021/1022) 3: Quality 51 to 200 mm (from MT1021/1022) 4: Quality 201 to 500 mm (from MT1021/1022) 5: Quality 501 to 2000 mm (from MT1021/1022) 6: Quality 2001 to 5000 mm (from MT1021/1022) 7: Quality worse than 5001 mm (from MT1021/1022) 9: Quality 0 to 10 mm (from MT1023/1024) 10: Quality 11 to 20 mm (from MT1023/1024) 11: Quality 21 to 50 mm (from MT1023/1024) 12: Quality 51 to 100 mm (from MT1023/1024) 13: Quality 101 to 200 mm (from MT1023/1024) 14: Quality 201 to 500 mm (from MT1023/1024) 15: Quality worse than 501 mm (from MT1023/1024) Bits 4-7: vertical quality indicator, same definition as bits 0-3. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.14 L-Band Demodulator Blocks

| | |
|--------------------|-------------------------|
| LBandTrackerStatus | Number: 4201 |
| | "OnChange" interval: 1s |

The `LBandTrackerStatus` block provides general information on the tracking status of the L-band signals.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of L-band trackers for which data is provided in this SBF block, i.e. number of <code>TrackData</code> sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one sub-block |
| <i>TrackData</i> | ... | ... | | <i>A succession of N TrackData sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

TrackData sub-block definition:

| | Parameter | Type | Units | Do-Not-Use | Description |
|-------|------------|-------|------------|--------------------|---|
| | Frequency | u4 | 1 Hz | 0 | Nominal frequency of the beam for which data is provided in this sub-block. |
| | Baudrate | u2 | 1 baud | 0 | Baudrate of the beam |
| | ServiceID | u2 | | | Service ID of the beam. Set to 0 for the LBAS1 beam. Set to 1 for the LBAS2 beam when received through an NTRIP connection. This field must be ignored if the <code>Status</code> field is set to anything else than 3 (Locked). |
| | FreqOffset | f4 | 1 Hz | $-2 \cdot 10^{10}$ | Frequency offset of the demodulator, if available |
| | CN0 | u2 | 0.01 dB-Hz | 0 | Current C/N_0 value |
| | AvgPower | i2 | 0.01 dB | -32768 | Not applicable. |
| | AGCGain | i1 | 1 dB | -128 | Not applicable. |
| | Mode | u1 | | | Current operation mode: 0: normal |
| | Status | u1 | | | Current status: 0: Idle 1: Search 2: FrameSearch 3: Locked |
| Rev 2 | SVID | u1 | | | Satellite ID, see 4.1.9 |
| Rev 1 | LockTime | u2 | 1 s | | Lock time to the L-band signal, clipped to 65535 seconds. |
| Rev 3 | Source | u1 | | | L-band tracking module: 0: Unknown 1: Internal 2: LBR board 3: NTRIP. L-band data received over NTRIP. In that case, the other fields in this sub-block are not applicable and set to their Do-Not-Use value. |
| | Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | | |
|------------|----------------------|---|
| LBandBeams | Number: | 4204 |
| | "OnChange" interval: | Block generated each time beam status data is decoded |

This block contains the name, longitude and beam frequency of the L-band geostationary satellites known by the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of L-band beams for which data is provided in this SBF block, i.e. number of <i>BeamInfo</i> sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one sub-block |
| <i>BeamInfo</i> | ... | ... | | <i>A succession of N BeamInfo sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

BeamInfo sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|--------------|-------|--------------|------------|--|
| SVID | u1 | | | SVID associated to the satellite for which information is provided in this sub-block. SVID ranges from 107 to 119. See also section 4.1.9. |
| SatName | c1[9] | | | Satellite Name, right padded with zeros |
| SatLongitude | i2 | 0.01 degrees | −32768 | Satellite Longitude (positive east of Greenwich) |
| BeamFreq | u4 | 1 Hz | 0 | L-band beam center frequency |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.15 Status Blocks

| | |
|---------------|--|
| ChannelStatus | Number: 4013 |
| | "OnChange" interval: default PVT output rate (see 4.1.8) |

This block describes the current satellite allocation and tracking status of the active receiver channels. Active channels are channels to which a satellite has been allocated.

This block uses a two-level sub-block structure analogous to that of the `MeasEpoch` block. For each active channel, a `ChannelSatInfo` sub-block contains all satellite-dependent information such as health, azimuth and elevation. Each of these sub-blocks contains `N2 ChannelStateInfo` sub-blocks, `N2` being the number of active antennas in a given channel (for single-antenna receivers, `N2` is one). The `ChannelStateInfo` reports information such as the tracking status and PVT usage of a given signal type tracked on a given antenna.

Inactive channels are not contained in the `ChannelStatus` block.

Health, tracking and PVT status fields are available for each satellite. These status fields consist of a sequence of up to 8 two-bit fields. Each 2-bit field contains the status of one of the signals transmitted by the satellite. The position of the 2 bits corresponding to a given signal is dependent on the constellation, but is otherwise fixed. It is indicated in the tables below.

GPS:

| Reserved | | Reserved | | L1C | | L5 | | L2C | | P2(Y) | | P1(Y) | | L1CA | |
|----------|----|----------|----|-----|----|----|---|-----|---|-------|---|-------|---|------|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

GLONASS:

| Reserved | | Reserved | | Reserved | | L3 | | L2CA | | L2P | | L1P | | L1CA | |
|----------|----|----------|----|----------|----|----|---|------|---|-----|---|-----|---|------|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

Galileo:

| Reserved | | E5-AltBOC | | E5b | | E5a | | E6BC | | E6A | | L1BC | | L1A | |
|----------|----|-----------|----|-----|----|-----|---|------|---|-----|---|------|---|-----|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

SBAS:

| Reserved | | Reserved | | Reserved | | Reserved | | Reserved | | Reserved | | L5 | | L1 | |
|----------|----|----------|----|----------|----|----------|---|----------|---|----------|---|----|---|----|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

BeiDou:

| Reserved | | Reserved | | B2b | | B2a | | B1C | | B3I | | B2I | | B1I | |
|----------|----|----------|----|-----|----|-----|---|-----|---|-----|---|-----|---|-----|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

QZSS:

| Reserved | | Reserved | | L1S | | L1C | | L6 | | L5 | | L2C | | L1CA | |
|----------|----|----------|----|-----|----|-----|---|----|---|----|---|-----|---|------|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

NavIC/IRNSS:

| Reserved | | Reserved | | Reserved | | Reserved | | Reserved | | Reserved | | Reserved | | L5 | |
|----------|----|----------|----|----------|----|----------|---|----------|---|----------|---|----------|---|----|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

| Parameter | Type | Units | Do-Not-Use | Description |
|----------------|---------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of channels for which status are provided in this SBF block, i.e. number of <code>ChannelSatInfo</code> sub-blocks. If N is 0, there are no active channels available for this epoch. |
| SB1Length | u1 | 1 byte | | Length of a <code>ChannelSatInfo</code> sub-block, excluding the nested <code>ChannelStateInfo</code> sub-blocks |
| SB2Length | u1 | 1 byte | | Length of a <code>ChannelStateInfo</code> sub-block |
| Reserved | u1[3] | | | Reserved for future use, to be ignored by decoding software |
| <i>SatInfo</i> | ... | ... | | <i>A succession of N ChannelSatInfo sub-blocks, see definition below</i> |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 |

`ChannelSatInfo` sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------|---------|----------|------------|---|
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| FreqNr | u1 | | 0 | For GLONASS FDMA signals, this is the frequency number, with an offset of 8. It ranges from 1 (corresponding to an actual frequency number of -7) to 21 (corresponding to an actual frequency number of 13). Otherwise, <code>FreqNr</code> is reserved and must be ignored by the decoding software. |
| Reserved1 | u1[2] | | | Reserved for future use, to be ignored by decoding software |
| Azimuth/RiseSet | u2 | 1 degree | 511 3 | bit field: Bits 0-8: Azimuth [0,359]. 0 is North, and Azimuth increases towards East. Bits 9-13: Reserved Bits 14-15: Rise/Set Indicator: 0: Satellite setting 1: Satellite rising 3: Elevation rate unknown |
| HealthStatus | u2 | | | Sequence of 2-bit health status fields, each of them taking one of the following values: 0 : health unknown, or not applicable 1 : healthy 3 : unhealthy The 2-bit health status is a condensed version of the health status as sent by the satellite. For SBAS, the health status is set from the almanac data (MT17). |
| Elevation | i1 | 1 degree | -128 | Elevation [-90,90] relative to local horizontal plane |
| N2 | u1 | | | Number of <code>ChannelStateInfo</code> blocks following this <code>ChannelSatInfo</code> block. There is one <code>ChannelStateInfo</code> sub-block per antenna. |
| RxChannel | u1 | | | Channel number, see section 4.1.11. |
| Reserved2 | u1 | | | Reserved for future use, to be ignored by decoding software |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 |

| | | | |
|------------------|-----|-----|---|
| <i>StateInfo</i> | ... | ... | A succession of <i>N2 ChannelStateInfo</i> sub-blocks, see definition below |
|------------------|-----|-----|---|

ChannelStateInfo sub-block definition:

| Parameter | Type | Units | Description |
|----------------|-------|-------|--|
| Antenna | u1 | | Antenna number (0 for main antenna) |
| Reserved | u1 | | Reserved for future use, to be ignored by decoding software |
| TrackingStatus | u2 | | Sequence of 2-bit tracking status fields, each of them taking one of the following values: 0: idle or not applicable 1: Search 2: Sync 3: Tracking |
| PVTStatus | u2 | | Sequence of 2-bit PVT status fields, each of them taking one of the following values: 0: not used 1: waiting for ephemeris 2: used 3: rejected |
| PVTInfo | u2 | | Internal info |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|----------------|---|
| ReceiverStatus | Number: 4014 "OnChange" interval: 1s |
|----------------|---|

The `ReceiverStatus` block provides general information on the status of the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| CPUload | u1 | 1 % | 255 | Load on the receiver's CPU. The load should stay below 80% in normal operation. Higher loads might result in data loss. |
| ExtError | u1 | | | <p>Bit field reporting external errors, i.e. errors detected in external data. Upon detection of an error, the corresponding bit is set for a duration of one second, and then resets.</p> <p>Bit 0: SISERROR: set if a violation of the signal-in-space ICD has been detected for at least one satellite while that satellite is reported as healthy. Use the command "lif, SisError" for details.</p> <p>Bit 1: DIFFCORRError: set when an anomaly has been detected in an incoming differential correction stream, causing the receiver to fail to decode the corrections. Use the command "lif, DiffCorrError" for details.</p> <p>Bit 2: EXTSENSORERROR: set when a malfunction has been detected on at least one of the external sensors connected to the receiver. Use the command "lif, ExtSensorError" for details.</p> <p>Bit 3: SETUPERROR: set when a configuration/setup error has been detected. An example of such error is when a remote NTRIP Caster is not reachable. Use the command "lif, SetupError" for details.</p> <p>Bits 4-7: Reserved</p> |
| UpTime | u4 | 1 s | | Number of seconds elapsed since the start-up of the receiver, or since the last reset. |

| | | | | |
|---------|----|--|--|---|
| RxState | u4 | | | <p>Bit field indicating the status of key components of the receiver:</p> <p>Bit 0: Reserved</p> <p>Bit 1: ACTIVEANTENNA: this bit is set when an active antenna is sensed at the main antenna connector. This functionality is only available on certain receiver models.</p> <p>Bit 2: EXT_FREQ: this bit is set if an external frequency reference is detected at the 10 MHz input, and cleared if the receiver uses its own internal clock.</p> <p>Bit 3: EXT_TIME: this bit is set if a pulse has been detected on the TimeSync input.</p> <p>Bit 4: WNSET: see corresponding bit in the SyncLevel field of the ReceiverTime block.</p> <p>Bit 5: TOWSET: see corresponding bit in the SyncLevel field of the ReceiverTime block.</p> <p>Bit 6: FINETIME: see corresponding bit in the SyncLevel field of the ReceiverTime block.</p> <p>Bit 7: INTERNALDISK_ACTIVITY: this bit is set for one second each time data is logged to the internal disk (DSK1). If the logging rate is larger than 1 Hz, set continuously.</p> <p>Bit 8: INTERNALDISK_FULL: this bit is set when the internal disk (DSK1) is full. A disk is full when it is filled to 95% of its total capacity.</p> <p>Bit 9: INTERNALDISK_MOUNTED: this bit is set when the internal disk (DSK1) is mounted.</p> <p>Bit 10: INT_ANT: this bit is set when the GNSS RF signal is taken from the internal antenna input, and cleared when it comes from the external antenna input (only applicable on receiver models featuring an internal antenna input).</p> <p>Bit 11: REFOUT_LOCKED: if set, the 10-MHz frequency provided at the REF OUT connector is locked to GNSS time. Otherwise it is free-running.</p> <p>Bit 12: LBAND_ANT: this bit is set when the L-band signal is tracked from the dedicated L-band antenna, and cleared when it is tracked from the same antenna as the GNSS signals, or when the receiver does not support L-band tracking.</p> <p>Bit 13: EXTERNALDISK_ACTIVITY: this bit is set for one second each time data is logged to the external disk (DSK2). If the logging rate is larger than 1 Hz, set continuously.</p> <p>Bit 14: EXTERNALDISK_FULL: this bit is set when the external disk (DSK2) is full. A disk is full when it is filled to 95% of its total capacity.</p> <p>Bit 15: EXTERNALDISK_MOUNTED: this bit is set when the external disk (DSK2) is mounted.</p> <p>Bit 16: PPS_IN_CAL: this bit is set when PPS IN delay calibration is on-going. Only applicable to PolaRx5TR receivers.</p> <p>Bit 17: DIFFCORR_IN: this bit is set for one second each time differential corrections are decoded. If the input rate is larger than 1 Hz, set continuously.</p> <p>Bit 18: INTERNET: this bit is set when the receiver has internet access. If not set, there is either no internet access, or the receiver could not reliably determine the status.</p> <p>Bits 19-31: Reserved</p> |
|---------|----|--|--|---|

Rev 1

| | | | | |
|-------------|-------|--------|---|---|
| RxError | u4 | | | <p>Bit field indicating whether an error occurred previously. If this field is not equal to zero, at least one error has been detected.</p> <p>Bit 0: Reserved</p> <p>Bit 1: Reserved</p> <p>Bit 2: Reserved</p> <p>Bit 3: SOFTWARE: set upon detection of a software warning or error. This bit is reset by the command "lif, error".</p> <p>Bit 4: WATCHDOG: set when the watchdog expired at least once since the last power-on.</p> <p>Bit 5: ANTENNA: set when antenna overcurrent condition is detected.</p> <p>Bit 6: CONGESTION: set when an output data congestion has been detected on at least one of the communication ports of the receiver during the last second.</p> <p>Bit 7: Reserved</p> <p>Bit 8: MISSEDEVENT: set when an external event congestion has been detected during the last second. It indicates that the receiver is receiving too many events on its EVENTx pins.</p> <p>Bit 9: CPUOVERLOAD: set when the CPU load is larger than 90%.</p> <p>Bit 10: INVALIDCONFIG: set if one or more configuration file (e.g. permissions) is invalid or absent.</p> <p>Bit 11: OUTOFGEOFENCE: set if the receiver is currently out of its permitted region of operation (geofencing).</p> <p>Bit 12: Reserved</p> <p>Bit 13: Reserved</p> <p>Bit 14: Reserved</p> <p>Bit 15: Reserved</p> <p>Bit 16: Reserved</p> <p>Bits 17-31: Reserved</p> |
| N | u1 | | | Number of AGCState sub-blocks this block contains. |
| SBLength | u1 | 1 byte | | Length of a AGCState sub-block. |
| CmdCount | u1 | | 0 | Command cyclic counter, incremented each time a command is entered that changes the receiver configuration. After the counter has reached 255, it resets to 1. |
| Temperature | u1 | 1 °C | 0 | Not applicable. |
| AGCState | ... | ... | | A succession of N AGCState sub-blocks, see definition below |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

AGCState sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|--------------|--------|-------|------------|---|
| FrontEndID | u1 | | | <p>Bit field indicating the frontend code and antenna ID:</p> <p>Bits 0-4: frontend code:</p> <ul style="list-style-type: none"> 0: GPSL1/E1 1: GLOL1 2: E6 3: GPSL2 4: GLOL2 5: L5/E5a 6: E5b/B2I 7: E5(a+b) 8: Combined GPS/GLONASS/SBAS/Galileo L1 9: Combined GPS/GLONASS L2 10: MSS/L-band 11: B1I 12: B3I 13: S-band <p>Bits 5-7: Antenna ID: 0 for main, 1 for <i>Aux1</i> and 2 for <i>Aux2</i></p> |
| Gain | i1 | 1 dB | −128 | <p>AGC gain, in dB.</p> <p>The Do-Not-Use value is used to indicate that the frontend PLL is not locked.</p> |
| SampleVar | u1 | | 0 | Normalized variance of the IF samples. The nominal value for this variance is 100. |
| BlankingStat | u1 | 1 % | | Current percentage of samples being blanked by the pulse blanking unit. This field is always 0 for receiver without pulse blanking unit. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|---------------|-------------------------|
| SatVisibility | Number: 4012 |
| | "OnChange" interval: 1s |

This block contains the azimuth and elevation of all the satellites above the horizon for which the ephemeris or almanac is available.

| Parameter | Type | Units | Do-Not-Use | Description |
|----------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of satellites for which information is provided in this SBF block, i.e. number of <code>SatInfo</code> sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one <code>SatInfo</code> sub-block |
| <i>SatInfo</i> | ... | ... | | <i>A succession of N SatInfo sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

`SatInfo` sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|-------|--------------|------------|---|
| SVID | u1 | | | Satellite ID, see 4.1.9 |
| FreqNr | u1 | | 0 | For GLONASS FDMA signals, this is the frequency number, with an offset of 8. It ranges from 1 (corresponding to an actual frequency number of -7) to 21 (corresponding to an actual frequency number of 13). Otherwise, <code>FreqNr</code> is reserved and must be ignored by the decoding software. |
| Azimuth | u2 | 0.01 degrees | 65535 | Azimuth. 0 is North, and azimuth increases towards East. |
| Elevation | i2 | 0.01 degrees | -32768 | Elevation relative to local horizontal plane. |
| RiseSet | u1 | | | Rise/set indicator: 0: satellite setting 1: satellite rising 255: elevation rate unknown |
| SatelliteInfo | u1 | | | Satellite visibility info based on: 1: almanac 2: ephemeris 255: unknown |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|-----------|-------------------------|
| InputLink | Number: 4090 |
| | "OnChange" interval: 1s |

The `InputLink` block reports statistics of the number of bytes and messages received and accepted on each active connection descriptor.

Per connection descriptor, the receiver maintains two byte counters (`NrBytesReceived` and `NrBytesAccepted`) and two message counters (`NrMsgReceived` and `NrMsgAccepted`), which are reported in the sub-blocks. These counters provide useful information on the quality of the transmission link, and of the bandwidth efficiency.

These counters (as well as the age of the last message) are reset simultaneously on the following events:

- start-up of the receiver
- overflow of one of the counters
- change of input type
- deactivation of a connection descriptor, e.g. on disconnection of USB or IP ports.

There is one sub-block per connection descriptor for which statistics is available.

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of connection descriptors for which communication link statistics are included |
| SBLength | u1 | 1 byte | | Length of one <code>InputStatsSub</code> sub-block. |
| <i>InputStats</i> | ... | ... | | <i>A succession of N <code>InputStatsSub</code> sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

InputStatsSub sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------|------|-------|------------|---|--|----------|------|-----------------|---------|-------|--------------------|----------|-------|--------------------|----------|-------|-------------------|---------|--------|--------------------|---------|---------|---|----------|---------|---|----------|-----|-----------------------------|--|-----|-----------------------------|--|-----|------------------|--|---------|--|----------|-----|--------------------------------------|--|-----|-----------------------------|--|---------|----------|--|-----|----------------------|--|---------|----------|--|
| CD | u1 | | | Identifier of the connection to which this information applies: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | Value of CD | Connection type | Example | 0-31 | COMx, with x=CD | 1: COM1 | 32-47 | USBx, with x=CD-32 | 33: USB1 | 48-63 | OTGx, with x=CD-48 | 49: OTG1 | 64-95 | IPx, with x=CD-54 | 64:IP10 | 96-127 | DSKx, with x=CD-96 | 97:DSK1 | 128-159 | NTRx, with x=CD-128 (NTRIP connections) | 129:NTR1 | 160-191 | IPsx, with x=CD-160 (IP server connections) | 161:IPS1 | 192 | BT01 (Bluetooth connection) | | 193 | BT02 (Bluetooth connection) | | 196 | UHF1 (UHF Modem) | | 200-205 | IPRx, with x=CD-200 (IP receive connections) | 201:IPR1 | 210 | DCL1 (cellular data-call connection) | | 214 | CAN1 (CAN stream interface) | | 215-219 | Reserved | | 220 | SPI1 (SPI interface) | | 221-255 | Reserved | |
| | | | | Value of CD | Connection type | Example | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 0-31 | COMx, with x=CD | 1: COM1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 32-47 | USBx, with x=CD-32 | 33: USB1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 48-63 | OTGx, with x=CD-48 | 49: OTG1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 64-95 | IPx, with x=CD-54 | 64:IP10 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 96-127 | DSKx, with x=CD-96 | 97:DSK1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 128-159 | NTRx, with x=CD-128 (NTRIP connections) | 129:NTR1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 160-191 | IPsx, with x=CD-160 (IP server connections) | 161:IPS1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 192 | BT01 (Bluetooth connection) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 193 | BT02 (Bluetooth connection) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 196 | UHF1 (UHF Modem) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 200-205 | IPRx, with x=CD-200 (IP receive connections) | 201:IPR1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 210 | DCL1 (cellular data-call connection) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 214 | CAN1 (CAN stream interface) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 215-219 | Reserved | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 220 | SPI1 (SPI interface) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | 221-255 | Reserved | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | </ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | |
|------------------|--------|-----------|------------|--|
| Type | u1 | | | Type of data: 0: none 1: DaisyChain (includes "echo" messages) 32: CMD 33: SBF 34: AsciiDisplay (see setDataInOut command) 35: RINEX 36: CGGTTS 40: BINEX 64: NMEA 96: RTCMv2 97: RTCMv3 98: CMRv2 99: RTCMV (a proprietary variant of RTCMv2) 100: SPARTN 101: LBMP 110: raw LBAS1 from e.g. NTRIP 111: raw LBAS2 from e.g. NTRIP 118: raw LBAND data from Beam1 119: raw LBAND data from Beam2 120: raw LBAND data from Beam3 121: raw LBAND data from Beam4 128: Reserved 129: Reserved 130: Reserved 131: SBG (IMU sensor) 132: Reserved 133: Reserved 134: Reserved 135: Reserved 136: Reserved 137: ADIS 160: ASCIIIn |
| AgeOfLastMessage | u2 | 1 s | 65535 | Age of the last accepted message. If the age is older than 65534s, it is clipped to 65534s. |
| NrBytesReceived | u4 | 1 byte | 4294967295 | Total number of bytes received ⁽⁶⁾ |
| NrBytesAccepted | u4 | 1 byte | 4294967295 | Total number of bytes ⁽⁶⁾ in messages that passed the check for this type of input (CRC, parity check, ...). The ratio of <code>NrBytesAccepted</code> to <code>NrBytesReceived</code> gives an indication of the quality of the communication link. |
| NrMsgReceived | u4 | 1 message | | Total number of messages of type <code>Type</code> received. |
| NrMsgAccepted | u4 | 1 message | | Total number of messages of type <code>Type</code> that were interpreted and used by the receiver. The ratio of <code>NrMsgAccepted</code> to <code>NrMsgReceived</code> gives an indication of the bandwidth usage efficiency |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

⁽⁶⁾ Note that, for RTCM 2.x, one 8-bit byte contains 6 RTCM data bits.

| | |
|------------|-------------------------|
| OutputLink | Number: 4091 |
| | "OnChange" interval: 1s |

The `OutputLink` block reports statistics of the number of bytes sent on each active connection descriptor.

Per connection descriptor, the receiver maintains two byte counters `NrBytesProduced` and `NrBytesSent`, which are reported in the sub-block. They provide an indication of the amount of data output and data lost on a given connection.

These counters are reset simultaneously on the following events:

- start-up of the receiver
- overflow of one of the counters
- deactivation of a connection descriptor, e.g. on disconnection of USB or IP ports
- change of COM port settings.

There is one `OutputStatsSub` sub-block per connection descriptor for which statistics is available. Each `OutputStatsSub` sub-block contains a number of `OutputTypeSub` sub-blocks. These sub-blocks indicate which data type has been output through the connection in question during the last second. If no output happened during the last second, there is no `OutputTypeSub` sub-block.

| Parameter | Type | Units | Do-Not-Use | Description |
|--------------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N1 | u1 | | | Number of <code>OutputStatsSub</code> sub-blocks in this <code>OutputLink</code> block. |
| SB1Length | u1 | 1 byte | | Length of an <code>OutputStatsSub</code> sub-block, excluding the nested <code>OutputTypeSub</code> sub-block |
| SB2Length | u1 | 1 byte | | Length of an <code>OutputTypeSub</code> sub-block |
| Reserved | u1[3] | | | Reserved for future use |
| <i>OutputStats</i> | ... | ... | | <i>A succession of N1 <code>OutputStatsSub</code> sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

OutputStatsSub sub-block definition:

| Parameter | Type | Units | Description | | |
|-----------------|----------------------|-------------|--|--|----------|
| CD | u1 | | Identifier of the connection to which this information applies: | | |
| | | | Value of Connection type | | Example |
| | | | CD | | |
| | | | 0-31 | COMx, with x=CD | 1: COM1 |
| | | | 32-47 | USBx, with x=CD-32 | 33: USB1 |
| | | | 48-63 | OTGx, with x=CD-48 | 49: OTG1 |
| | | | 64-95 | IPx, with x=CD-54 | 64:IP10 |
| | | | 96-127 | DSKx, with x=CD-96 | 97:DSK1 |
| | | | 128-159 | NTRx, with x=CD-128 (NTRIP connections) | 129:NTR1 |
| | | | 160-191 | IPsx, with x=CD-160 (IP server connections) | 161:IPS1 |
| | | | 192 | BT01 (Bluetooth connection) | |
| | | | 193 | BT02 (Bluetooth connection) | |
| | | | 196 | UHF1 (UHF Modem) | |
| | | | 200-205 | IPRx, with x=CD-200 (IP receive connections) | 201:IPR1 |
| | | | 210 | DCL1 (cellular data-call connection) | |
| | | | 214 | CAN1 (CAN stream interface) | |
| | | | 215-219 | Reserved | |
| 220 | SPI1 (SPI interface) | | | | |
| 221-255 | Reserved | | | | |
| N2 | u1 | | Number of OutputTypeSub sub-blocks included at the end of this OutputStatsSub sub-block | | |
| AllowedRate | u2 | 1 kbyte / s | Maximum datarate recommended on this connection | | |
| NrBytesProduced | u4 | 1 byte | Total number of bytes produced by the receiver. See also the NrBytesSent field. | | |
| NrBytesSent | u4 | 1 byte | Total number of bytes actually sent (i.e. without congestions or transmission errors). The ratio of NrBytesSent to NrBytesProduced gives an indication of the amount of bandwidth overload. NrBytesSent and NrBytesProduced are 32-bit counters. If one of them overflows, both counters are reset to zero. | | |
| NrClients | u1 | | Number of clients currently connected to this connection. Most connection types can only serve one client at a time, but each IP server (IPS) port can serve up to eight simultaneous clients. Note that when NrClients is more than one, the fields NrBytesProduced and NrBytesSent are the number of bytes produced and sent to each individual client. | | |
| Reserved | u1[3] | | Reserved for future use | | |
| Padding | u1[..] | | Padding bytes, see 4.1.5 | | |
| OutputType | ... | ... | A succession of N2 OutputTypeSub sub-blocks, see definition below | | |

Rev 1

OutputTypeSub sub-block definition:

| Parameter | Type | Units | Description |
|------------|-------|-------|--|
| Type | u1 | | Type of data: 0: none 1: DaisyChain (includes "echo" messages) 32: CMD 33: SBF 34: AsciiDisplay (see setDataInOut command) 35: RINEX 36: CGGTTS 40: BINEX 64: NMEA 96: RTCMv2 97: RTCMv3 98: CMRv2 99: RTCMV (a proprietary variant of RTCMv2) 118: raw LBAND data from Beam1 119: raw LBAND data from Beam2 120: raw LBAND data from Beam3 121: raw LBAND data from Beam4 |
| Percentage | u1 | 1 % | Percentage of the produced bytes that belong to this type (during the last second) |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|-------------------|---|
| NTRIPClientStatus | Number: 4053 "OnChange" interval: 1s |
|-------------------|---|

This block reports the current status of the NTRIP client connections.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------------|--------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of NTRIP client connections for which status is provided in this block, i.e. number of NTRIPClientConnection sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one NTRIPClientConnection sub-block |
| NTRIPClientConnection | ... | ... | | A succession of N NTRIPClientConnection sub-blocks, see definition below |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

NTRIPClientConnection sub-block definition:

| Parameter | Type | Units | Description |
|-----------|-------|-------|---|
| CDIndex | u1 | | Index of the NTRIP connection (1 for NTR1, 2 for NTR2, etc) for which status is provided in this sub-block. |
| Status | u1 | | NTRIP client status: 0: Connection disabled 1: Initializing 2: Running, differential corrections are being received and the link statistics is available in the <code>InputLink</code> block. 3: Error detected, the error code is provided in the next field. 4: Retrying, client encountered an error, we are trying to reconnect. The error code is provided in the next field. 5: Disabled since the settings are a duplicate of another active NTRIP connection. |
| ErrorCode | u1 | | NTRIP error code: 0: No error 1: Initialization error (e.g. source table retrieval failure) 2: Authentication error 3: Connection error 4: Mountpoint does not exist 5: Mountpoint unavailable 6: Waiting for GGA 7: GGA sending disabled when required by mountpoint 8: Resolving host failed 9: Out of region 10: TLS setup error 11: TLS handshake error 12: TLS fingerprint error 13: TLS time not known 254: Unknown error |
| Info | u1 | | Bitfield indicating miscellaneous info about the Connection status: Bit 0: TLS was used to make secure NTRIP connection if this bit is set Bits 1-7: Reserved |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|-------------------|---|
| NTRIPServerStatus | Number: 4122 "OnChange" interval: 1s |
|-------------------|---|

This block reports the current status of the NTRIP server connections.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------------------------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of NTRIP server connections for which status is provided in this block, i.e. number of <code>NTRIPServerConnection</code> sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one <code>NTRIPServerConnection</code> sub-block |
| <code>NTRIPServerConnection</code> | ... | ... | | A succession of <i>N</i> <code>NTRIPServerConnection</code> sub-blocks, see definition below |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

`NTRIPServerConnection` sub-block definition:

| Parameter | Type | Units | Description |
|-----------|-------|-------|--|
| CDIndex | u1 | | Index of the NTRIP connection (1 for NTR1, 2 for NTR2, etc) for which status is provided in this sub-block. |
| Status | u1 | | NTRIP server status: 0: Connection disabled 1: Initializing 2: Running, differential corrections are being sent and the link statistics is available in the <code>OutputLink</code> block. 3: Error detected, the error code is provided in the next field. 4: Error detected. Currently trying to reconnect. The error code is provided in the next field. 5: Disabled since the settings are a duplicate of another active NTRIP connection. |
| ErrorCode | u1 | | NTRIP error code: 0: No error 1: Initialization error 2: Authentication error 3: Connection error 4: Mountpoint does not exist 5: Configuration conflict error 6: Resolving host failed 7: TLS setup error 8: TLS handshake error 9: TLS fingerprint error 10: TLS time not known 254: Unknown error |
| Info | u1 | | Bitfield indicating miscellaneous info about the Connection status: Bit 0: TLS was used to make secure NTRIP connection if this bit is set Bits 1-7: Reserved |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|----------|--|
| IPStatus | Number: 4058 |
| | "OnChange" interval: output each time one or more IP parameters change |

This block contains information on the receiver's Ethernet interface (hostname, IP address, gateway, netmask and MAC address).

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|---------|---------|-----------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| MACAddress | u1[6] | | | MAC address. The first byte corresponds to the MSB of the address. |
| IPAddress | u1[16] | | All elements set to 0 | IP address. For future upgradability, this field can contain a 128-bit IPv6 address. In the current firmware version, the first 12 bytes are always set to 0, and the last 4 bytes contain the IPv4 IP address, or are set to zero if the IP address is not known or not applicable. |
| Gateway | u1[16] | | All elements set to 0 | Gateway address. For future upgradability, this field can contain a 128-bit IPv6 address. In the current firmware version, the first 12 bytes are always set to 0, and the last 4 bytes contain the IPv4 IP address, or are set to zero if the gateway address is not known or not applicable. |
| Netmask | u1 | | 255 | Number of bits used to identify the network (CIDR notation). |
| Reserved | u1[3] | | | Reserved for future use, to be ignored by decoding software. |
| HostName | c1[32] | | | Receiver hostname on the Ethernet interface, or empty if not known. |
| Padding | u1[...] | | | Padding bytes, see 4.1.5 |

Rev 1

| | |
|--------------|-------------------------|
| DynDNSStatus | Number: 4105 |
| | "OnChange" interval: 1s |

This block contains dynamic DNS (DynDNS) status information.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|--------|---------|-----------------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Status | u1 | | | DynDNS status: 0: DynDNS disabled 1: Updating IP address 2: IP address updated at the DynDNS server. DynDNS is ready to use. 254: Error detected, the error code is provided in the next field. |
| ErrorCode | u1 | | | DynDNS error code: 0: No error 1: Unspecified error 2: Abusive update 3: User name and password mismatch 4: Not a credited user 5: Hostname is not a fully-qualified domain name 6: Hostname does not exist in this user account 7: Hostname blocked for update abuse 8: Bad agent 9: DNS error 10: DynDNS server problem or maintenance 11: DynDNS server not reachable |
| IPAddress | u1[16] | | All elements set to 0 | IP address that has been registered at the DynDNS server. For future upgradability, this field can contain a 128-bit IPv6 address. In the current firmware version, the first 12 bytes are always set to 0, and the last 4 bytes contain the IPv4 IP address, or are set to zero if the IP address is not known or not applicable (e.g. because registration failed). |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

Rev 1

| | | |
|------------|----------------------|------|
| QualityInd | Number: | 4082 |
| | "OnChange" interval: | 1s |

The `QualityInd` block contains quality indicators for the main functions of the receiver. Each quality indicator is a value from 0 to 10, 0 corresponding to poor quality and 10 to very high quality.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of quality indicators contained in this block |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| Indicators | u2[N] | | | <p>N successive quality indicators, coded as follows:</p> <p>Bits 0-7: Quality indicator type:</p> <ul style="list-style-type: none"> 0: Overall quality 1: GNSS signals from main antenna 2: GNSS signals from aux1 antenna 11: RF power level from the main antenna 12: RF power level from the aux1 antenna 21: CPU headroom 25: OCXO stability (only available on PolaRx5S receivers) 30: Base station measurements. This indicator is only available in RTK mode. A low value could for example hint at severe multipath or interference at the base station, or also at ionospheric scintillation. 31: RTK post-processing. This indicator is only available when the position mode is not RTK. It indicates the likelihood of getting a cm-accurate RTK position when post-processing the current data. <p>Bits 8-11: Value of this quality indicator (from 0 for low quality to 10 for high quality, or 15 if unknown)</p> <p>Bits 12-15: Reserved for future use, to be ignored by decoding software.</p> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|------------|---|
| DiskStatus | Number: 4059 "OnChange" interval: 1s |
|------------|---|

This block reports the size and usage of the disks mounted on the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of <code>DiskData</code> sub-blocks this block contains. |
| SBLength | u1 | 1 byte | | Length of one <code>DiskData</code> sub-blocks in bytes. |
| Reserved | u1[4] | | | Reserved for future use |
| <i>DiskData</i> | ... | ... | | <i>A succession of N <code>DiskData</code> sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

DiskData sub-block definition:

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------------|--------|---------|---------------------------|--|
| DiskID | u1 | | | ID of the disk, starting at 1 for the internal SD Memory Card. |
| Status | u1 | | | Bit field: Bit 0: DISK_MOUNTED: bit set when the disk is mounted. Bit 1: DISK_FULL: bit set when the disk is full. A disk is full when it is filled to 95% of its total capacity. Bit 2: DISK_ACTIVITY: bit set for one second each time data is written to the disk. If the logging rate is larger than 1 Hz, set continuously. Bit 3: LOGGING_ENABLED: bit set when at least one file is open on the disk, regardless of the logging rate. Bit 4: MOUNTING: bit set when disk is being mounted. Bit 5: FORMATTING: bit set when disk is being formatted. Bits 6-7: Reserved |
| DiskUsageMSB | u2 | | 65535 ⁽⁷⁾ | 16 MSB of the total disk usage. The disk usage in bytes is given by $\text{DiskUsageMSB} \times 4294967296 + \text{DiskUsageLSB}$. |
| DiskUsageLSB | u4 | | 4294967295 ⁽⁷⁾ | 32 LSB of the total disk usage. The disk usage in bytes is given by $\text{DiskUsageMSB} \times 4294967296 + \text{DiskUsageLSB}$. |
| DiskSize | u4 | 1 Mbyte | 0 | Total size of the disk, in megabytes. |
| CreateDeleteCount | u1 | | | Counter incremented by one each time a file or a folder is created or deleted on this disk. This counter starts at zero at receiver start-up and restarts at zero after having reached 255. |
| Error | u1 | | 255 | Disk error: 0: No error 1: Disk partition is too large 2: Disk does not have any partition 3: File system check and recovery failed 4: Disk in use over USB 254: Disk mount failed due to unknown error |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

⁽⁷⁾ The disk usage is invalid if both DiskUsageMSB is 65535 and DiskUsageLSB is 4294967295.

| | |
|----------|-------------------------|
| RFStatus | Number: 4092 |
| | "OnChange" interval: 1s |

The `RFStatus` block provides information on the radio-frequency (RF) bands where interferences have been detected and/or notch filters have been applied.

| Parameter | Type | Units | Do-Not-Use | Description |
|---------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of RF bands for which data is provided in this SBF block, i.e. number of <code>RFBand</code> sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one sub-block |
| Flags | u1 | | | Bit field: Bit 0: Set when a spoofing suspicion is determined. Bits 1-7: Reserved |
| Reserved | u1[3] | | | Reserved for future use, to be ignored by decoding software. |
| <i>RFBand</i> | ... | ... | | <i>A succession of N <code>RFBand</code> sub-blocks, see definition below</i> |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

`RFBand` sub-block definition:

| Parameter | Type | Units | Description |
|-----------|-------|-------|--|
| Frequency | u4 | 1 Hz | Center frequency of the RF band addressed by this sub-block. |
| Bandwidth | u2 | 1 kHz | Bandwidth of the RF band. |
| Info | u1 | | Info on this RF band: Bits 0-3: Mode: 1: This RF band is suppressed by a notch filter set manually with the command setNotchFiltering . 2: The receiver detected interference in this band, and successfully canceled it. 8: The receiver detected interference in this band. No mitigation applied. Bits 4-5: Reserved Bits 6-7: Antenna ID: 0 for main, 1 for <i>Aux1</i> and 2 for <i>Aux2</i> |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|------------|---|
| P2PPStatus | Number: 4238 "OnChange" interval: 1s |
|------------|---|

This block reports the status of the active P2PP (Point-to-Point Protocol) sessions. See the **setPointToPoint** command for details.

| Parameter | Type | Units | Do-Not-Use | Description |
|-------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u1 | | | Number of active P2PP sessions for which status is provided in this block, i.e. number of P2PPSession sub-blocks. |
| SBLength | u1 | 1 byte | | Length of one P2PPSession sub-block |
| P2PPSession | ... | ... | | A succession of N P2PPSession sub-blocks, see definition below |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

P2PPSession sub-block definition:

| Parameter | Type | Units | Description |
|-----------|-------|-------|--|
| SessionID | u1 | | Index of the P2PP session (1 for P2PP1, 2 for P2PP2, etc) for which status is provided in this sub-block. |
| Port | u1 | | Index for the COM port the P2PP session is configured on (1 for COM1, 2 for COM2, etc). |
| Status | u1 | | Bit field: Bit 0: Mode: Bit set if the P2PP session is in Server mode, and unset if it is in Client mode (future functionality). Bits 1-7: P2PP status: 0: Initializing 1: Waiting for Connection 2: Connected 3: Disconnecting 4: Error, see ErrorCode field below |
| ErrorCode | u1 | | P2PP error: 1: No error 2: Configuration 3: Port Acquisition 4: Port Lock 5: Start Daemon 6: Server Authentication 7: Client Authentication 8: Timeout on Activity 9: Timeout on Negotiation 10: Link Negotiation 255: Unspecified |
| Padding | u1[.] | | Padding bytes, see 4.1.5 |

| | |
|--------------|---|
| CosmosStatus | Number: 4243 "OnChange" interval: 1s |
|--------------|---|

The `CosmosStatus` block provides information on the status of the Cosmos receiver service.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Status | u1 | | | The status of Cosmos receiver service: 0: Disabled 1: Running |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.2.16 Miscellaneous Blocks

| | |
|---------------|--|
| ReceiverSetup | Number: 5902 "OnChange" interval: Block generated each time a user-command is entered to change one or more values in the block (e.g. when entering the setMarkerParameters command) |
|---------------|--|

The `ReceiverSetup` block contains parameters related to the receiver and its installation. When generating RINEX files, this block defines the RINEX file name and the contents of the header.

For all fields containing a string, if the length of the string is lower than the size of the corresponding field, the unused bytes are set to zero.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------------------|-------------|---------|--------------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Reserved | u1[2] | | | 2 bytes reserved for future use, to be ignored by decoding software |
| MarkerName | c1[60] | | | Marker name (set with setMarkerParameters). |
| MarkerNumber | c1[20] | | | Marker number (set with setMarkerParameters). |
| Observer | c1[20] | | | Observer name (set with setObserverParameters). |
| Agency | c1[40] | | | Observer agency (set with setObserverParameters). |
| RxSerialNumber | c1[20] | | | Receiver serial number. |
| RxName | c1[20] | | | Receiver GNSS engine name. |
| RxVersion | c1[20] | | | Receiver firmware version. |
| AntSerialNbr | c1[20] | | | Serial number of the main antenna (set with setAntennaOffset). |
| AntType | c1[20] | | | Type of the main antenna (set with setAntennaOffset). |
| deltaH | f4 | 1 m | | δH offset of the main antenna (set with setAntennaOffset). |
| deltaE | f4 | 1 m | | δE offset of the main antenna (set with setAntennaOffset). |
| deltaN | f4 | 1 m | | δN offset of the main antenna (set with setAntennaOffset). |
| Rev 1 MarkerType | c1[20] | | | Marker type (set with the setMarkerParameters command). |
| Rev 2 GNSSEFWVersion | c1[40] | | | Version the firmware installed on the receiver. |
| Rev 3 ProductName | c1[40] | | | Product name. |
| Rev 4 | Latitude | f8 | $-2 \cdot 10^{10}$ | Latitude of the reference position, from $-\pi/2$ to $+\pi/2$, positive North of Equator. Use the setPVTMode command to set the reference position. |
| | Longitude | f8 | $-2 \cdot 10^{10}$ | Longitude of the reference position, from $-\pi$ to $+\pi$, positive East of Greenwich. Use the setPVTMode command to set the reference position. |
| | Height | f4 | $-2 \cdot 10^{10}$ | Ellipsoidal height of the reference position (with respect to WGS84 ellipsoid). Use the setPVTMode command to set the reference position. |
| | StationCode | c1[10] | | Station code (set with setMarkerParameters). This field can for example contains the four-letter IGS station code assigned to the receiver. |
| | MonumentIdx | u1 | | Monument index (set with setMarkerParameters). This index is used to identify the monument when there are multiple monuments at the same station. |
| | ReceiverIdx | u1 | | Receiver index (set with setMarkerParameters). This index is used to identify the receiver when there are multiple receivers at the same monument. |
| | CountryCode | c1[3] | | ISO 3-character country code (set with the setMarkerParameters command). |
| | Reserved1 | c1[21] | | Reserved. |
| | Padding | u1[...] | | Padding bytes, see 4.1.5 |

| | |
|-----------|---|
| RxMessage | Number: 4103 |
| | "OnChange" interval: block generated each time a message needs to be sent |

The receiver generates ASCII messages to help users follow the progress of processes such as file logging or FTP push (activity log). These messages are output in the `RxMessage` block, and they can also be retrieved from the command line using the `lif, RxMessages` command.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|--------------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Type | u1 | | 255 | Type of message contained in this block: 1: Asynchronous command reply 2: Message about internal logging 3: Message about FTP push 4: Message about Receiver Status 5: Message from slave GNSS receiver 6: Message about CloudIt |
| Severity | u1 | | 255 | Message severity: 1: Info 2: Warning 3: Error |
| MessageID | u4 | | 0 | A unique value associated to each message. This is a counter starting at 1 for the first message after boot and incrementing at each message. |
| StringLn | u2 | | | Length of <code>Message</code> in characters, including the terminating \0. |
| Reserved2 | u1[2] | | | Reserved, contents to be ignored. |
| Message | c1[StringLn] | | | Receiver message terminated by \0. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | |
|----------|--|
| Commands | Number: 4015 |
| | "OnChange" interval: each time a user command is entered |

Every time the user sends a command, a `Commands` block is output on all ports for which this block is enabled. The `Commands` SBF block is inserted in the SBF stream at the very moment when the command starts to take effect.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Reserved | u1[2] | | | Reserved for future use, to be ignored by decoding software. |
| CmdData | u1[M] | | | Command data, this is the command in the SNMP' format (reserved for maintenance and support only). |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|---------|--|
| Comment | Number: 5936 "OnChange" interval: block generated each time a comment is entered with setObserverComment |
|---------|--|

The `Comment` block contains a comment string as entered with the **setObserverComment** command.

| Parameter | Type | Units | Do-Not-Use | Description |
|-----------|---------------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| CommentLn | u2 | | | Length of the <code>Comment</code> string, in characters. The maximum length of a comment is 120 characters. |
| Comment | c1[CommentLn] | | | Comment string, as entered with the setObserverComment command. Note that this string is not terminated by the "\0" character. |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 |

| | | |
|-----------|----------------------|---|
| BBSamples | Number: | 4040 |
| | "OnChange" interval: | block generated each time new baseband samples are ready (typically at 2Hz) |

The BBSamples block contains a series of successive complex baseband samples. These samples can be used for signal monitoring and for spectral analysis of the GNSS bands supported by the receiver.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|---|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | External time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| N | u2 | | | Number of complex baseband samples contained in this block |
| Info | u1 | | | Bit field as follows: Bits 0-2: Antenna ID: antenna from which the samples have been taken: 0 for main, 1 for <i>Aux1</i> and 2 for <i>Aux2</i> . Bits 3-7: Reserved |
| Reserved | u1[3] | | | Reserved for future use, to be ignored by decoding software. |
| SampleFreq | u4 | 1 Hz | | Sampling frequency in Hz. |
| LOFreq | u4 | 1 Hz | | Frequency of the local oscillator (LO) used to down-convert the RF signal to baseband. |
| Samples | u2[N] | | | N successive complex baseband samples (I+jQ), coded as follows: Bits 0-7: 8-bit Q component, two's complement. Bits 8-15: 8-bit I component, two's complement. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

| | |
|----------------------|---|
| ASCIINumber: | 4075 |
| "OnChange" interval: | block generated each time an ASCII string is received |

The `ASCIIN` block contains a string that has been received on one of the receiver's connection ports.

More specifically, this block is output each time an end-of-line character is received on a communication port configured to receive `ASCIIN` input (with the `setDataInOut` command). The string reported in this block contains all characters received since the previous occurrence of an end-of-line character.

The maximum length of the string is 2000 characters. If there are more than 2000 characters between the occurrence of two successive end-of-line characters, the string is discarded

| Parameter | Type | Units | Do-Not-Use | Description | | |
|--------------|--------------|---------|------------|--|--|----------|
| Sync1 | c1 | | | Block Header, see 4.1.1 | | |
| Sync2 | c1 | | | | | |
| CRC | u2 | | | | | |
| ID | u2 | | | | | |
| Length | u2 | 1 byte | | | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 | | |
| WNc | u2 | 1 week | 65535 | | | |
| CD | u1 | | | Identifier of the connection from which the data has been received | | |
| | | | | Value of Connection type | | Example |
| | | | | CD | | |
| | | | | 0-31 | COMx, with x=CD | 1: COM1 |
| | | | | 32-47 | USBx, with x=CD-32 | 33: USB1 |
| | | | | 48-63 | OTGx, with x=CD-48 | 49: OTG1 |
| | | | | 64-95 | IPx, with x=CD-54 | 64:IP10 |
| | | | | 128-159 | NTRx, with x=CD-128 (NTRIP connections) | 129:NTR1 |
| | | | | 192 | BT01 (Bluetooth connection) | |
| | | | | 193 | BT02 (Bluetooth connection) | |
| | | | | 196 | UHF1 (UHF Modem) | |
| | | | | 200-205 | IPRx, with x=CD-200 (IP receive connections) | 201:IPR1 |
| | | | | 210 | DCL1 (cellular data-call connection) | |
| | | | | 214 | CAN1 (CAN stream interface) | |
| 215-255 | Reserved | | | | | |
| Reserved1 | u1[3] | | | Reserved, contents to be ignored. | | |
| StringLength | u2 | | | Length of ASCIIString in characters. | | |
| SensorModel | c1[20] | | | Not supported, reserved for future use. | | |
| SensorType | c1[20] | | | Not supported, reserved for future use. | | |
| Reserved2 | u1[20] | | | Reserved, contents to be ignored. | | |
| ASCIIString | c1[StringLn] | | | ASCII string. Note that this string is not terminated by the "\0" character. The string does not include the end-of-line character(s) (carrier return and/or line feed). | | |
| Padding | u1[..] | | | Padding bytes, see 4.1.5 | | |

| | |
|--------------------|---|
| EncapsulatedOutput | Number: 4097 "OnChange" interval: output each time an RTCM, CMR, NMEA or ASCIIIDisplay message is output |
|--------------------|---|

The `EncapsulatedOutput` block encapsulates non-SBF output messages into SBF. It is enabled with the `Encapsulate` option of the `setDataInOut` command.

| Parameter | Type | Units | Do-Not-Use | Description |
|------------|-------|---------|------------|--|
| Sync1 | c1 | | | Block Header, see 4.1.1 |
| Sync2 | c1 | | | |
| CRC | u2 | | | |
| ID | u2 | | | |
| Length | u2 | 1 byte | | |
| TOW | u4 | 0.001 s | 4294967295 | Receiver time stamp, see 4.1.3 |
| WNc | u2 | 1 week | 65535 | |
| Mode | u1 | | | Type of the message encapsulated in the <code>Payload</code> field: 0: RTCMv2 1: CMRv2 2: RTCMv3 4: NMEA 5: ASCIIIDisplay |
| Reserved | u1 | | | Reserved for future use, to be ignored by decoding software. |
| N | u2 | | | Length of <code>Payload</code> in bytes. |
| ReservedId | u2 | | | Reserved for future use |
| Payload | u1[N] | | | Encapsulated message. |
| Padding | u1[.] | | | Padding bytes, see 4.1.5 |

4.3 SBF Change Log

| Date | Change Description |
|----------------|---|
| Apr 10, 2020 | Added the <code>NTRIPServerStatus</code> block for the NTRIP server connection status |
| May 16, 2019 | Added the <code>P2PPStatus</code> block to report the status of the Point-to-Point sessions |
| Apr 26, 2019 | Added the <code>QZSA1m</code> block containing QZSS almanac parameters |
| Apr 8, 2019 | Renamed <code>IRNSSRaw</code> to <code>NAVICRaw</code> |
| Mar 12, 2019 | Added the <code>BDSA1m</code> block containing BeiDou almanac parameters |
| Apr 19, 2018 | Added the <code>BDSRawB1C</code> block containing the raw BeiDou B1C navigation symbols |
| Apr 19, 2018 | Added the <code>BDSRawB2a</code> block containing the raw BeiDou B2a navigation symbols |
| Jun 20, 2017 | Added the <code>BDSIon</code> and <code>BDSUtc</code> blocks containing BeiDou ionospheric and UTC offset parameters |
| Jun 15, 2017 | Added the <code>Meas3PP</code> and <code>Meas3MP</code> blocks to supplement the <code>Meas3Ranges</code> block |
| Mar 6, 2017 | Added the <code>Meas3Ranges</code> , <code>Meas3CN0HiRes</code> and <code>Meas3Doppler</code> blocks containing GNSS measurements |
| Mar 1, 2017 | Renamed <code>CMPNav</code> to <code>BDSNav</code> and <code>CMPRaw</code> to <code>BDSRaw</code> |
| Nov 10, 2015 | Added the <code>RxMessage</code> block containing the receiver activity log |
| Feb 04, 2015 | Added the <code>QZSNav</code> block containing decoded QZSS navigation data |
| Jan 13, 2015 | Added the <code>PosProjected</code> block containing plane grid coordinates |
| Dec 12, 2014 | Added the base measurements quality indicator |
| Nov 6, 2014 | Added the <code>RFStatus</code> block for interference mitigation monitoring |
| April 30, 2014 | Added new values for the <code>Datum</code> field |
| April 22, 2014 | Added the <code>DiskStatus</code> block reporting the disk usage and free space of the disks available on the receiver |
| Feb 21, 2014 | Added the <code>NTRIPClientStatus</code> block for the NTRIP client connection status |
| March 14, 2013 | Added the <code>QualityInd</code> block containing various quality indicators |
| Feb 19, 2013 | Added the <code>CMPNav</code> block containing decoded BeiDou navigation data |
| Feb 8, 2013 | Fixed typo: field <code>t_oG</code> of <code>GALGstGps</code> changed to type <code>u4</code> and units of seconds |
| Jan 8, 2013 | Added fields <code>HAccuracy</code> , <code>VAccuracy</code> and <code>Misc</code> to the <code>PVTCartesian</code> and <code>PVTGeodetic</code> blocks |
| Dec 19, 2012 | Added PRNs 139 and 140 to the list of SBAS satellites |
| Oct 25, 2012 | Added <code>RTCMDatum</code> and <code>PosLocal</code> blocks |
| Oct 19, 2012 | Added <code>GEORawL5</code> block |
| Oct 1, 2012 | Added new signal type for L-band and SBAS L5 signals (value 23 and 25) |

| | |
|--------------|---|
| Sep 29, 2012 | Added LBandBeams block and added SVID field to LBandTrackerStatus block |
| Sep 20, 2012 | Added field PPPInfo to the PVTCartesian and PVTGeodetic blocks |
| Feb 28, 2012 | Added GALSARRLM block |
| Feb 6, 2012 | Added QZSS signals and QZSRawL1CA, QZSRawL2C and QZSRawL5 blocks |

Appendix A

Attitude Angles

The attitude of the vehicle is defined as the angles between the vehicle reference frame and the local-level reference frame (defined by the East, North and Up directions). The vehicle reference frame is defined as follows. It is attached to the vehicle and has its X axis pointing along the longitudinal vehicle axis, the Y axis pointing towards the vehicle starboard (right) side and the Z axis pointing down, as illustrated in Figure A-1.

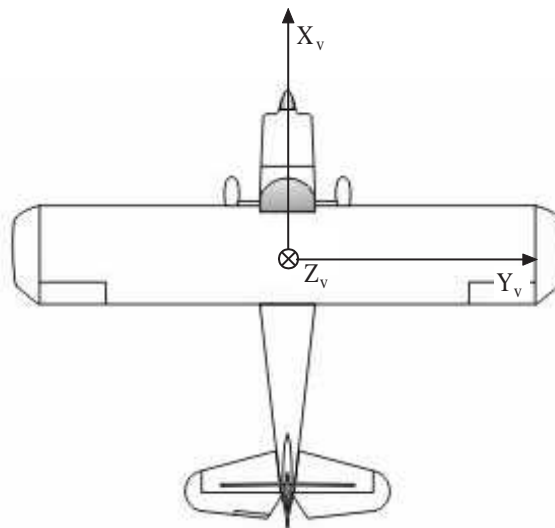


Figure A-1: Vehicle reference frame.

Septentrio receivers express the vehicle attitude in Euler angles using the heading-pitch-roll rotation sequence. More specifically, Euler angles are defined as successive rotations of the vehicle frame (X, Y, Z axes) relative to the local-level East-North-Up reference frame. The rotation sequence is shown in Figure A-2. The heading (ψ) of the vehicle is defined as the right-handed rotation of the vehicle about the Z axis ($0^\circ \leq \psi \leq 360^\circ$). The pitch (θ) of the vehicle is defined as the right-handed rotation about the vehicle Y axis ($-90^\circ \leq \theta \leq 90^\circ$). The roll (ϕ) of the vehicle is defined as the right-handed rotation about the vehicle X axis ($-180^\circ \leq \phi \leq 180^\circ$).

Starting from the situation where X points to the North, Y to the East and Z down, the following successive rotations define the attitude of the vehicle. Note that the order of the rotations is important.

1. Rotate through angle ψ about Z axis;
2. Rotate through angle θ about new Y axis;
3. Rotate through angle ϕ about new X axis;

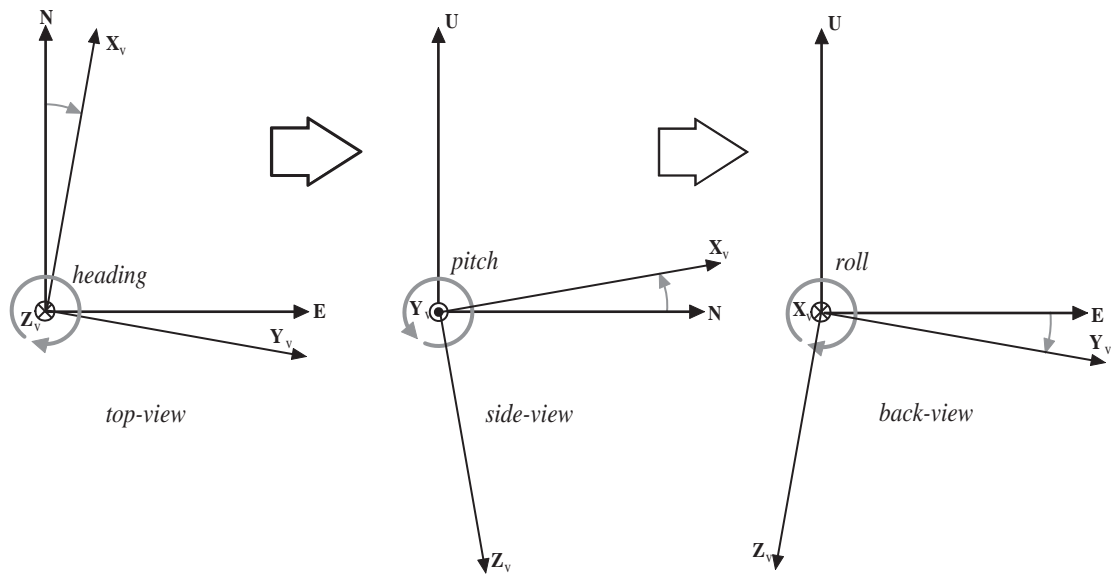


Figure A-2: Euler angle sequence.

Appendix B

List of SBF Blocks

The following table provides the list of the SBF block names and numbers available on AsteRx SB3 Pro+ and a short description of the associated contents. The block number is contained in bits 0 to 12 of the block ID field (see section 4.1.1).

The "Flex Rate" column indicates whether a given block can be output at a user-defined rate and the "esoc" column whether it can be used as an argument of the **exeSBFOnce** command (see also section 4.1.8). The "Time stamp" column indicates which type of time is encoded in the block time stamp (see section 4.1.3 for details).

| Block name | Block No | Content description | Flex Rate | esoc | Time Stamp |
|-------------------------------|----------|--|-----------|------|------------|
| Measurement Blocks | | | | | |
| MeasEpoch | 4027 | Measurement set of one epoch | • | • | R |
| MeasExtra | 4000 | Additional info such as observable variance | • | • | R |
| Meas3Ranges | 4109 | Code, phase and CN0 measurements | • | • | R |
| Meas3CN0HiRes | 4110 | Extension of Meas3Ranges containing fractional C/N0 values | • | • | R |
| Meas3Doppler | 4111 | Extension of Meas3Ranges containing Doppler values | • | • | R |
| Meas3PP | 4112 | Extension of Meas3Ranges containing proprietary flags for data post-processing. | • | • | R |
| Meas3MP | 4113 | Extension of Meas3Ranges containing multipath corrections applied by the receiver. | • | • | R |
| EndOfMeas | 5922 | Measurement epoch marker | • | • | R |
| Navigation Page Blocks | | | | | |
| GPSRawCA | 4017 | GPS CA navigation subframe | | | S |
| GPSRawL2C | 4018 | GPS L2C navigation frame | | | S |
| GPSRawL5 | 4019 | GPS L5 navigation frame | | | S |
| GLORawCA | 4026 | GLONASS CA navigation string | | | S |
| GALRawFNAV | 4022 | Galileo F/NAV navigation page | | | S |
| GALRawINAV | 4023 | Galileo I/NAV navigation page | | | S |
| GEORawL1 | 4020 | SBAS L1 navigation message | | | S |
| GEORawL5 | 4021 | SBAS L5 navigation message | | | S |
| BDSRaw | 4047 | BeiDou navigation page | | | S |
| BDSRawB1C | 4218 | BeiDou B1C navigation frame | | | S |
| BDSRawB2a | 4219 | BeiDou B2a navigation frame | | | S |
| QZSRawL1CA | 4066 | QZSS L1 CA navigation frame | | | S |
| QZSRawL2C | 4067 | QZSS L2C navigation frame | | | S |

| Block name | Block No | Content description | Flex Rate | esoc | Time Stamp |
|--|----------|--|-----------|------|------------|
| QZSRawL5 | 4068 | QZSS L5 navigation frame | | | S |
| NAVICRaw | 4093 | NavIC/IRNSS subframe | | | S |
| GPS Decoded Message Blocks | | | | | |
| GPSNav | 5891 | GPS ephemeris and clock | | • | S |
| GPSAlm | 5892 | Almanac data for a GPS satellite | | • | S |
| GPSIon | 5893 | Ionosphere data from the GPS subframe 5 | | • | S |
| GPSUtc | 5894 | GPS-UTC data from GPS subframe 5 | | • | S |
| GLONASS Decoded Message Blocks | | | | | |
| GLONav | 4004 | GLONASS ephemeris and clock | | • | S |
| GLOAlm | 4005 | Almanac data for a GLONASS satellite | | • | S |
| GLOTime | 4036 | GLO-UTC, GLO-GPS and GLO-UT1 data | | • | S |
| Galileo Decoded Message Blocks | | | | | |
| GALNav | 4002 | Galileo ephemeris, clock, health and BGD | | • | S |
| GALAlm | 4003 | Almanac data for a Galileo satellite | | • | S |
| GALIon | 4030 | NeQuick Ionosphere model parameters | | • | S |
| GALUtc | 4031 | GST-UTC data | | • | S |
| GALGstGps | 4032 | GST-GPS data | | • | S |
| GALSARRLM | 4034 | Search-and-rescue return link message | | | S |
| BeiDou Decoded Message Blocks | | | | | |
| BDSNav | 4081 | BeiDou ephemeris and clock | | • | S |
| BDSAlm | 4119 | Almanac data for a BeiDou satellite | | • | S |
| BDSIon | 4120 | BeiDou Ionospheric delay model parameters | | • | S |
| BDSUtc | 4121 | BDT-UTC data | | • | S |
| QZSS Decoded Message Blocks | | | | | |
| QZSNav | 4095 | QZSS ephemeris and clock | | • | S |
| QZSAlm | 4116 | Almanac data for a QZSS satellite | | • | S |
| SBAS L1 Decoded Message Blocks | | | | | |
| GEOMT00 | 5925 | MT00 : SBAS Don't use for safety applications | | | S |
| GEOPRNMask | 5926 | MT01 : PRN Mask assignments | | | S |
| GEOFastCorr | 5927 | MT02-05/24: Fast Corrections | | | S |
| GEOIntegrity | 5928 | MT06 : Integrity information | | | S |
| GEOFastCorrDegr | 5929 | MT07 : Fast correction degradation factors | | | S |
| GEONav | 5896 | MT09 : SBAS navigation message | | • | S |
| GEODegrFactors | 5930 | MT10 : Degradation factors | | | S |
| GEONetworkTime | 5918 | MT12 : SBAS Network Time/UTC offset parameters | | | S |
| GEOAlm | 5897 | MT17 : SBAS satellite almanac | | • | S |
| GEOIGPMask | 5931 | MT18 : Ionospheric grid point mask | | | S |
| GEOLongTermCorr | 5932 | MT24/25 : Long term satellite error corrections | | | S |
| GEOIonoDelay | 5933 | MT26 : Ionospheric delay corrections | | | S |
| GEOServiceLevel | 5917 | MT27 : SBAS Service Message | | | S |
| GEOClockEphCovMatrix | 5934 | MT28 : Clock-Ephemeris Covariance Matrix | | | S |
| GNSS Position, Velocity and Time Blocks | | | | | |
| PVTCartesian | 4006 | GNSS position, velocity, and time in Cartesian coordinates | • | • | R |
| PVTGeodetic | 4007 | GNSS position, velocity, and time in geodetic coordinates | • | • | R |
| PosCovCartesian | 5905 | Position covariance matrix (X,Y, Z) | • | • | R |

| Block name | Block No | Content description | Flex Rate | esoc | Time Stamp |
|---------------------------------------|----------|--|-----------|------|------------|
| PosCovGeodetic | 5906 | Position covariance matrix (Lat, Lon, Alt) | • | • | R |
| VelCovCartesian | 5907 | Velocity covariance matrix (X, Y, Z) | • | • | R |
| VelCovGeodetic | 5908 | Velocity covariance matrix (North, East, Up) | • | • | R |
| DOP | 4001 | Dilution of precision | • | • | R |
| PosCart | 4044 | Position, variance and baseline in Cartesian coordinates | • | • | R |
| PosLocal | 4052 | Position in a local datum | • | • | R |
| PosProjected | 4094 | Plane grid coordinates | • | • | R |
| BaseVectorCart | 4043 | XYZ relative position and velocity with respect to base(s) | • | • | R |
| BaseVectorGeod | 4028 | ENU relative position and velocity with respect to base(s) | • | • | R |
| PVTSupport | 4076 | Internal parameters for maintenance and support | • | • | R |
| PVTSupportA | 4079 | Internal parameters for maintenance and support | • | • | R |
| EndOfPVT | 5921 | PVT epoch marker | • | • | R |
| GNSS Attitude Blocks | | | | | |
| AttEuler | 5938 | GNSS attitude expressed as Euler angles | • | • | R |
| AttCovEuler | 5939 | Covariance matrix of attitude | • | • | R |
| AuxAntPositions | 5942 | Relative position and velocity estimates of auxiliary antennas | • | • | R |
| EndOfAtt | 5943 | GNSS attitude epoch marker | • | • | R |
| Receiver Time Blocks | | | | | |
| ReceiverTime | 5914 | Current receiver and UTC time | • | • | R |
| xPPSOffset | 5911 | Offset of the xPPS pulse with respect to GNSS time | | | R |
| External Event Blocks | | | | | |
| ExtEvent | 5924 | Time at the instant of an external event | | | E |
| ExtEventPVTCartesian | 4037 | Cartesian position at the instant of an event | | | E |
| ExtEventPVTGeodetic | 4038 | Geodetic position at the instant of an event | | | E |
| ExtEventBaseVectGeod | 4217 | ENU relative position with respect to base(s) at the instant of an event | | | E |
| ExtEventAttEuler | 4237 | GNSS attitude expressed as Euler angles at the instant of an event | | | E |
| Differential Correction Blocks | | | | | |
| DiffCorrIn | 5919 | Incoming RTCM or CMR message | | | R |
| BaseStation | 5949 | Base station coordinates | | | R |
| RTCMDatum | 4049 | Datum information from the RTK service provider | | | R |
| L-Band Demodulator Blocks | | | | | |
| LBandTrackerStatus | 4201 | Status of the L-band signal tracking | • | • | R |
| LBandBeams | 4204 | L-band satellite/beam information | | • | R |
| Status Blocks | | | | | |
| ChannelStatus | 4013 | Status of the tracking for all receiver channels | • | • | R |
| ReceiverStatus | 4014 | Overall status information of the receiver | • | • | R |
| SatVisibility | 4012 | Azimuth/elevation of visible satellites | • | • | R |
| InputLink | 4090 | Statistics on input streams | • | • | R |
| OutputLink | 4091 | Statistics on output streams | • | • | R |
| NTRIPClientStatus | 4053 | NTRIP client connection status | • | • | R |
| NTRIPServerStatus | 4122 | NTRIP server connection status | • | • | R |
| IPStatus | 4058 | IP address, gateway and MAC address of Ethernet interface | | • | R |
| DynDNSStatus | 4105 | DynDNS status | • | • | R |
| QualityInd | 4082 | Quality indicators | • | • | R |
| DiskStatus | 4059 | Internal logging status | • | • | R |

| Block name | Block No | Content description | Flex Rate | esoc | Time Stamp |
|-----------------------------|----------|---|-----------|------|------------|
| RFStatus | 4092 | Radio-frequency interference mitigation status | • | • | R |
| P2PPStatus | 4238 | P2PP client/server status | • | • | R |
| CosmosStatus | 4243 | Cosmos receiver service status | • | • | R |
| Miscellaneous Blocks | | | | | |
| ReceiverSetup | 5902 | General information about the receiver installation | | • | R |
| RxMessage | 4103 | Receiver message | | • | R |
| Commands | 4015 | Commands entered by the user | | • | R |
| Comment | 5936 | Comment entered by the user | | • | R |
| BBSamples | 4040 | Baseband samples | | | E |
| ASCIIIn | 4075 | ASCII input from external sensor | | | R |
| EncapsulatedOutput | 4097 | SBF encapsulation of non-SBF messages | | | R |

Appendix C

List of NMEA Sentences

The following table provides a list of the NMEA messages supported by your receiver. The first column is the message identifier to be used in the **setNMEAOutput** and the **exeNMEAOnce** commands.

For a full description of the NMEA messages, please refer to the NMEA 0183 standard.

| Message Identifier | NMEA For- | Short Description matter | Comment |
|--------------------|-----------|---|--|
| ALM | ALM | GPS Almanac Data | |
| AVR | AVR | Trimble Navigation proprietary \$PTNL, AVR sentence | |
| DTM | DTM | Datum Reference | |
| GBS | GBS | GNSS Satellite Fault Detection | |
| GFA | GFA | GNSS Fix Accuracy and Integrity | |
| GGA | GGA | GPS Fix Data | |
| GGAaux1 | GGA | GPS Fix Data | GGA sentence containing the position of the aux1 antenna |
| GGK | GGK | Trimble Navigation proprietary \$PTNL, GGK sentence | |
| GGQ | GGQ | Leica Real-Time Position with CQ | |
| GLL | GLL | Geographic Position - Latitude/Longitude | |
| GMP | GMP | GNSS Map Projection Fix Data | |
| GNS | GNS | GNSS Fix Data | |
| GRS | GRS | GNSS Range Residuals | |
| GSA | GSA | GNSS DOP and Active Satellites | |
| GST | GST | GNSS Pseudorange Error Statistics | |
| GSV | GSV | GNSS Satellites in View | |
| HDT | HDT | Heading, True | |
| HRP | HRP | Heading, Roll, Pitch | Septentrio proprietary, see section C.1.1 |
| LLK | LLK | Leica Local Position and GDOP | |
| LLQ | LLQ | Leica Local Position and Quality | |
| RBD | RBD | Rover-Base Direction | Septentrio proprietary, see section C.1.2 |
| RBP | RBP | Rover-Base Position | Septentrio proprietary, see section C.1.3 |
| RBV | RBV | Rover-Base Velocity | Septentrio proprietary, see section C.1.4 |

| Message Identifier | NMEA For- | Short Description matter | Comment |
|--------------------|-----------|---|---|
| RMC | RMC | Recommended Minimum Specific GNSS Data | |
| ROT | ROT | Rate of Turn | |
| SNC | SNC | NTRIP Client Status | Septentrio proprietary, see section C.1.5 |
| TFM | TFM | Used Coordinate Transformation Messages | Septentrio proprietary, see section C.1.6 |
| THS | THS | True Heading and Status | |
| TXTbase | TXT | Text Transmission | Text from a base station in RTCM message type 1029. The text identifier is set to 1, and the text message is in the form "nnnn: <base txt>", where nnnn is the base station ID. |
| VTG | VTG | Course Over Ground and Ground Speed | |
| ZDA | ZDA | Time and Date | |

Note: in sentences containing satellite-per-satellite data, data for BeiDou satellites are encoded using System ID 4 (BD) and satellite ID 1-36. Data for NavIC/IRNSS, QZSS and SBAS satellites with a PRN>151 are not encoded in NMEA.

Appendix C.1 Proprietary NMEA Sentences

C.1.1 HRP : Heading, Roll, Pitch

| Field | Description |
|-------------|---|
| \$PSSN,HRP, | Start of sentence |
| hhmmss.ss, | UTC of HRP (HoursMinutesSeconds.DecimalSeconds) |
| xxxxxx, | Date: ddmmyy |
| x.x, | Heading, degrees True |
| x.x, | Roll, degrees |
| x.x, | Pitch, degrees |
| x.x, | Heading standard deviation, degrees |
| x.x, | Roll standard deviation, degrees |
| x.x, | Pitch standard deviation, degrees |
| xx, | Number of satellites used for attitude computation |
| x, | Mode indicator: 0: No attitude available 1: Heading, Pitch with float ambiguities 2: Heading, Pitch with fixed ambiguities 3: Heading, Pitch, Roll with float ambiguities 4: Heading, Pitch, Roll with fixed ambiguities 5: Heading, Pitch from velocity (dead-reckoning) |
| x.x,a | Magnetic variation, degrees (E=East, W=West, see also the setMagneticVariance command) |
| *hh | Checksum delimiter and checksum field |
| <CR><LF> | End of sentence |

C.1.2 RBD : Rover-Base Direction

| Field | Description |
|-------------|---|
| \$PSSN,RBD, | Start of sentence |
| hhmmss.ss, | UTC of RBD (HoursMinutesSeconds.DecimalSeconds) |
| xxxxxx, | Date: ddmmyy |
| x.x, | Azimuth of the base as seen from rover (0 to 360 increasing towards east), degrees True |
| x.x, | Elevation of the base as seen from rover (-90 to 90), degrees |
| xx, | Number of satellites used for baseline computation |
| x, | Quality indicator: 0: Invalid 2: DPGS 4: RTK 5: Float RTK |
| x, | Base motion indicator: 0: Static base 1: Moving base |
| x.x, | Correction Age, seconds |
| C-C, | Rover serial number |
| xxxx | Base station ID |
| *hh | Checksum delimiter and checksum field |
| <CR><LF> | End of sentence |

C.1.3 RBP : Rover-Base Position

| Field | Description |
|-------------|--|
| \$PSSN,RBP, | Start of sentence |
| hhmmss.ss, | UTC of RBP (HoursMinutesSeconds.DecimalSeconds) |
| xxxxxx, | Date: ddmmyy |
| x.x, | North (True) baseline component (positive when base is north of rover), meters |
| x.x, | East baseline component (positive when base is east of rover), meters |
| x.x, | Up baseline component (positive when base is higher than rover), meters |
| xx, | Number of satellites used for baseline computation |
| x, | Quality indicator: 0: Invalid 2: DPGS 4: RTK 5: Float RTK |
| x, | Base motion indicator: 0: Static base 1: Moving base |
| x.x, | Correction Age, seconds |
| C-C, | Rover serial number |
| xxxx | Base station ID |
| *hh | Checksum delimiter and checksum field |
| <CR><LF> | End of sentence |

C.1.4 RBV : Rover-Base Velocity

| Field | Description |
|-------------|---|
| \$PSSN,RBV, | Start of sentence |
| hhmmss.ss, | UTC of RBV (HoursMinutesSeconds.DecimalSeconds) |
| xxxxxx, | Date: ddmmyy |
| x.x, | Rate of change of baseline vector (rover to base), north component, m/s |
| x.x, | Rate of change of baseline vector (rover to base), east component, m/s |
| x.x, | Rate of change of baseline vector (rover to base), up component, m/s |
| xx, | Number of satellites used for baseline computation |
| x, | Quality indicator: 0: Invalid 2: DPGS 4: RTK 5: Float RTK |
| x, | Base motion indicator: 0: Static base 1: Moving base |
| x.x, | Correction Age, seconds |
| c-c, | Rover serial number |
| xxxx | Base station ID |
| *hh | Checksum delimiter and checksum field |
| <CR><LF> | End of sentence |

C.1.5 SNC : NTRIP Client Status

This proprietary sentence is the NMEA equivalent of the `NTRIPClientStatus` SBF block.

| Field | Description |
|-------------|--|
| \$PSSN,SNC, | Start of sentence |
| [| |
| x, | message revision |
| xxxxxxxx, | time of week, milliseconds |
| xxxx, | week number |
| <SNCSUB> | a succession of <code>SNCSUB</code> sub-messages, see definition below |
|] | |
| *hh | Checksum delimiter and checksum field |
| <CR><LF> | End of sentence |

`SNCSUB` definition:

| Field | Description |
|-------|--|
| [| |
| x, | <code>CDIndex</code> field of the <code>NTRIPClientStatus</code> SBF block |
| x, | <code>Status</code> field of the <code>NTRIPClientStatus</code> SBF block |
| x, | <code>ErrorCode</code> field of the <code>NTRIPClientStatus</code> SBF block |
| x | <code>Info</code> field of the <code>NTRIPClientStatus</code> SBF block |
|] | |

Example:

```
$PSSN,SNC,[0,379359000,1840,[1,2,0,0]]*68
```

C.1.6 TFM : Used RTCM Coordinate Transformation Messages

This proprietary sentence indicates which RTCM coordinate transformation messages have been received and used in the position computation.

| Field | Description |
|-------------|--|
| \$PSSN,TFM, | Start of sentence |
| hhmmss.ss, | UTC time (HoursMinutesSeconds.DecimalSeconds) |
| x, | Height indicator, a copy of the Height Indicator field in RTCM message 1021 or 1022. Null if unknown. |
| xxxx, | Message 1021/1022 usage (they are exclusive). Possible field values: 1021: Message type 1021 used; 1022: Message type 1022 used; null: neither 1021 nor 1022 used. |
| xxxx, | Message 1023/1024 usage (they are exclusive). Possible field values: 1023: Message type 1023 used; 1024: Message type 1024 used; null: neither 1023 nor 1024 used. |
| xxxx | Message 1025/1026/1027 usage (they are exclusive). Possible field values: 1025: Message type 1025 used; 1026: Message type 1026 used; 1027: Message type 1027 used; null: neither 1025 nor 1026 nor 1027 used. |
| *hh | Checksum delimiter and checksum field |
| <CR><LF> | End of sentence |

Example:

```
$PSSN,TFM,104751.00,2,1021,1023,1025*5F
```

Appendix D

List of CMR and RTCM Messages

This appendix provides a list of all the CMR and RTCM (v2.x and v3.x) messages supported by the receiver.

Appendix D.1 CMR Messages

| Message Identifier | Short Description |
|--------------------|-------------------------------|
| CMR0 | Observables |
| CMR1 | Reference Station Coordinates |
| CMR2 | Reference Station Description |
| CMR3 | GLONASS Observables |
| CMR0p | CMR+ variant |
| CMR0w | CMR-W variant |

Appendix D.2 RTCM v2.x Messages

| Message Identifier | Short Description |
|--------------------|---|
| RTCM1 | Differential GPS Corrections |
| RTCM3 | GPS Reference Station Parameters |
| RTCM9 | GPS Partial Correction Set |
| RTCM15 | Ionospheric Delay |
| RTCM16 | GPS Special Message |
| RTCM17 | GPS Ephemerides Message |
| RTCM18 | RTK Uncorrected Carrier Phases |
| RTCM19 | RTK Uncorrected Pseudoranges |
| RTCM20 | RTK Carrier Phase Corrections |
| RTCM21 | RTK/Hi-Accuracy Pseudorange Corrections |
| RTCM22 | Extended Reference Station Parameters |
| RTCM23 | Antenne Type Definition Record |
| RTCM24 | Antenna Reference Point (ARP) |
| RTCM31 | Differential GLONASS Corrections |

| Message Identifier | Short Description |
|--------------------|--------------------------------------|
| RTCM32 | GLONASS Reference Station Parameters |
| RTCM34 | GLONASS Partial Correction Set |
| RTCM59 | Proprietary Message |

Appendix D.3 RTCM v3.x Messages

| Message Identifier | Short Description |
|--------------------|--|
| RTCM1001 | L1-Only GPS RTK Observables |
| RTCM1002 | Extended L1-Only GPS RTK Observables |
| RTCM1003 | L1&L2 GPS RTK Observables |
| RTCM1004 | Extended L1&L2 GPS RTK Observables |
| RTCM1005 | Stationary RTK Reference Station ARP |
| RTCM1006 | Stationary RTK Reference Station ARP with Antenna Height |
| RTCM1007 | Antenna Descriptor |
| RTCM1008 | Antenna Descriptor and Serial Number |
| RTCM1009 | L1-Only GLONASS RTK Observables |
| RTCM1010 | Extended L1-Only GLONASS RTK Observables |
| RTCM1011 | L1&L2 GLONASS RTK Observables |
| RTCM1012 | Extended L1&L2 GLONASS RTK Observables |
| RTCM1013 | System Parameters |
| RTCM1015 | Network RTK (MAC), GPS Ionospheric Correction Differences |
| RTCM1016 | Network RTK (MAC), GPS Geometric Correction Differences |
| RTCM1017 | Network RTK (MAC), GPS Combined Geometric and Ionospheric Correction Differences |
| RTCM1019 | GPS Satellite Ephemeris Data |
| RTCM1020 | Glomass Satellite Ephemeris Data |
| RTCM1021 | Helmert-Abridged Molodenski Transformation Parameters |
| RTCM1022 | Molodenski-Badekas Transformation Parameters |
| RTCM1023 | Residuals, Ellipsoidal Grid Representation |
| RTCM1024 | Residuals, Plane Grid Representation |
| RTCM1025 | Projection Parameters, Projection Types other than Lambert Conic Conformal (2 SP) and Oblique Mercator |
| RTCM1026 | Projection Parameters, Projection Type LCC2SP (Lambert Conic Conformal (2 SP)) |
| RTCM1027 | Projection Parameters, Projection Type OM (Oblique Mercator) |
| RTCM1029 | Unicode Text String |
| RTCM1033 | Receiver and Antenna Descriptors |
| RTCM1037 | Network RTK (MAC), GLONASS Ionospheric Correction Differences |
| RTCM1038 | Network RTK (MAC), GLONASS Geometric Correction Differences |
| RTCM1039 | Network RTK (MAC), GLONASS Combined Geometric and Ionospheric Correction Differences |
| RTCM1042 | BDS Satellite Ephemeris Data |
| RTCM1044 | QZSS Satellite Ephemeris Data |
| RTCM1045 | Galileo F/NAV Satellite Ephemeris Data |
| RTCM1046 | Galileo I/NAV Satellite Ephemeris Data |
| RTCM1071 | GPS MSM1, Compact Pseudoranges |
| RTCM1072 | GPS MSM2, Compact PhaseRanges |
| RTCM1073 | GPS MSM3, Compact Pseudoranges and PhaseRanges |

| Message Identifier | Short Description |
|--------------------|--|
| RTCM1074 | GPS MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1075 | GPS MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1076 | GPS MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |
| RTCM1077 | GPS MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1081 | GLONASS MSM1, Compact Pseudoranges |
| RTCM1082 | GLONASS MSM2, Compact PhaseRanges |
| RTCM1083 | GLONASS MSM3, Compact Pseudoranges and PhaseRanges |
| RTCM1084 | GLONASS MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1085 | GLONASS MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1086 | GLONASS MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |
| RTCM1087 | GLONASS MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1091 | Galileo MSM1, Compact Pseudoranges |
| RTCM1092 | Galileo MSM2, Compact PhaseRanges |
| RTCM1093 | Galileo MSM3, Compact Pseudoranges and PhaseRanges |
| RTCM1094 | Galileo MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1095 | Galileo MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1096 | Galileo MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |
| RTCM1097 | Galileo MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1101 | SBAS MSM1, Compact Pseudoranges |
| RTCM1102 | SBAS MSM2, Compact PhaseRanges |
| RTCM1103 | SBAS MSM3, Compact Pseudoranges and PhaseRanges |
| RTCM1104 | SBAS MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1105 | SBAS MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1106 | SBAS MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |
| RTCM1107 | SBAS MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1111 | QZSS MSM1, Compact Pseudoranges |
| RTCM1112 | QZSS MSM2, Compact PhaseRanges |
| RTCM1113 | QZSS MSM3, Compact Pseudoranges and PhaseRanges |
| RTCM1114 | QZSS MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1115 | QZSS MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1116 | QZSS MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |
| RTCM1117 | QZSS MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1121 | BeiDou MSM1, Compact Pseudoranges |
| RTCM1122 | BeiDou MSM2, Compact PhaseRanges |
| RTCM1123 | BeiDou MSM3, Compact Pseudoranges and PhaseRanges |
| RTCM1124 | BeiDou MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1125 | BeiDou MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1126 | BeiDou MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |
| RTCM1127 | BeiDou MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1131 | NavIC/IRNSS MSM1, Compact Pseudoranges |
| RTCM1132 | NavIC/IRNSS MSM2, Compact PhaseRanges |
| RTCM1133 | NavIC/IRNSS MSM3, Compact Pseudoranges and PhaseRanges |
| RTCM1134 | NavIC/IRNSS MSM4, Full Pseudoranges and PhaseRanges plus CNR |
| RTCM1135 | NavIC/IRNSS MSM5, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR |
| RTCM1136 | NavIC/IRNSS MSM6, Full Pseudoranges and PhaseRanges plus CNR (high resolution) |

| Message Identifier | Short Description |
|--------------------|--|
| RTCM1137 | NavIC/IRNSS MSM7, Full Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) |
| RTCM1230 | GLONASS L1&L2 Code-Phase Biases |

Index of Commands

A

AGCMode

setAGCMode, getAGCMode
sam, gam, 100

AntennaInfo

lstAntennaInfo
lai, 65

AntennaLocation

setAntennaLocation, getAntennaLocation
sal, gal, 130

AntennaOffset

setAntennaOffset, getAntennaOffset
sao, gao, 105

AttitudeOffset

setAttitudeOffset, getAttitudeOffset
sto, gto, 131

B

BBSamplingMode

setBBSamplingMode, getBBSamplingMode
sbbs, gbbs, 101

C

ChannelAllocation

setChannelAllocation, getChannelAllocation
sca, gca, 89

CheckInternetAvailability

setCheckInternetAvailability, getCheckInternetAvailability
scia, gcia, 152

ClockSyncThreshold

setClockSyncThreshold, getClockSyncThreshold
scst, gcst, 142

CMRv2Formatting

setCMRv2Formatting, getCMRv2Formatting
sc2f, gc2f, 206

CMRv2Interval

setCMRv2Interval, getCMRv2Interval
sc2i, gc2i, 207

CMRv2Message2

setCMRv2Message2, getCMRv2Message2
sc2m, gc2m, 208

CMRv2Output
 setCMRv2Output, getCMRv2Output
 sc2o, gc2o, 209

CMRv2Usage
 setCMRv2Usage, getCMRv2Usage
 sc2u, gc2u, 210

CN0Mask
 setCN0Mask, getCN0Mask
 scm, gcm, 91

CommandHelp
 lstCommandHelp
 help, 66

COMSettings
 setCOMSettings, getCOMSettings
 scs, gcs, 153

ConfigFile
 lstConfigFile
 lcf, 67

CopyConfigFile
 exeCopyConfigFile, getCopyConfigFile
 eccf, gccf, 68

CosmosConfig
 setCosmosConfig, getCosmosConfig
 scoc, gcoc, 229

CrossDomainWebAccess
 setCrossDomainWebAccess, getCrossDomainWebAccess
 scda, gcda, 154

CurrentUser
 lstCurrentUser
 lcu, 84

D

DaisyChainMode
 setDaisyChainMode, getDaisyChainMode
 sdcm, gdcml, 155

DataInOut
 setDataInOut, getDataInOut
 sdio, gdio, 156

DefaultAccessLevel
 setDefaultAccessLevel, getDefaultAccessLevel
 sdal, gdal, 85

DiffCorrMaxAge
 setDiffCorrMaxAge, getDiffCorrMaxAge
 sdca, gdca, 106

DiffCorrUsage
 setDiffCorrUsage, getDiffCorrUsage
 sdcu, gdcu, 107

DiskFullAction
 setDiskFullAction, getDiskFullAction
 sdfa, gdfa, 211

DiskInfo
 lstDiskInfo

Idi, 212

DynamicDNS

setDynamicDNS, getDynamicDNS

sdds, gdds, 158

E

EchoMessage

exeEchoMessage, getEchoMessage

eeem, gecm, 159

ElevationMask

setElevationMask, getElevationMask

sem, gem, 108

ENHTransfoHorizontal

setENHTransfoHorizontal, getENHTransfoHorizontal

smth, gmth, 138

ENHTransfoVertical

setENHTransfoVertical, getENHTransfoVertical

smtv, gmtv, 139

EthernetMode

setEthernetMode, getEthernetMode

seth, geth, 69

EventParameters

setEventParameters, getEventParameters

sep, gep, 143

F

FileNaming

setFileNaming, getFileNaming

sfn, gfn, 213

FrontendMode

setFrontendMode, getFrontendMode

sfm, gfm, 102

FTPPushRINEX

setFTPPushRINEX, getFTPPushRINEX

sfpr, gfpr, 222

FTPPushSBF

setFTPPushSBF, getFTPPushSBF

sfps, gfps, 223

FTPPushTest

exeFTPPushTest, getFTPPushTest

efpt, gfpt, 224

FTPUpgrade

exeFTPUpgrade, getFTPUpgrade

efup, gfup, 70

G

GeodeticDatum

setGeodeticDatum, getGeodeticDatum

sgd, ggd, 133

GeoidUndulation

setGeoidUndulation, getGeoidUndulation

sgu, ggu, 109

GlobalFileNamingOptions

setGlobalFileNamingOptions, getGlobalFileNamingOptions
sfno, gfno, 215

GNSSAttitude

setGNSSAttitude, getGNSSAttitude
sga, gga, 132

H

HealthMask

setHealthMask, getHealthMask
shm, ghm, 110

HttpsSettings

setHttpsSettings, getHttpsSettings
shs, ghs, 161

I

InternalFile

lstInternalFile
lif, 71

IonosphereModel

setIonosphereModel, getIonosphereModel
sim, gim, 111

IPFiltering

setIPFiltering, getIPFiltering
sipf, gipf, 162

IPPortSettings

setIPPortSettings, getIPPortSettings
sipp, gipp, 163

IPReceiveSettings

setIPReceiveSettings, getIPReceiveSettings
sirs, girs, 164

IPServerSettings

setIPServerSettings, getIPServerSettings
siss, giss, 165

IPSettings

setIPSettings, getIPSettings
sips, gips, 166

L

LBandBeams

lstLBandBeams
llbb, 225
setLBandBeams, getLBandBeams
slbb, glbb, 226

LBandCustomServiceID

setLBandCustomServiceID, getLBandCustomServiceID
slcs, glcs, 227

LBandSelectMode

setLBandSelectMode, getLBandSelectMode
slsm, glsm, 228

LocalCoordOperation

setLocalCoordOperation, getLocalCoordOperation
slco, glco, 140

LocalCoordOperations

IstLocalCoordOperations

llc, 141

LogIn

LogIn

login, 86

LogOut

LogOut

logout, 87

M

MagneticVariance

setMagneticVariance, getMagneticVariance

smv, gmv, 113

ManageDisk

exeManageDisk, getManageDisk

emd, gmd, 216

MarkerParameters

setMarkerParameters, getMarkerParameters

smp, gmp, 149

Meas3MaxRefInterval

setMeas3MaxRefInterval, getMeas3MaxRefInterval

smrf, gmrf, 184

MIBDescription

IstMIBDescription

lmd, 72

MultipathMitigation

setMultipathMitigation, getMultipathMitigation

smm, gmm, 92

N

NetworkRTKConfig

setNetworkRTKConfig, getNetworkRTKConfig

snrc, gnrc, 114

NMEAOnce

exeNMEAOnce, getNMEAOnce

enoc, gnoc, 178

NMEAOutput

setNMEAOutput, getNMEAOutput

sno, gno, 179

NMEAPrecision

setNMEAPrecision, getNMEAPrecision

snp, gnp, 181

NMEATalkerID

setNMEATalkerID, getNMEATalkerID

snti, gnti, 182

NMEAVersion

setNMEAVersion, getNMEAVersion

snv, gnv, 183

NotchFiltering

setNotchFiltering, getNotchFiltering

snf, gnf, 103

NTPServer

- setNTPServer, getNTPServer
 - sntp, gntp, 144
- NtripCasterMountPoints
 - setNtripCasterMountPoints, getNtripCasterMountPoints
 - snmp, gnmp, 171
- NtripCasterMPFormat
 - setNtripCasterMPFormat, getNtripCasterMPFormat
 - smpf, gmpf, 172
- NtripCasterSettings
 - setNtripCasterSettings, getNtripCasterSettings
 - sncs, gnscs, 173
- NtripCasterUsers
 - setNtripCasterUsers, getNtripCasterUsers
 - sncu, gncu, 174
- NtripSettings
 - setNtripSettings, getNtripSettings
 - snts, gnsts, 175
- NTRIPSourceTable
 - IstNTRIPSourceTable
 - Inst, 176
- NtripTlsSettings
 - setNtripTlsSettings, getNtripTlsSettings
 - sntt, gnntt, 177

O

- ObserverComment
 - setObserverComment, getObserverComment
 - soc, goc, 150
- ObserverParameters
 - setObserverParameters, getObserverParameters
 - sop, gop, 151

P

- PeriodicEcho
 - setPeriodicEcho, getPeriodicEcho
 - spe, gpe, 167
- PointToPoint
 - setPointToPoint, getPointToPoint
 - sp2p, gp2p, 169
- PortFirewall
 - setPortFirewall, getPortFirewall
 - spfw, gpfw, 170
- PowerMode
 - exePowerMode, getPowerMode
 - epwm, gpwm, 81
- PPSPParameters
 - setPPSPParameters, getPPSPParameters
 - spps, gpps, 145
- PVTMode
 - setPVTMode, getPVTMode
 - spm, gpm, 115

R

RAIMLevels

setRAIMLevels, getRAIMLevels
srl, grl, 117

ReceiverCapabilities

getReceiverCapabilities
grc, 73

ReceiverDynamics

setReceiverDynamics, getReceiverDynamics
srd, grd, 118

ReceiverInterface

getReceiverInterface
gri, 76

RecordedFile

lstRecordedFile
lrf, 217

REFOUTMode

setREFOUTMode, getREFOUTMode
srom, grom, 146

RegisteredApplications

exeRegisteredApplications, getRegisteredApplications
era, gra, 77

RemoveFile

exeRemoveFile, getRemoveFile
erf, grf, 218

ResetNavFilter

exeResetNavFilter, getResetNavFilter
ernf, grnf, 119

ResetReceiver

exeResetReceiver, getResetReceiver
erst, grst, 78

RINEXLogging

setRINEXLogging, getRINEXLogging
srxl, grxl, 219

RTCMv2Compatibility

setRTCMv2Compatibility, getRTCMv2Compatibility
sr2c, gr2c, 191

RTCMv2Formatting

setRTCMv2Formatting, getRTCMv2Formatting
sr2f, gr2f, 192

RTCMv2Interval

setRTCMv2Interval, getRTCMv2Interval
sr2i, gr2i, 193

RTCMv2IntervalObs

setRTCMv2IntervalObs, getRTCMv2IntervalObs
sr2b, gr2b, 194

RTCMv2Message16

setRTCMv2Message16, getRTCMv2Message16
sr2m, gr2m, 195

RTCMv2Output

setRTCMv2Output, getRTCMv2Output
sr2o, gr2o, 196

RTCMv2Usage
 setRTCMv2Usage, getRTCMv2Usage
 sr2u, gr2u, 197

RTCMv3CRSTransfo
 setRTCMv3CRSTransfo, getRTCMv3CRSTransfo
 sr3t, gr3t, 198

RTCMv3Delay
 setRTCMv3Delay, getRTCMv3Delay
 sr3d, gr3d, 199

RTCMv3Formatting
 setRTCMv3Formatting, getRTCMv3Formatting
 sr3f, gr3f, 200

RTCMv3Interval
 setRTCMv3Interval, getRTCMv3Interval
 sr3i, gr3i, 201

RTCMv3Message1029
 setRTCMv3Message1029, getRTCMv3Message1029
 sr3m, gr3m, 202

RTCMv3Output
 setRTCMv3Output, getRTCMv3Output
 sr3o, gr3o, 203

RTCMv3Usage
 setRTCMv3Usage, getRTCMv3Usage
 sr3u, gr3u, 205

S

SatelliteTracking
 setSatelliteTracking, getSatelliteTracking
 sst, gst, 93

SatelliteUsage
 setSatelliteUsage, getSatelliteUsage
 ssu, gsu, 120

SBASCorrections
 setSBASCorrections, getSBASCorrections
 ssbc, gsbc, 121

SBFGroups
 setSBFGroups, getSBFGroups
 ssgp, gsgp, 185

SBFOnce
 exeSBFOnce, getSBFOnce
 esoc, gsoc, 186

SBFOutput
 setSBFOutput, getSBFOutput
 sso, gso, 188

SignalTracking
 setSignalTracking, getSignalTracking
 snt, gnt, 95

SignalUsage
 setSignalUsage, getSignalUsage
 snu, gnu, 123

SmoothingInterval
 setSmoothingInterval, getSmoothingInterval

ssi, gsi, 96

StaticPosCartesian

setStaticPosCartesian, getStaticPosCartesian

sspc, gspc, 124

StaticPosGeodetic

setStaticPosGeodetic, getStaticPosGeodetic

sspg, gspg, 126

T

TimeSyncSource

setTimeSyncSource, getTimeSyncSource

stss, gtss, 147

TimingSystem

setTimingSystem, getTimingSystem

sts, gts, 148

TrackingLoopParameters

setTrackingLoopParameters, getTrackingLoopParameters

stlp, gtlp, 98

TroposphereModel

setTroposphereModel, getTroposphereModel

stm, gtm, 127

TroposphereParameters

setTroposphereParameters, getTroposphereParameters

stp, gtp, 129

U

UMSDOnConnect

setUMSDOnConnect, getUMSDOnConnect

suoc, guoc, 221

USBInternetAccess

setUSBInternetAccess, getUSBInternetAccess

suia, guia, 80

UserAccessLevel

setUserAccessLevel, getUserAccessLevel

sual, gual, 88

UserDatum

setUserDatum, getUserDatum

sud, gud, 135

UserDatumVel

setUserDatumVel, getUserDatumVel

sudv, gudv, 136

UserEllipsoid

setUserEllipsoid, getUserEllipsoid

sue, gue, 137

W

WakeUpInterval

setWakeUpInterval, getWakeUpInterval

swui, gwui, 82

WBIMitigation

setWBIMitigation, getWBIMitigation

swbi, gwbi, 104

Index of SBF Blocks

ASCIIn, 405
AttCovEuler, 346
AttEuler, 345
AuxAntPositions, 347

BaseStation, 369
BaseVectorCart, 336
BaseVectorGeod, 339
BBSamples, 404
BDSAlm, 287
BDSIon, 288
BDSNav, 285
BDSRaw, 261
BDSRawB1C, 262
BDSRawB2a, 263
BDSUtc, 289

ChannelStatus, 374
Commands, 402
Comment, 403
CosmosStatus, 398

DiffCorrIn, 366
DiskStatus, 394
DOP, 327
DynDNSStatus, 392

EncapsulatedOutput, 406
EndOfAtt, 348
EndOfMeas, 252
EndOfPVT, 344
ExtEvent, 352
ExtEventAttEuler, 364
ExtEventBaseVectGeod, 361
ExtEventPVTCartesian, 353
ExtEventPVTGeodetic, 357

GALAlm, 279
GALGstGps, 283
GALIon, 281
GALNav, 276
GALRawFNAV, 257

GALRawINAV, 258
GALSARRLM, 284
GALUtc, 282
GEOAlm, 301
GEOClockEphCovMatrix, 306
GEODegrFactors, 299
GEOFastCorr, 295
GEOFastCorrDegr, 297
GEOIGPMask, 302
GEOIntegrity, 296
GEOIonoDelay, 304
GEOLongTermCorr, 303
GEOMT00, 293
GEONav, 298
GEONetworkTime, 300
GEOPRNMMask, 294
GEORawL1, 259
GEORawL5, 260
GEOServiceLevel, 305
GLOAlm, 274
GLONav, 273
GLORawCA, 256
GLOTime, 275
GPSAlm, 270
GPSIon, 271
GPSNav, 268
GPSRawCA, 253
GPSRawL2C, 254
GPSRawL5, 255
GPSUtc, 272

InputLink, 382
IPStatus, 391

LBandBeams, 373
LBandTrackerStatus, 371

Meas3CN0HiRes, 248
Meas3Doppler, 249
Meas3MP, 251
Meas3PP, 250
Meas3Ranges, 247
MeasEpoch, 239
MeasExtra, 244

NAVICRaw, 267
NTRIPClientStatus, 388
NTRIPServerStatus, 390

OutputLink, 385

P2PPStatus, 397
PosCart, 328
PosCovCartesian, 315

PosCovGeodetic, 318
PosLocal, 332
PosProjected, 334
PVTCartesian, 307
PVTGeodetic, 311
PVTSupport, 342
PVTSupportA, 343

QualityInd, 393
QZSAlm, 292
QZSNav, 290
QZSRawL1CA, 264
QZSRawL2C, 265
QZSRawL5, 266

ReceiverSetup, 399
ReceiverStatus, 377
ReceiverTime, 349
RFStatus, 396
RTCDatum, 370
RxMessage, 401

SatVisibility, 381

VelCovCartesian, 321
VelCovGeodetic, 324

xPPSOffset, 350